


REALME

Android 11 - realme UI 2


HOW TO ADJUST AUDIO BALANCE




Tap on
Settings

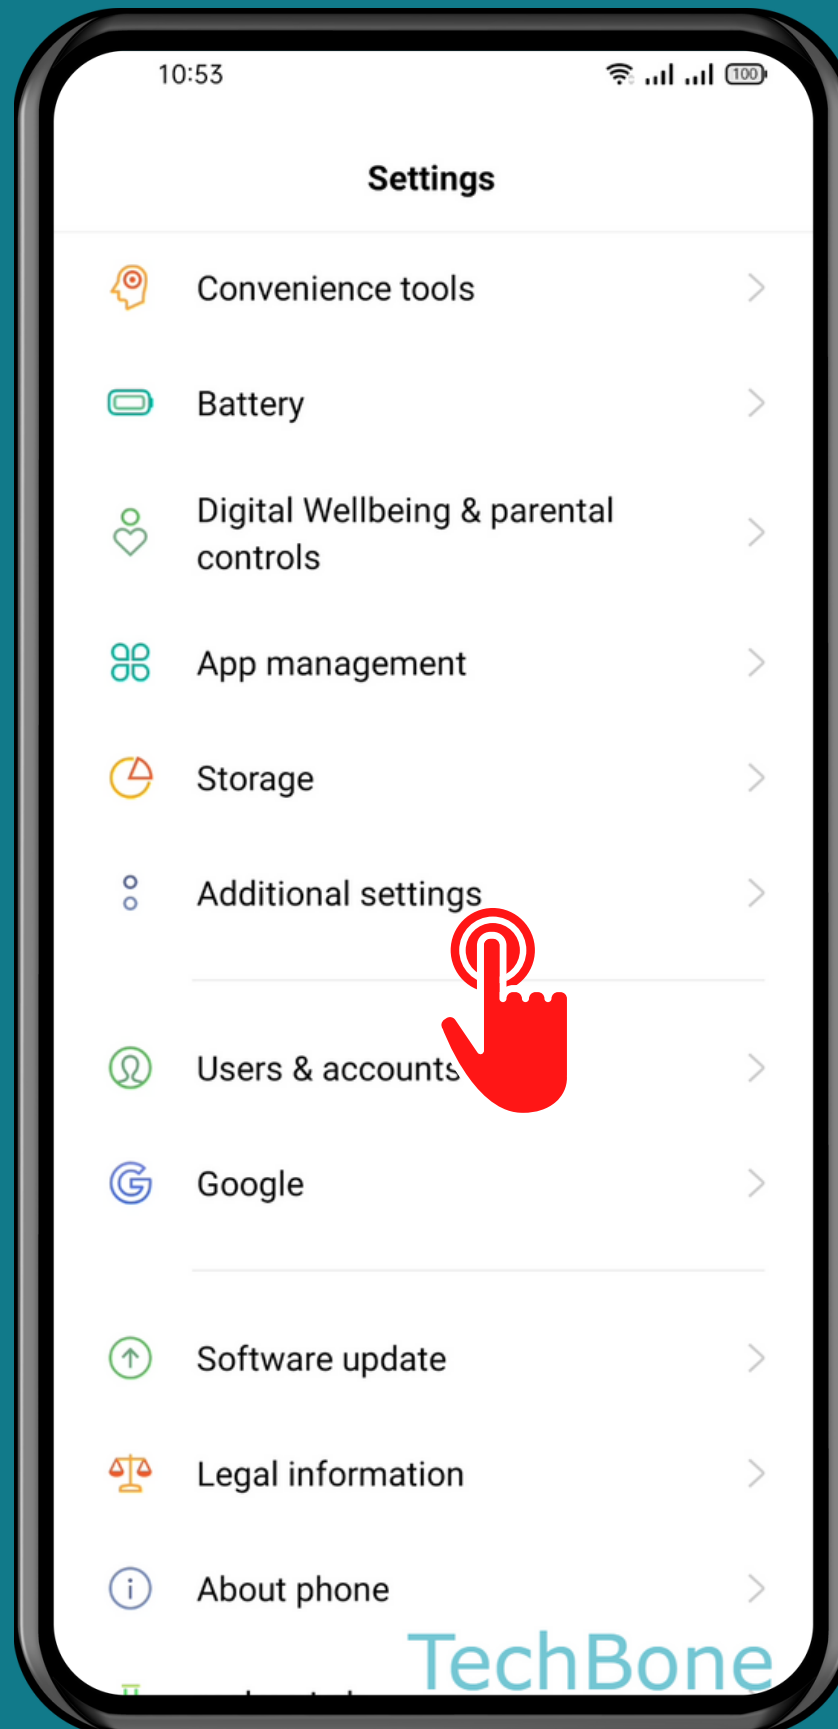

Tap on Additional settings

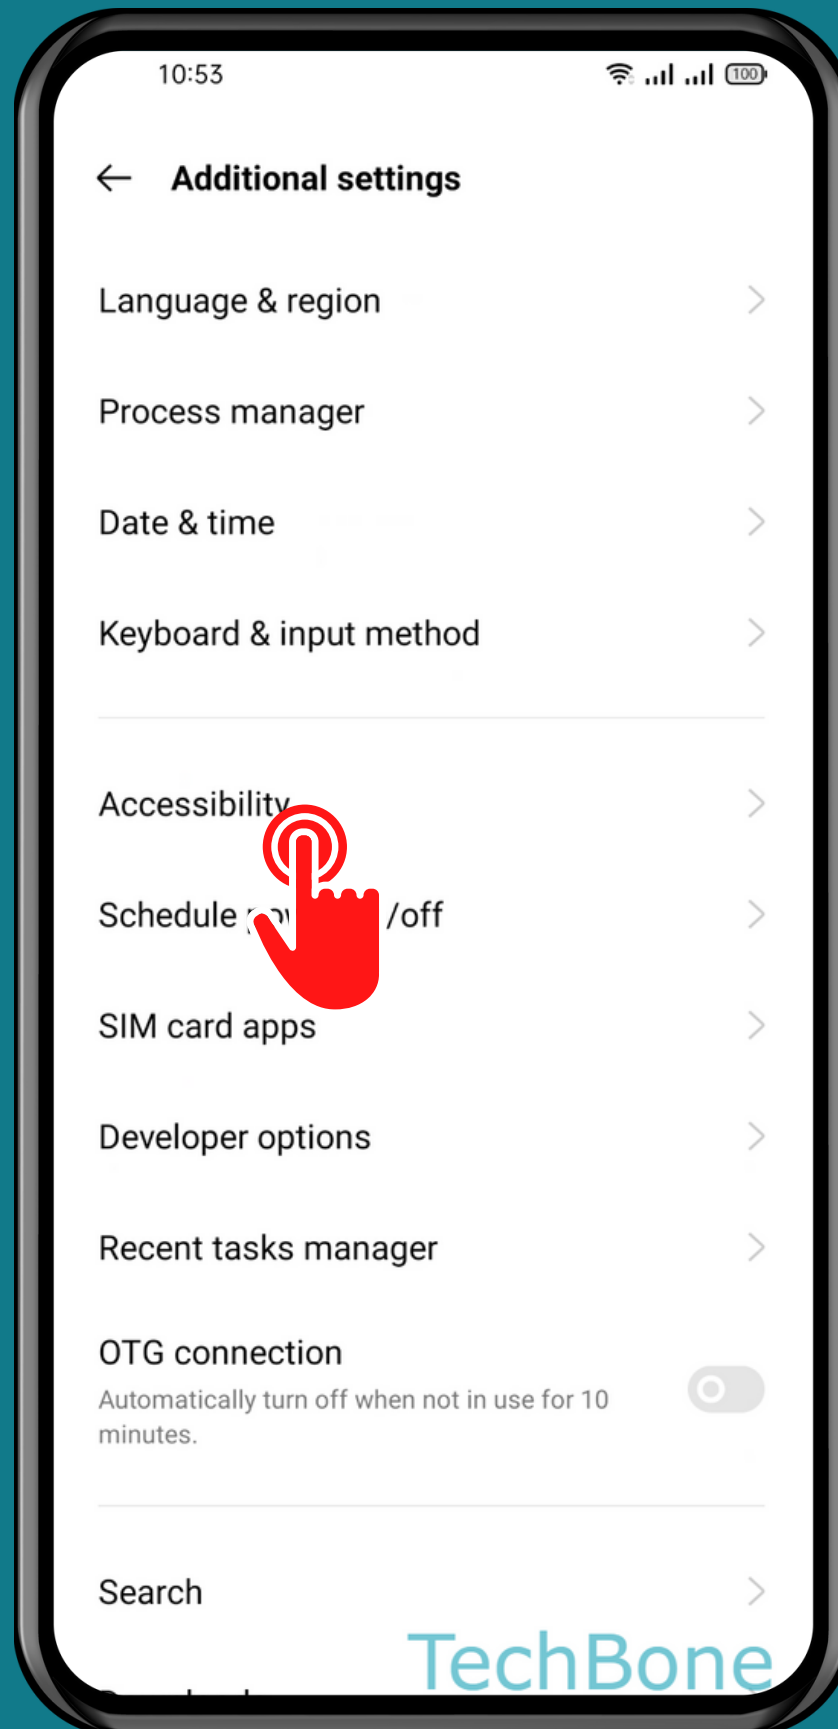

Tap on Accessibility

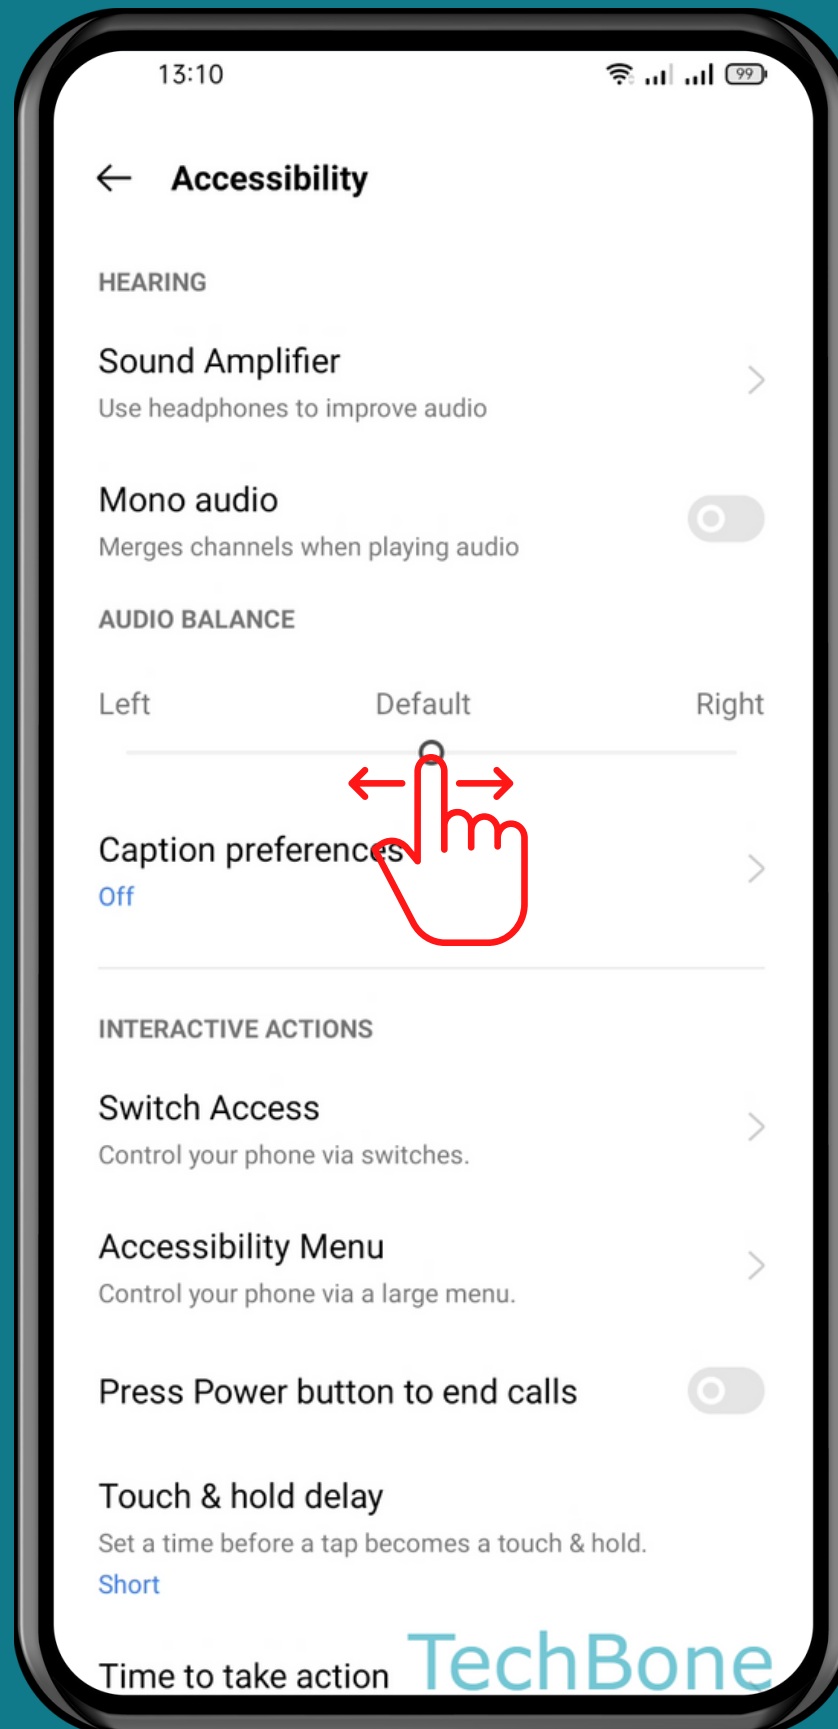

Adjust the Audio balance

Done!