


REALME

Android 11 - realme UI 2


# HOW TO ADJUST SCREEN TIMEOUT




Tap on  
Settings

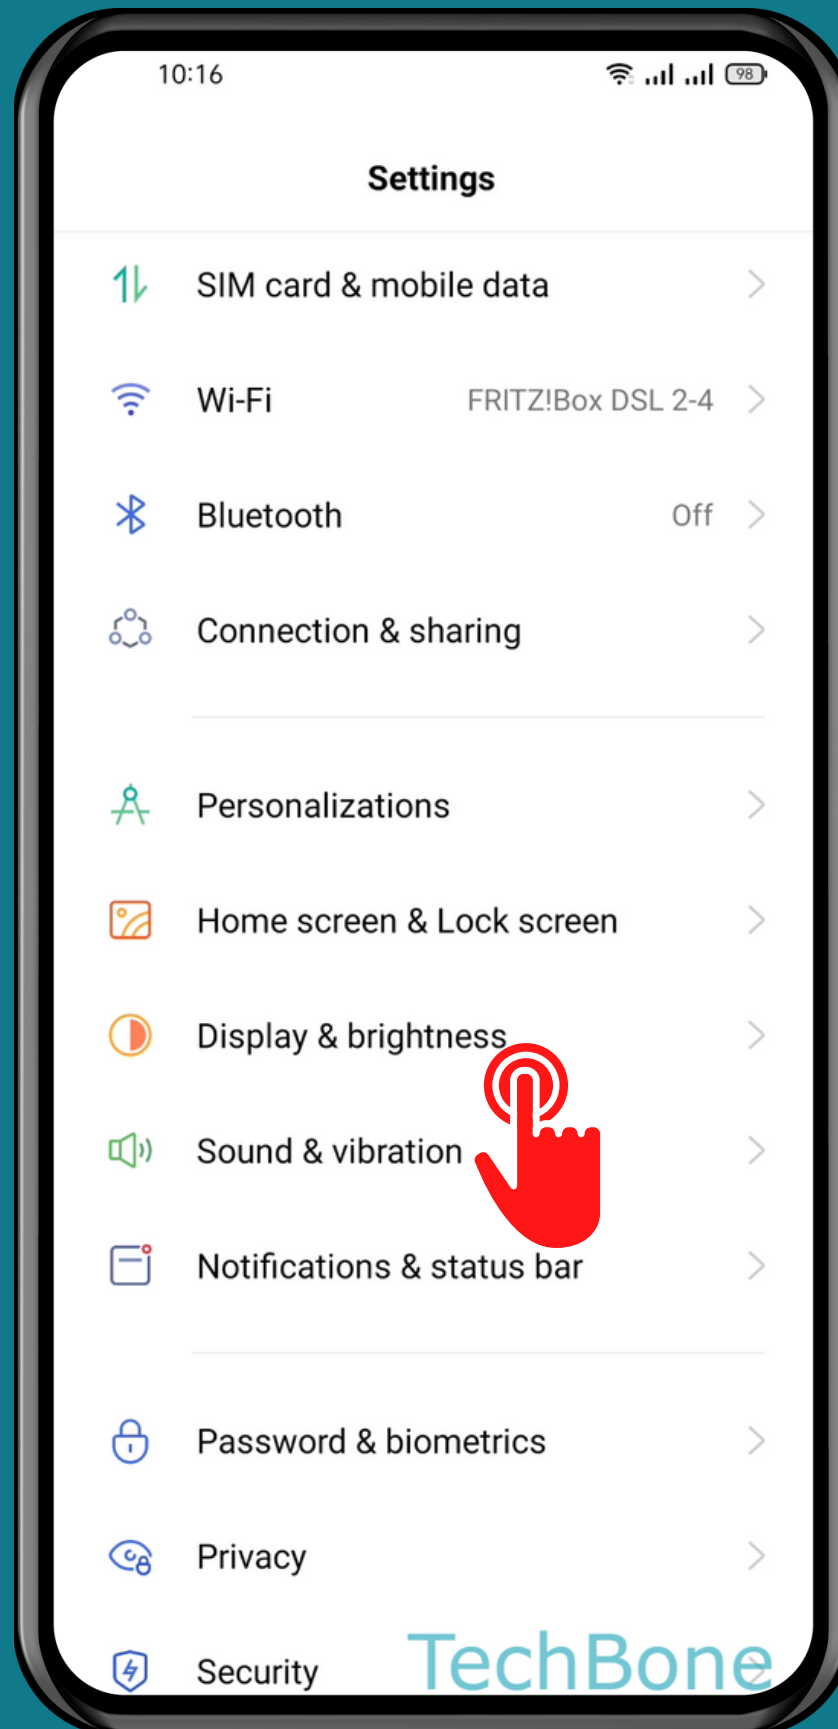

# Tap on Display & brightness

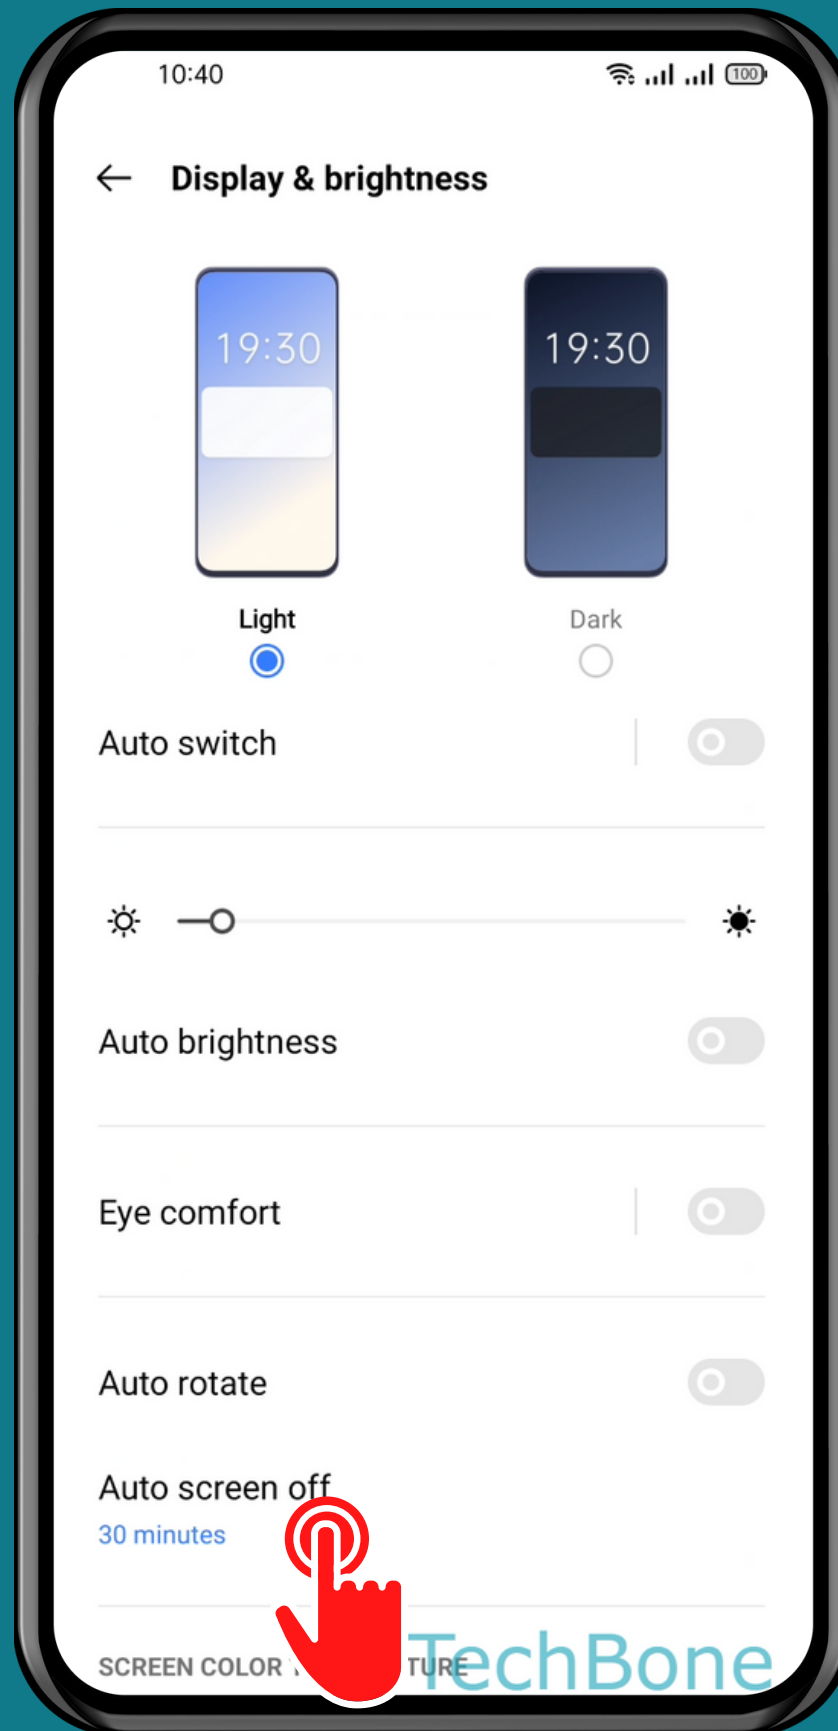

Tap on  
Auto screen off

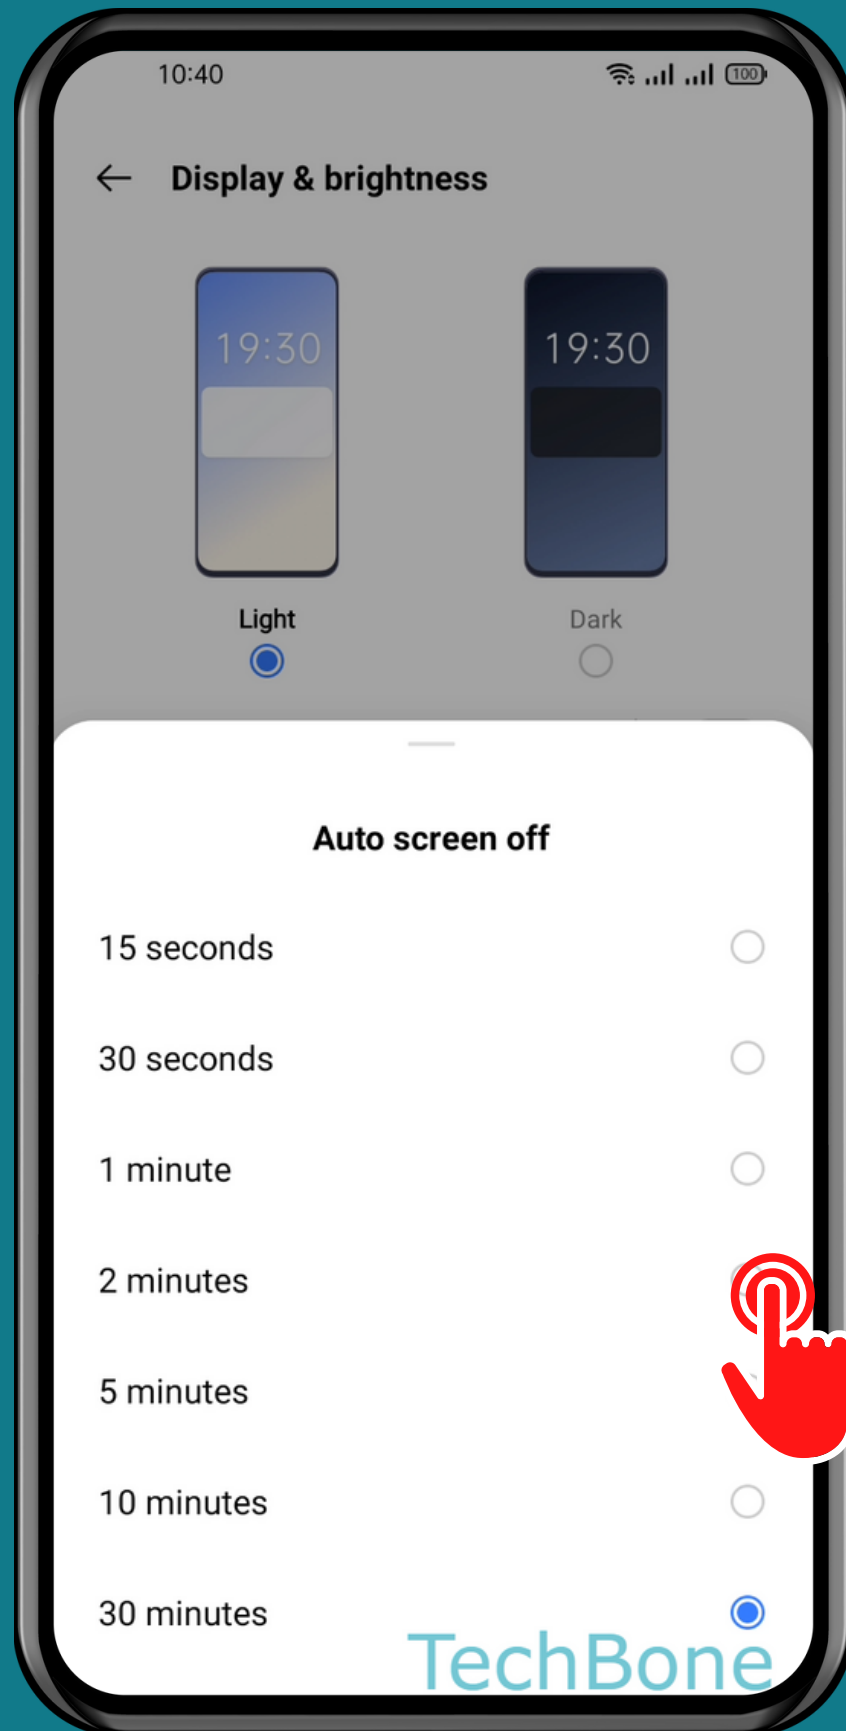

# Choose an Option

Done!