


REALME

Android 11 - realme UI 2


HOW TO ALLOW/DENY REPEATED CALLS (DO NOT DISTURB)




Tap on
Settings

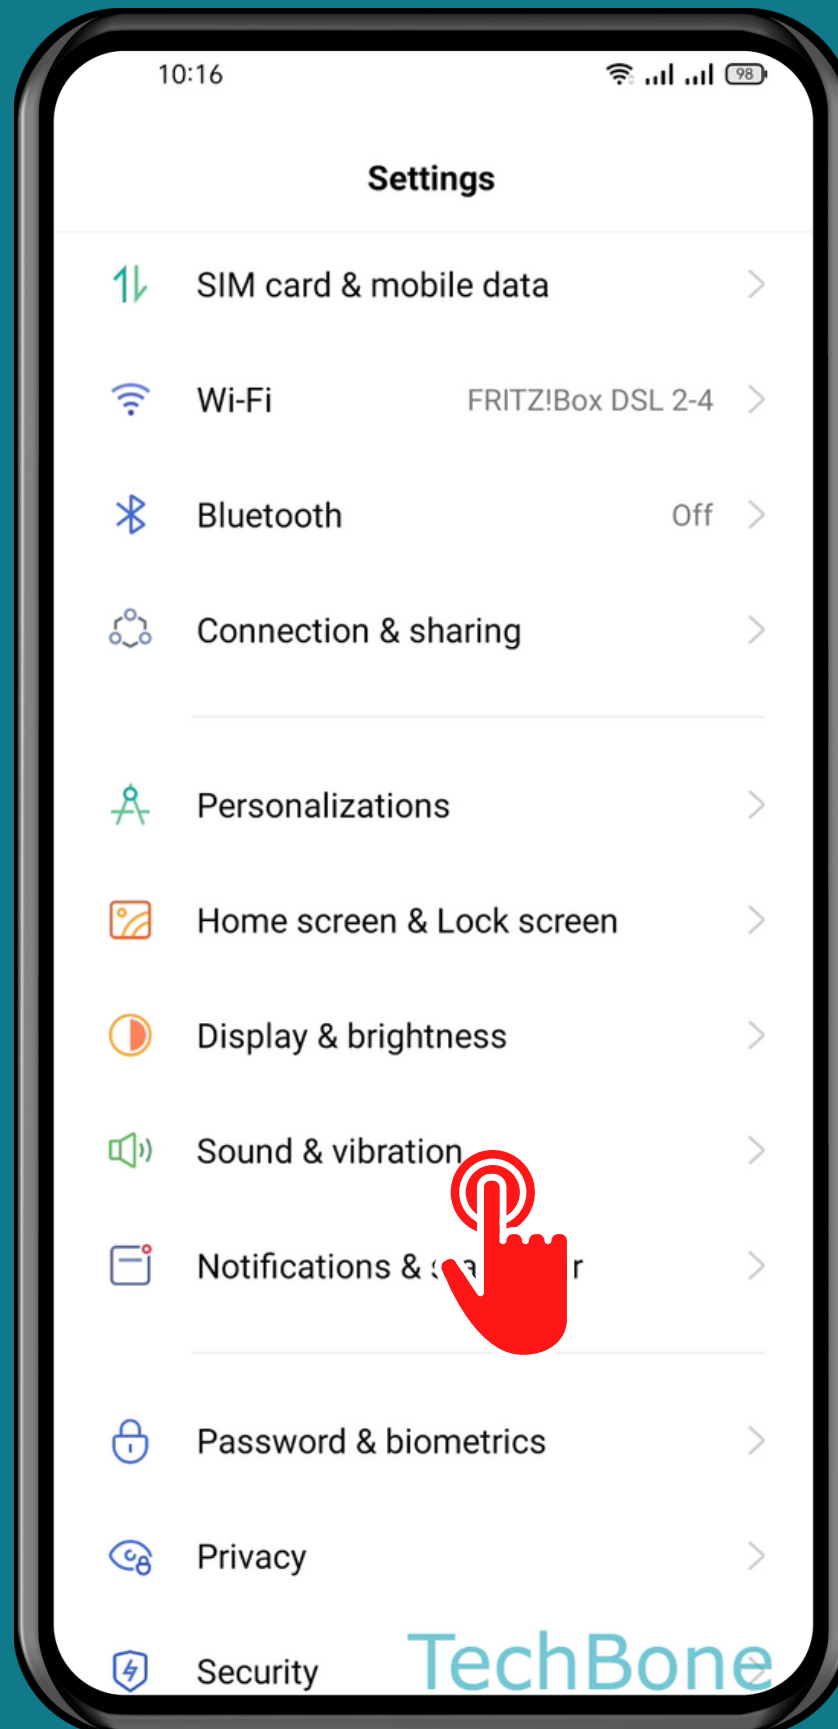

Tap on Sound & vibration

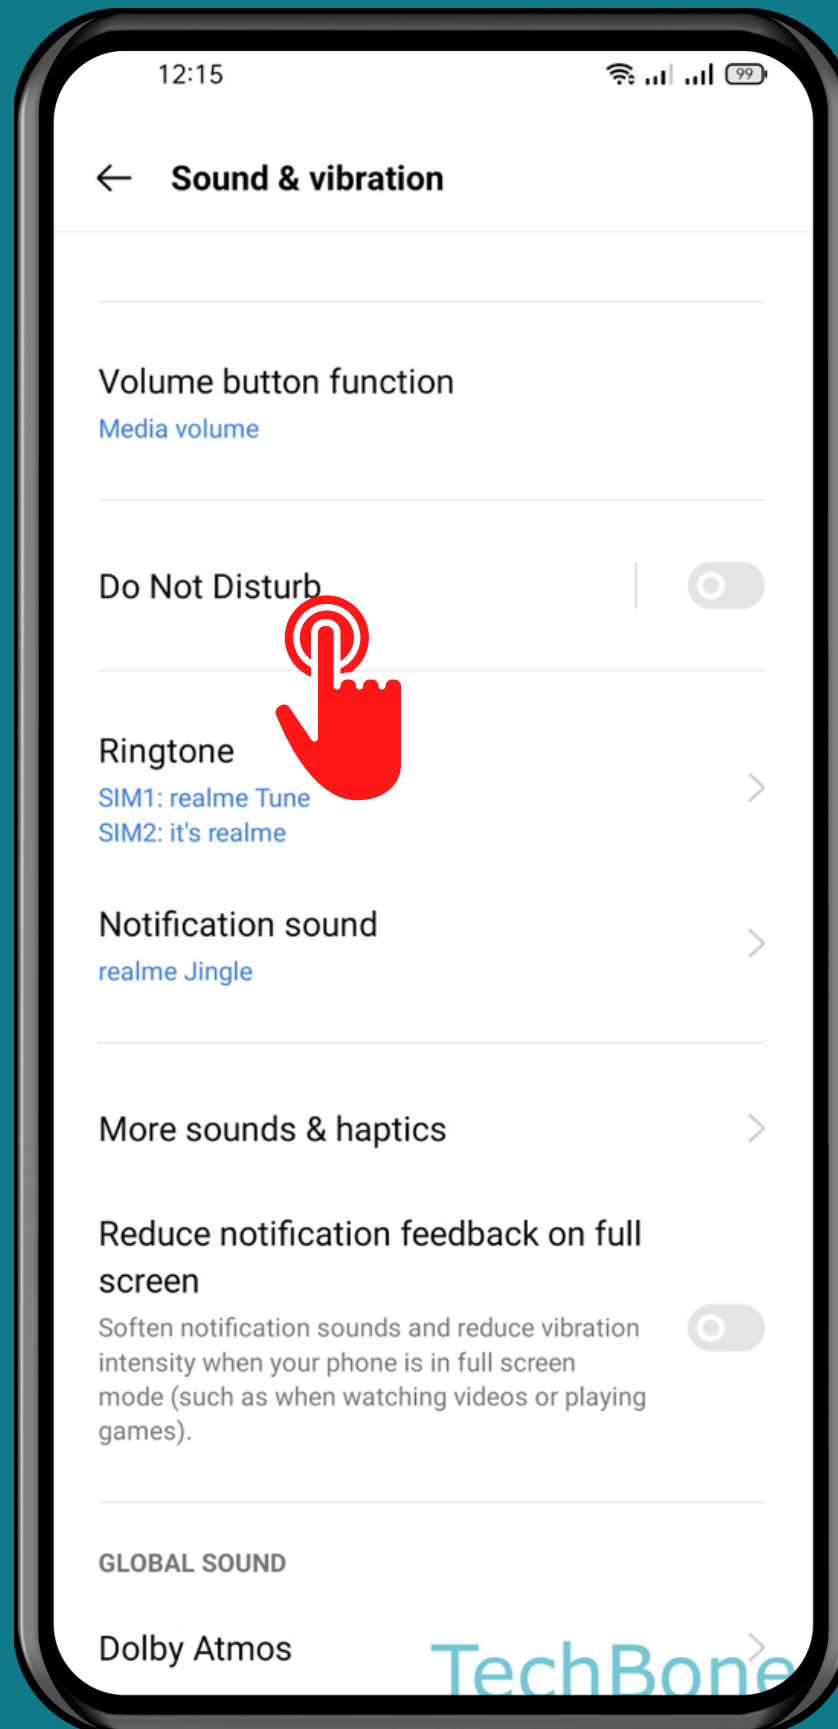

Tap on
Do Not Disturb

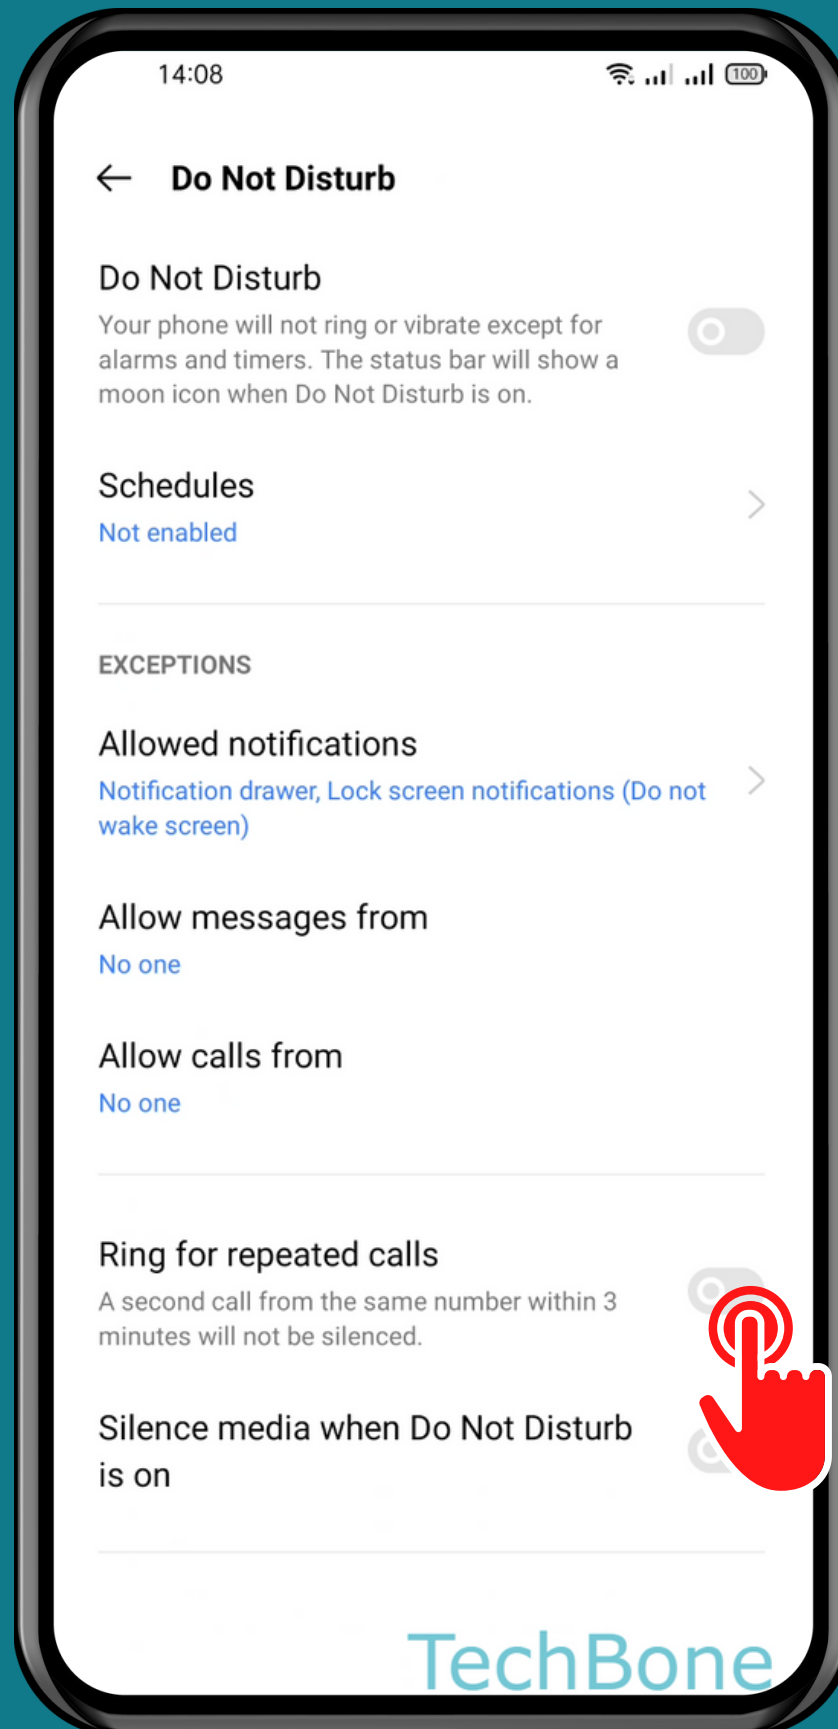

Turn On/Off Ring for repeated calls

Done!