


REALME

Android 11 - realme UI 2


# HOW TO TURN OFF PERSONAL HOTSPOT AUTOMATICALLY




Tap on  
Settings

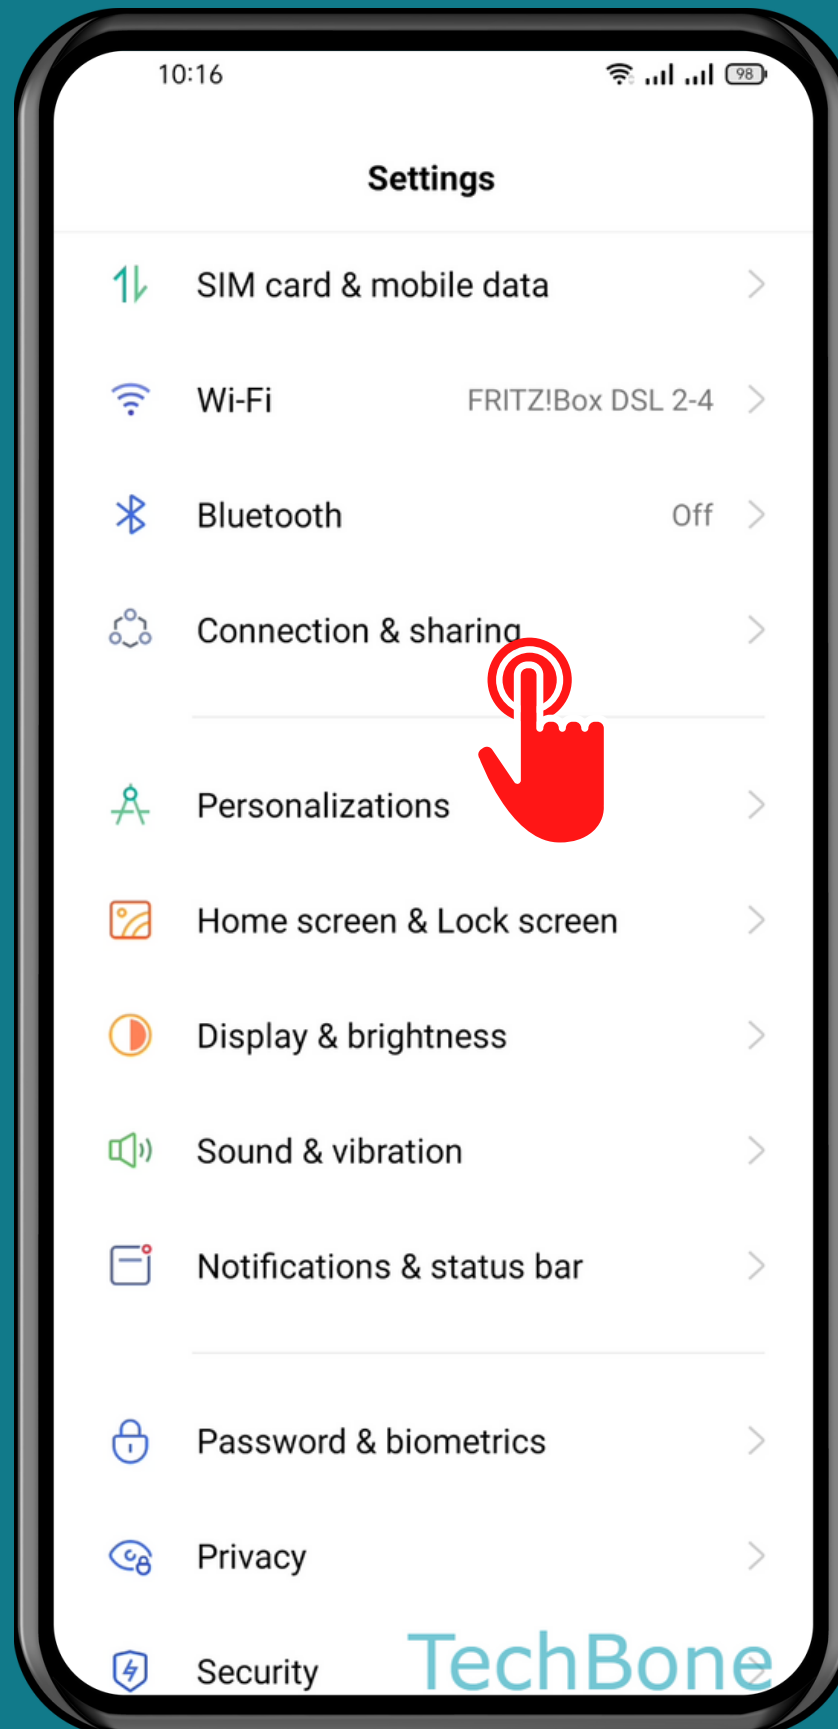

# Tap on Connection & sharing

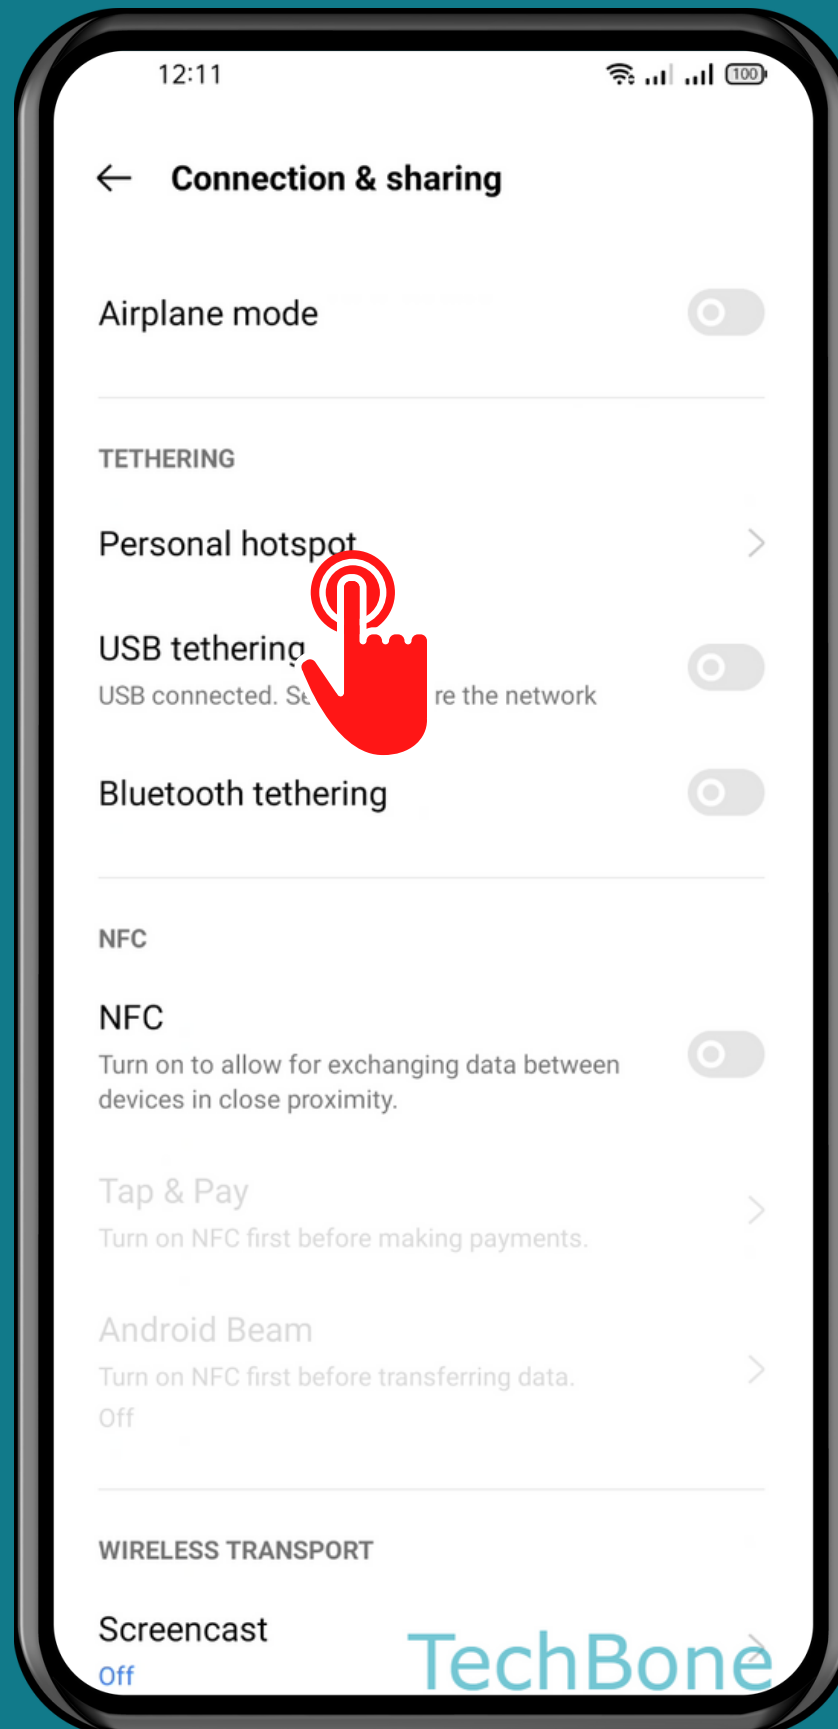

# Tap on Personal hotspot

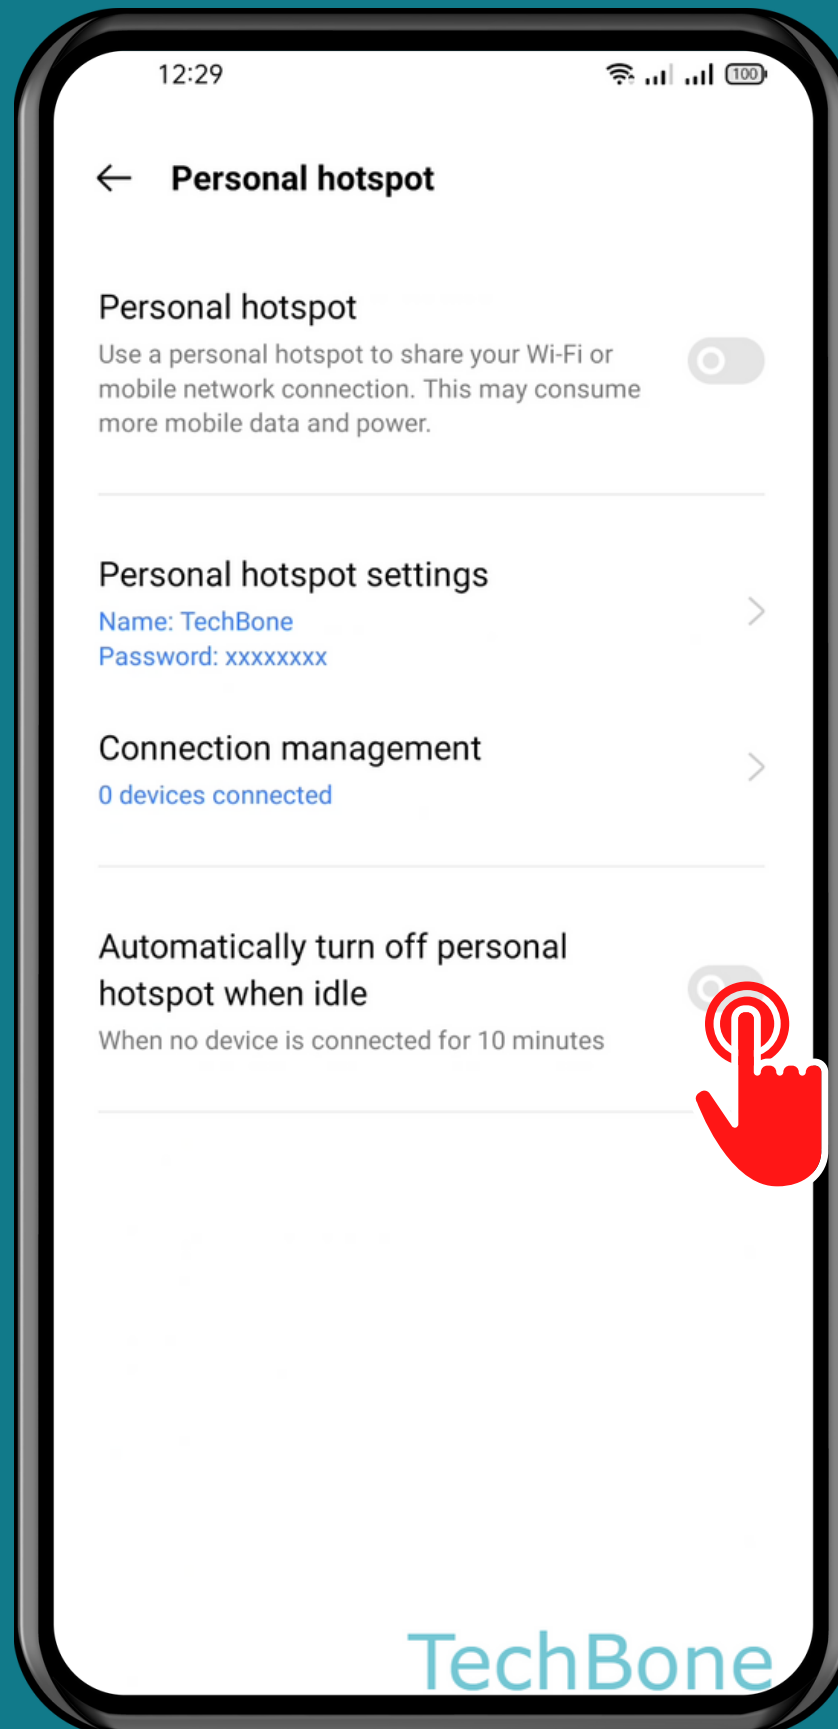

# Turn On/Off

# Automatically turn off personal hotspot...

Done!