

REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF BLUETOOTH TETHERING






Tap on Settings



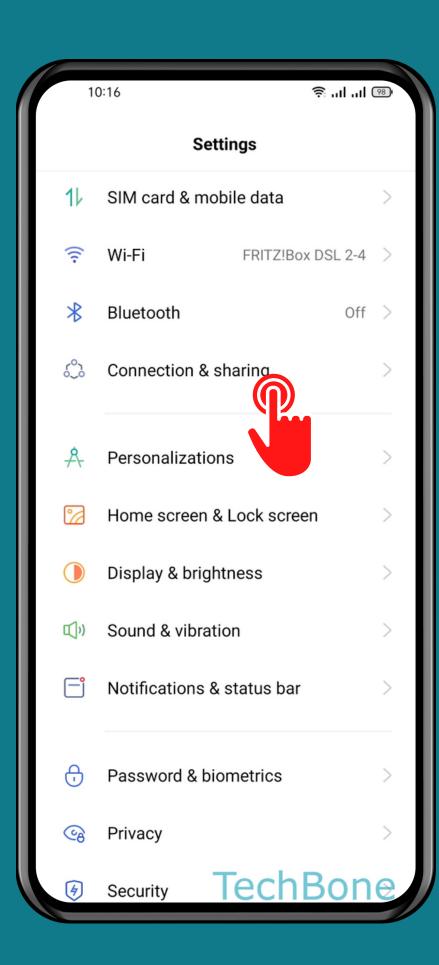

Tap on Connection & sharing



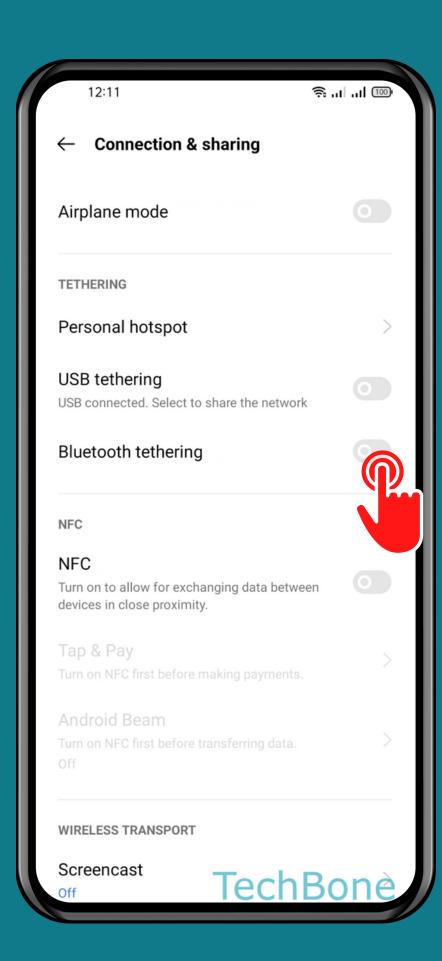

Turn On/Off Bluetooth tethering



Done.

