


REALME

Android 11 - realme UI 2


HOW TO CHANGE DISPLAY SIZE




Tap on
Settings

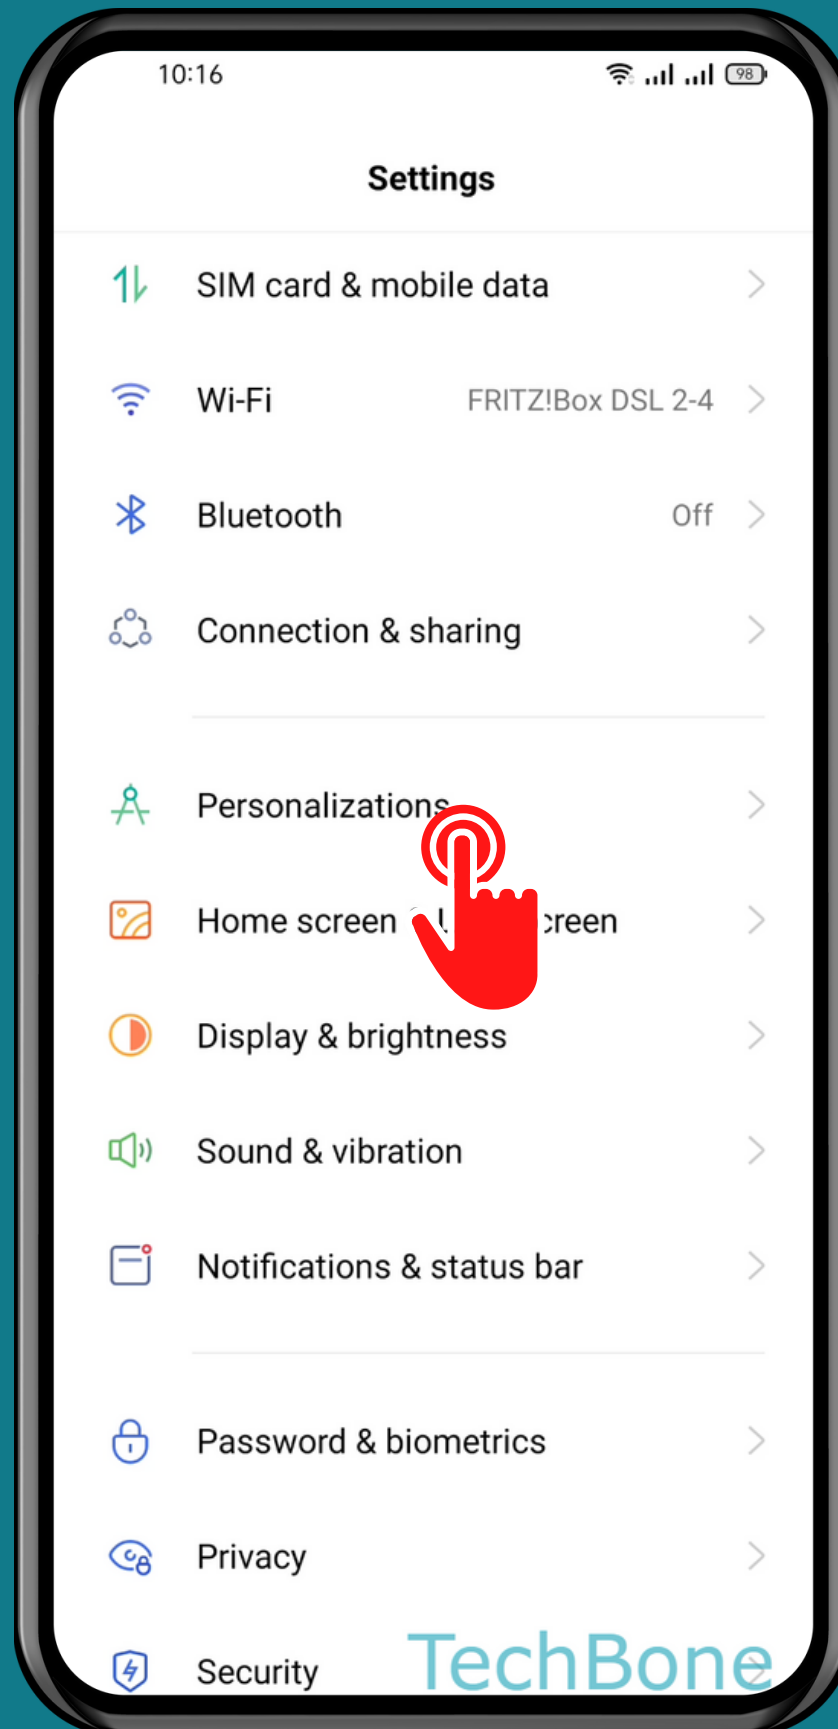


Tap on Personalizations

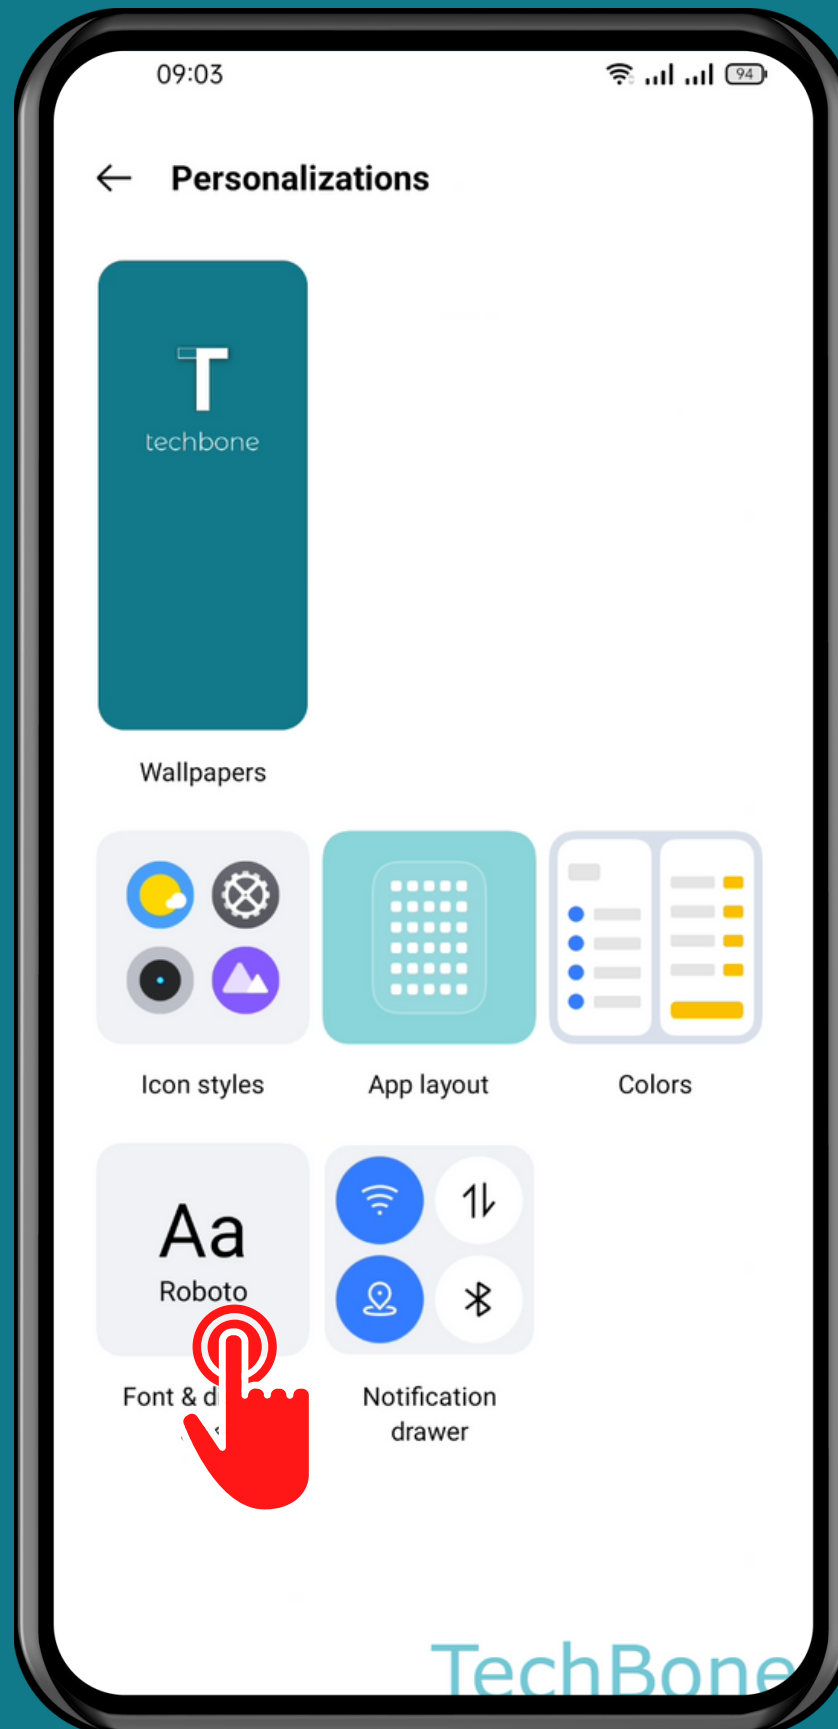

Tap on
Font & display size

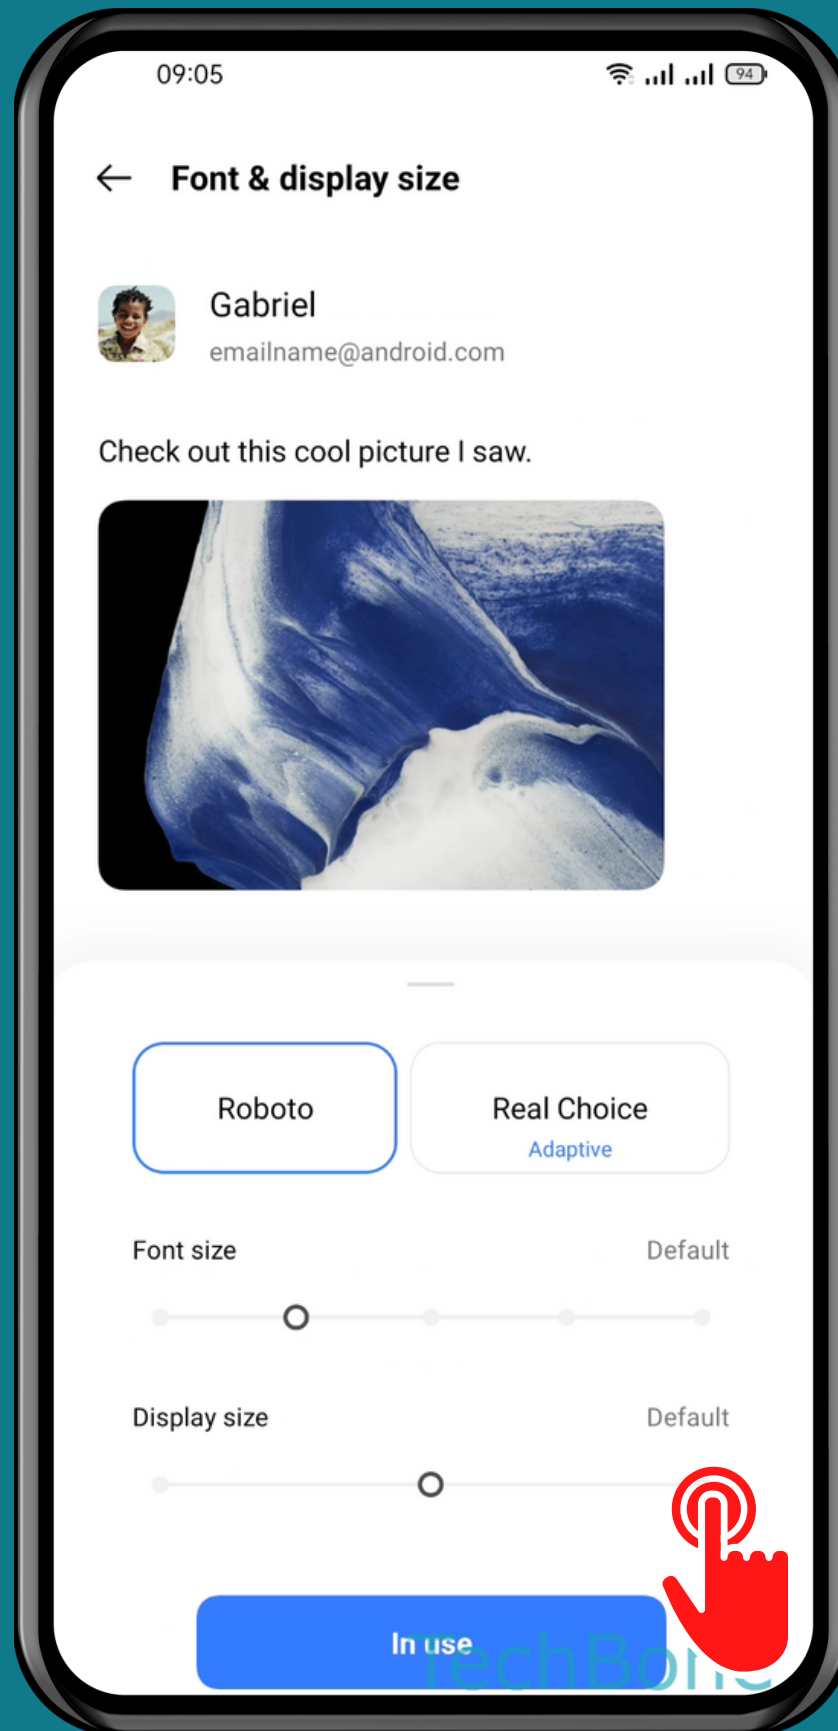

Set the Display size

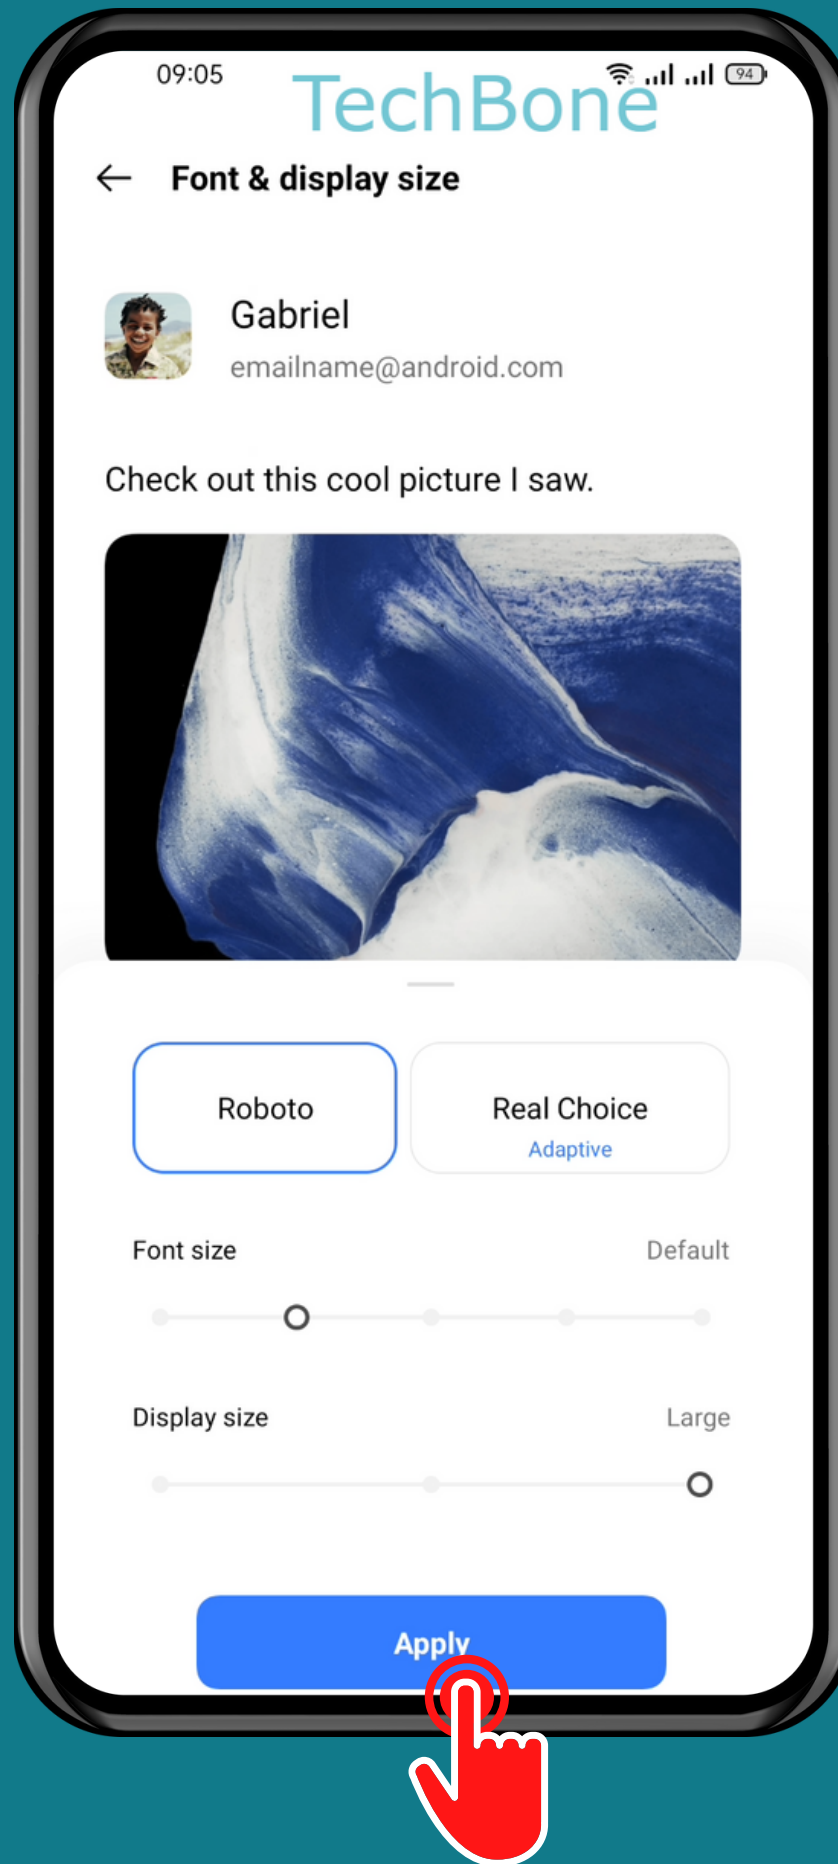

Tap on
Apply

Done!