


REALME

Android 11 - realme UI 2


HOW TO CHANGE RINGTONE




Tap on
Settings

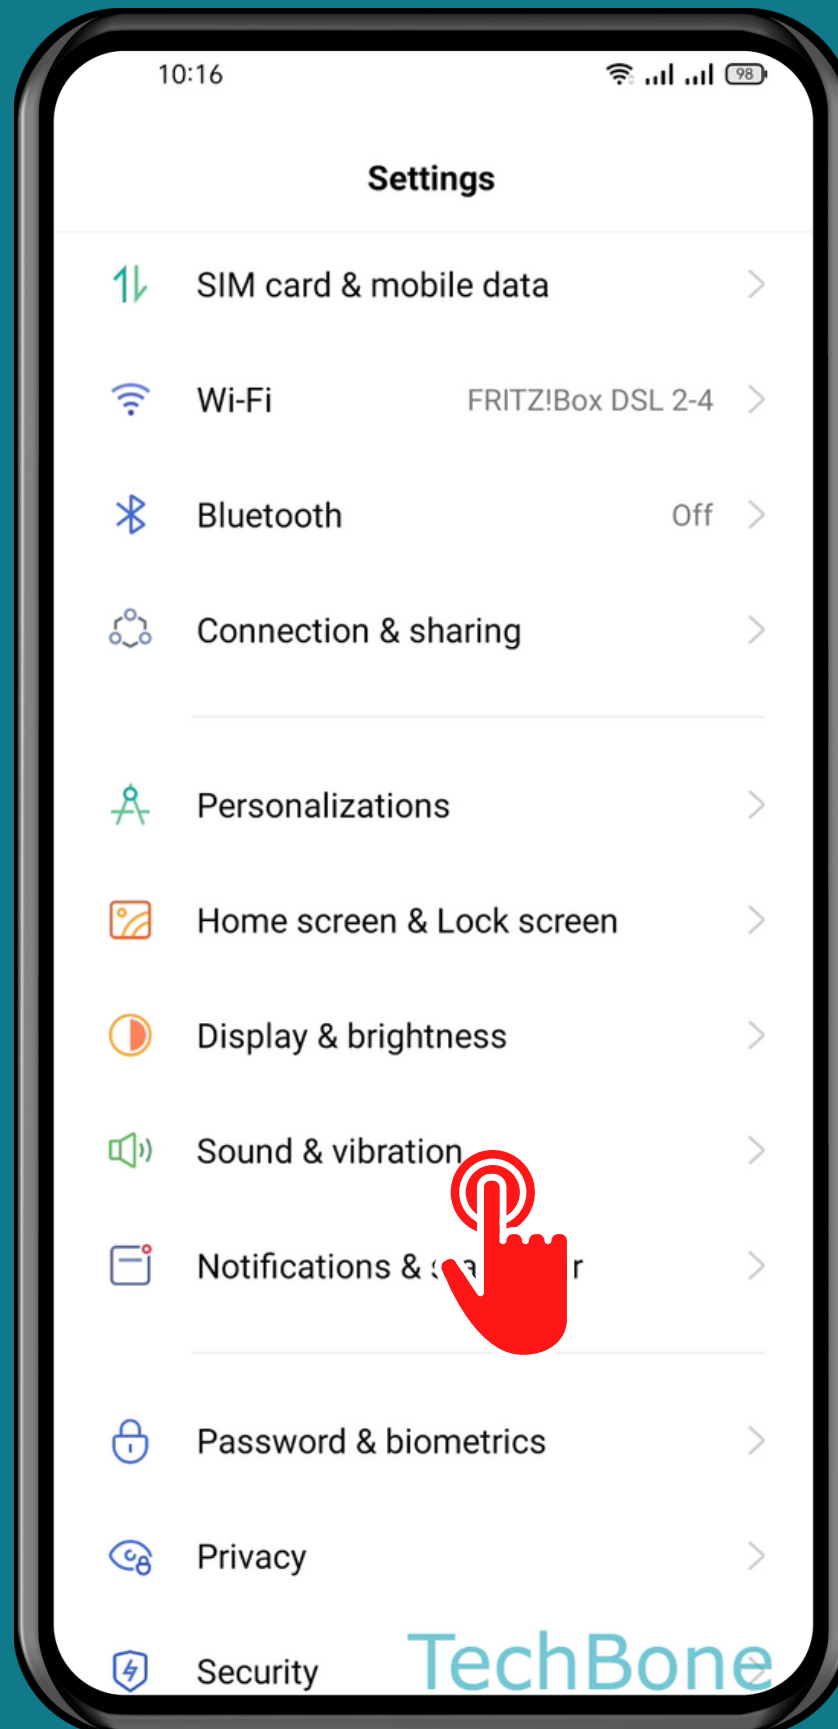


Tap on Sound & vibration

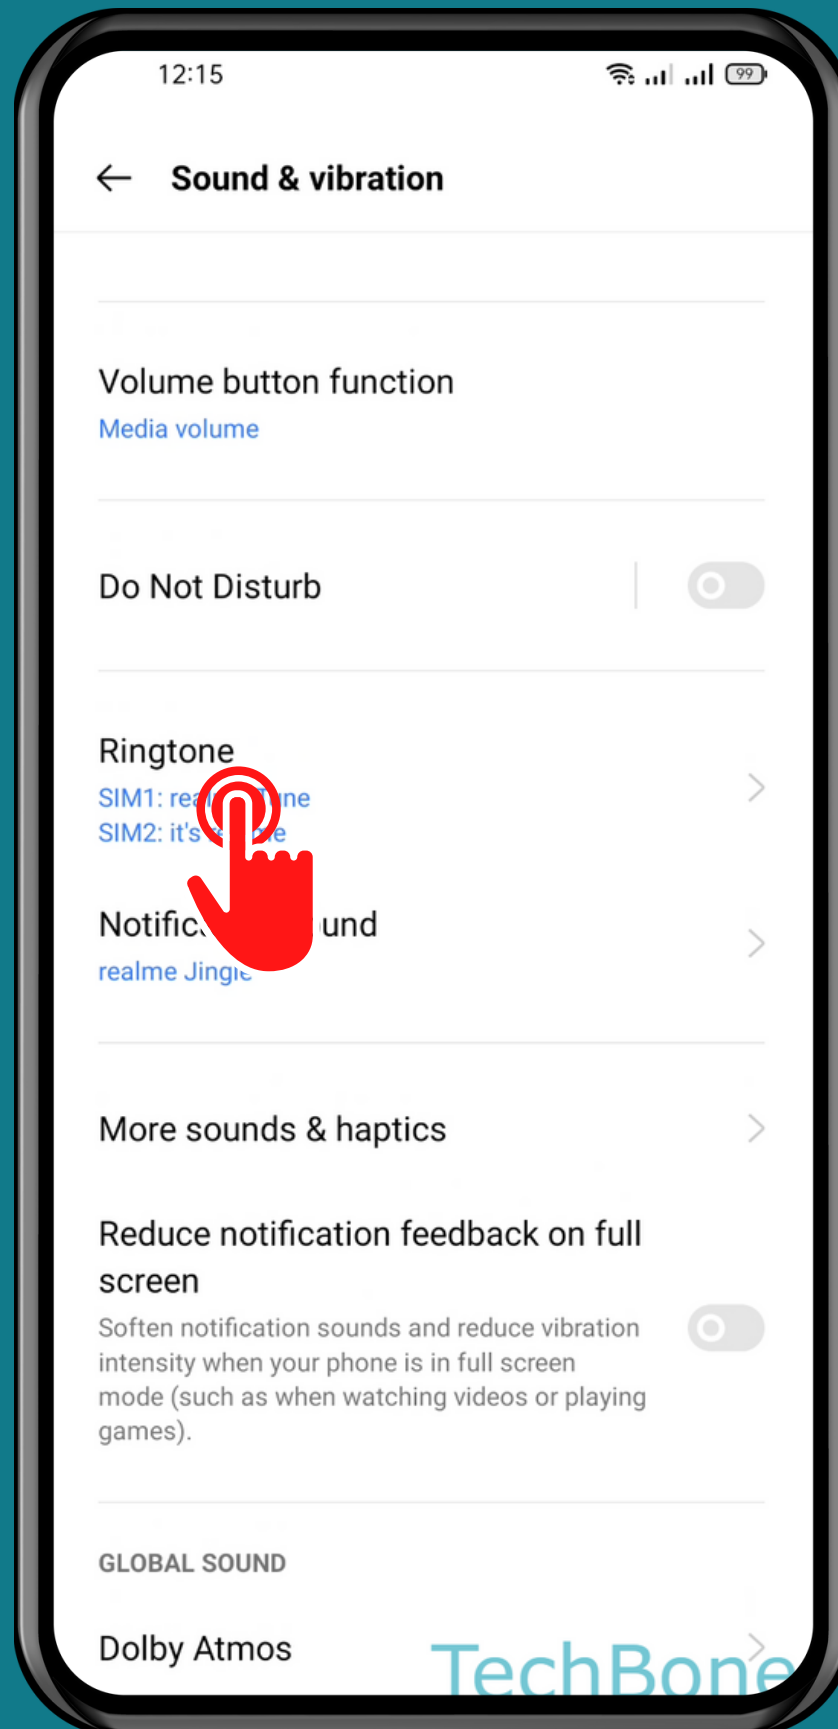

Tap on Ringtone

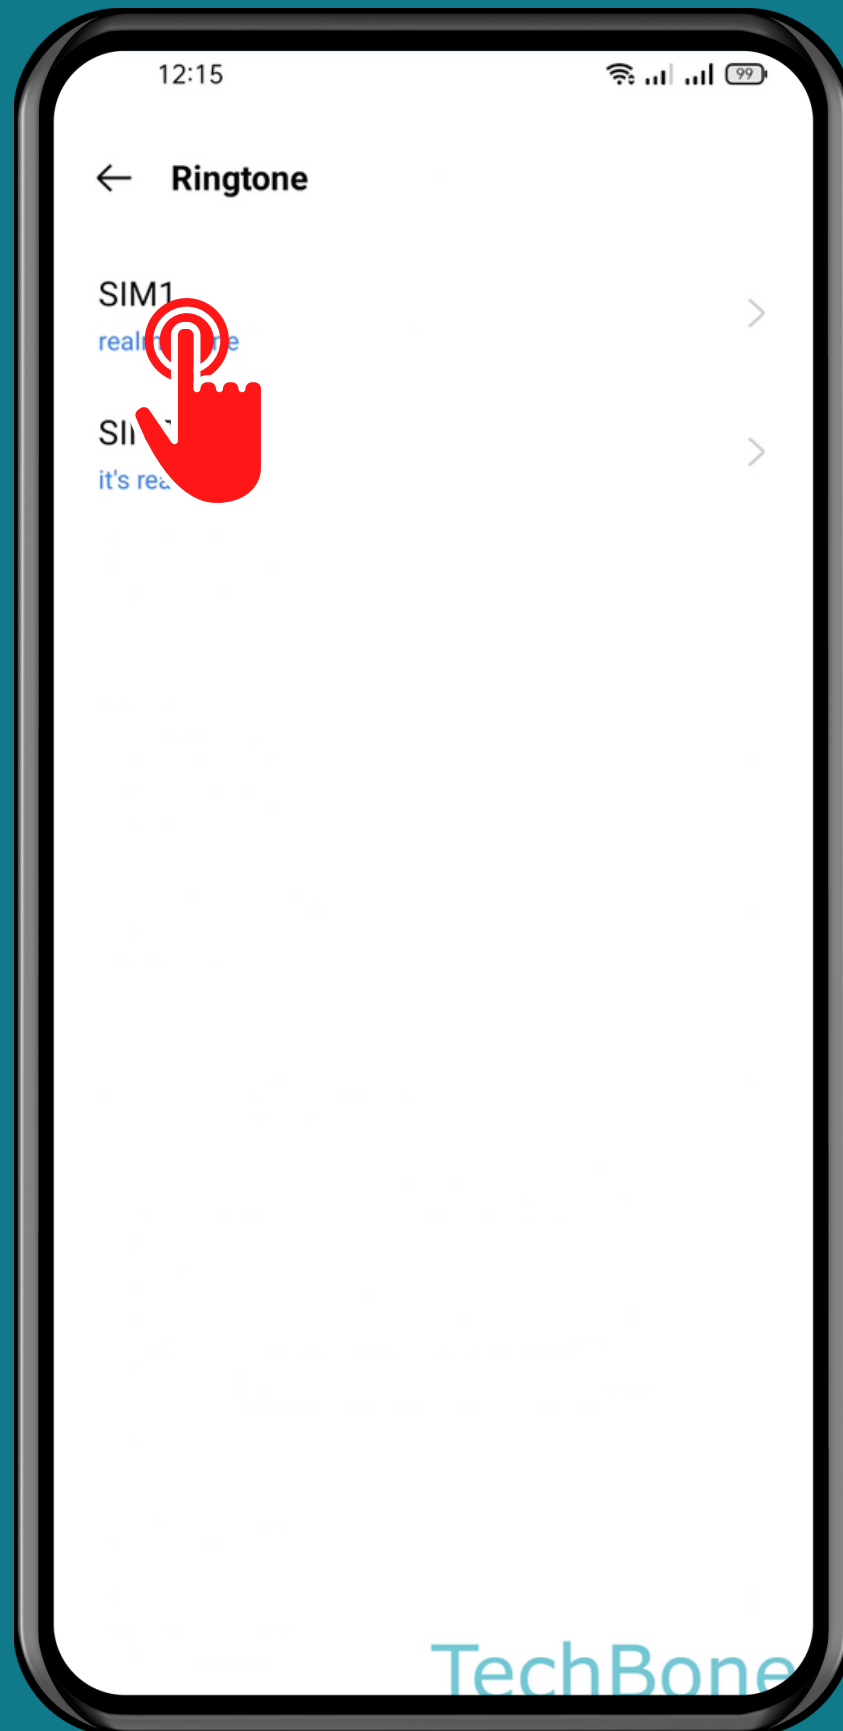

Choose a
SIM card (Dual SIM)

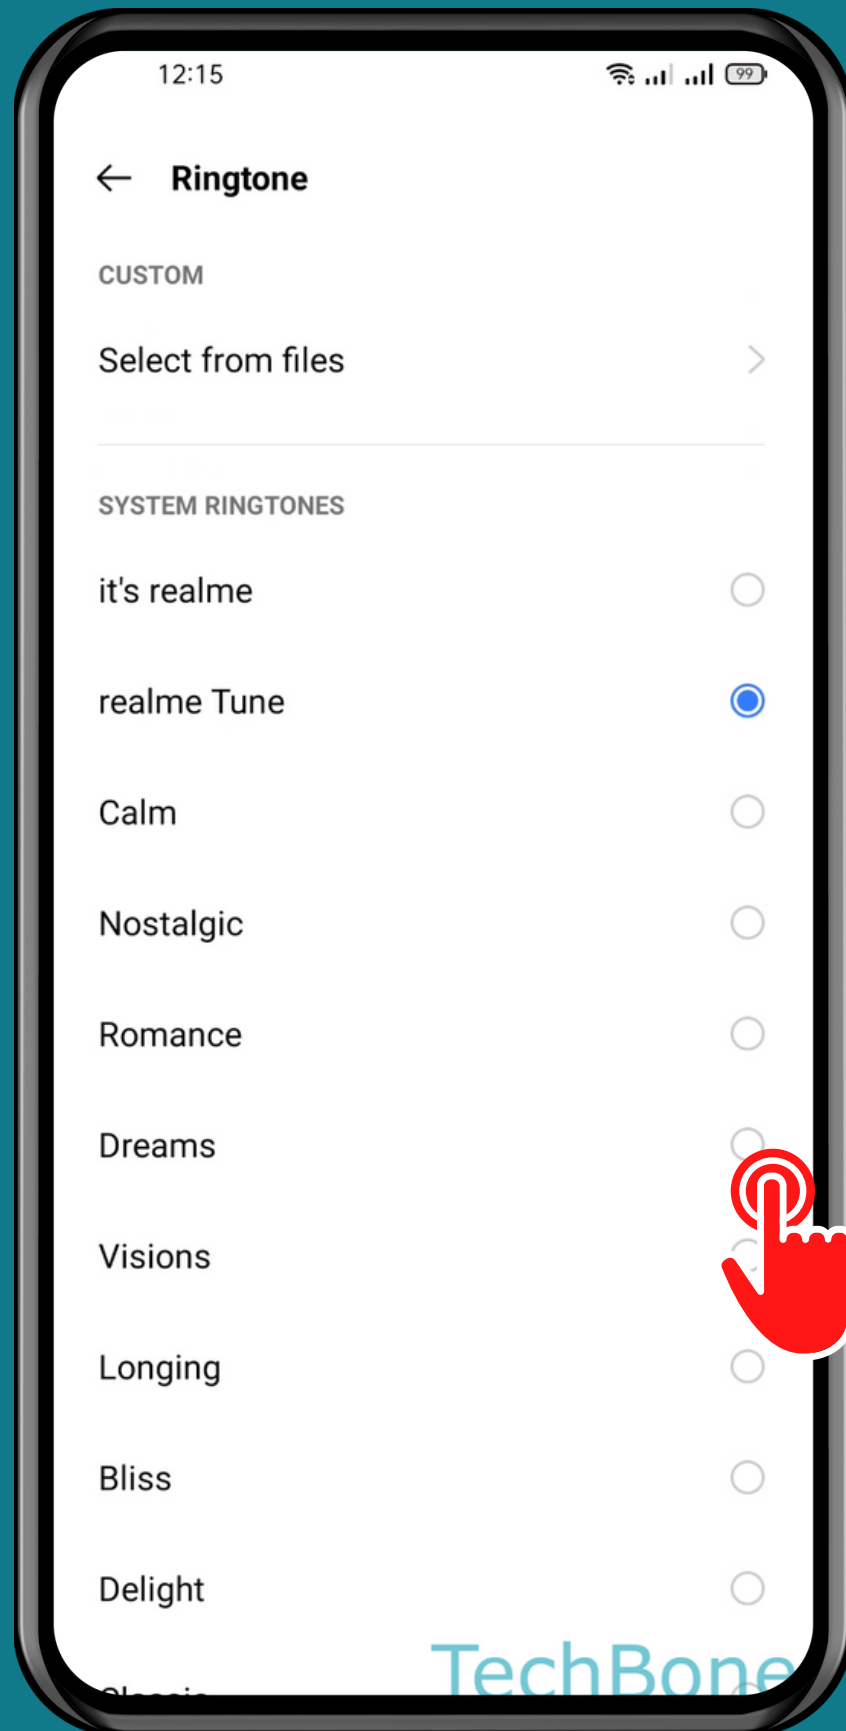

Choose a Ringtone

Done!