


REALME

Android 11 - realme UI 2


HOW TO CHANGE RINGTONE VOLUME



Tap on
Settings

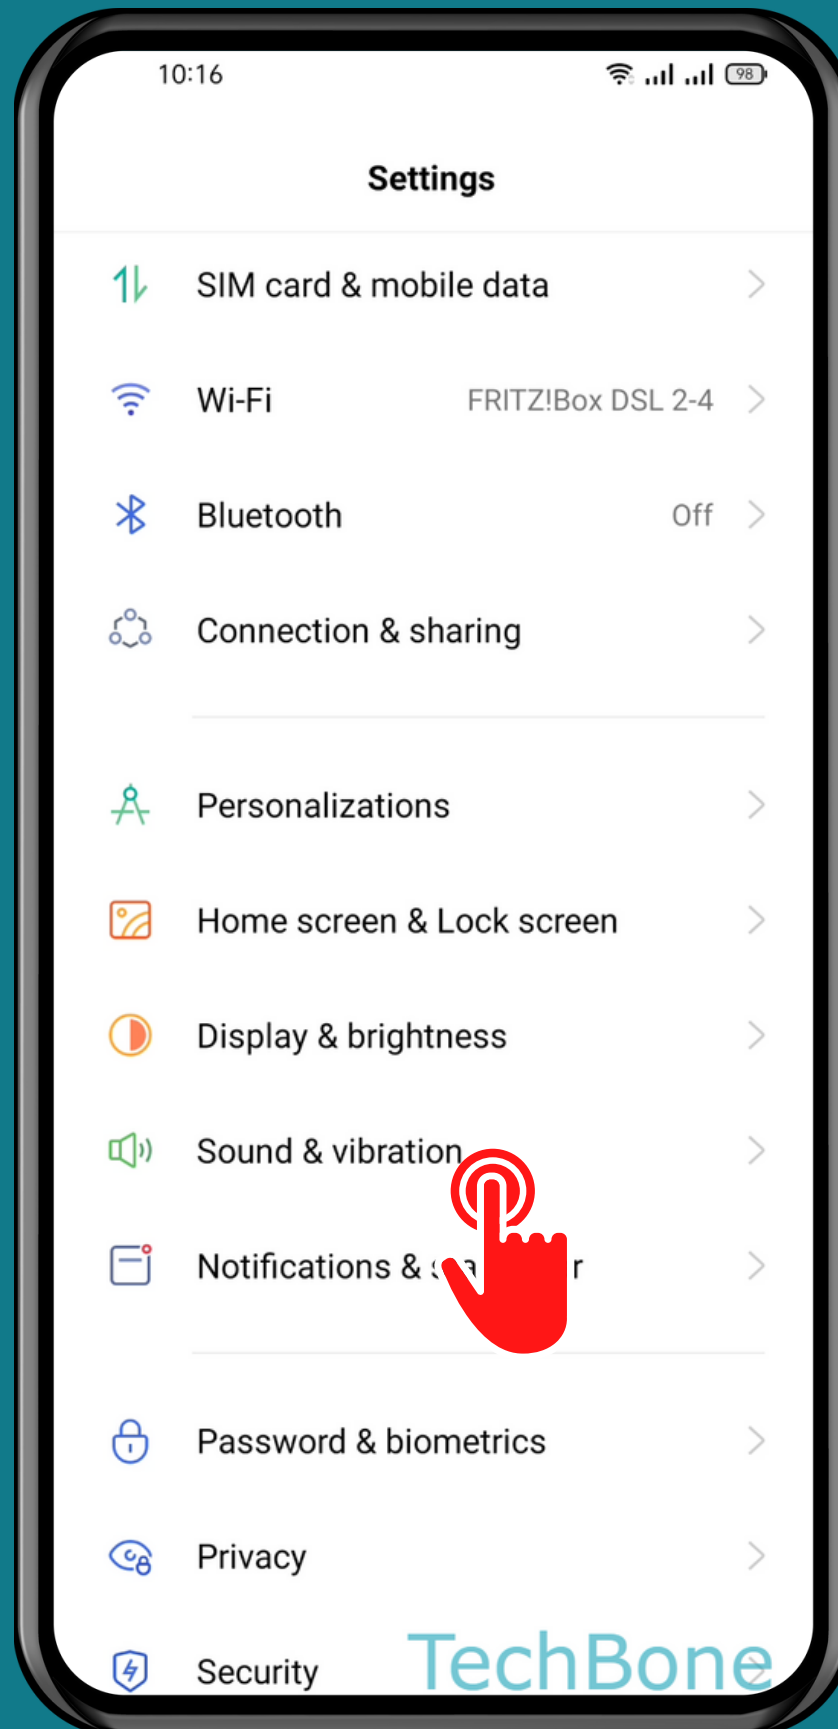

Tap on Sound & vibration

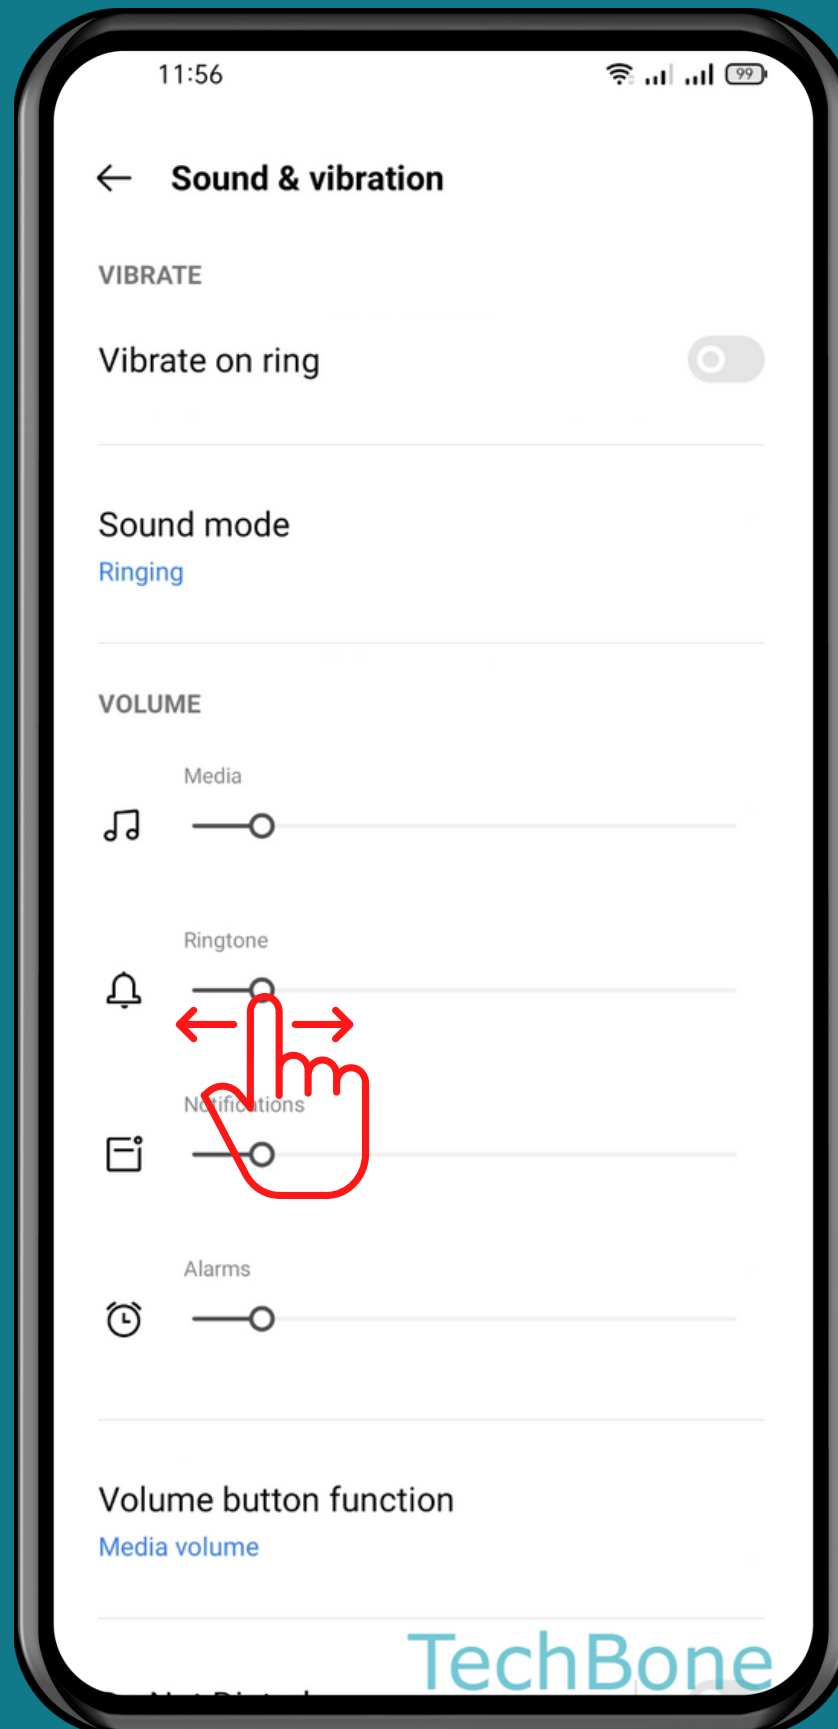

Adjust the Ringtone volume

Done!