


REALME

Android 11 - realme UI 2


# HOW TO CHANGE SIM PIN




Tap on  
Settings

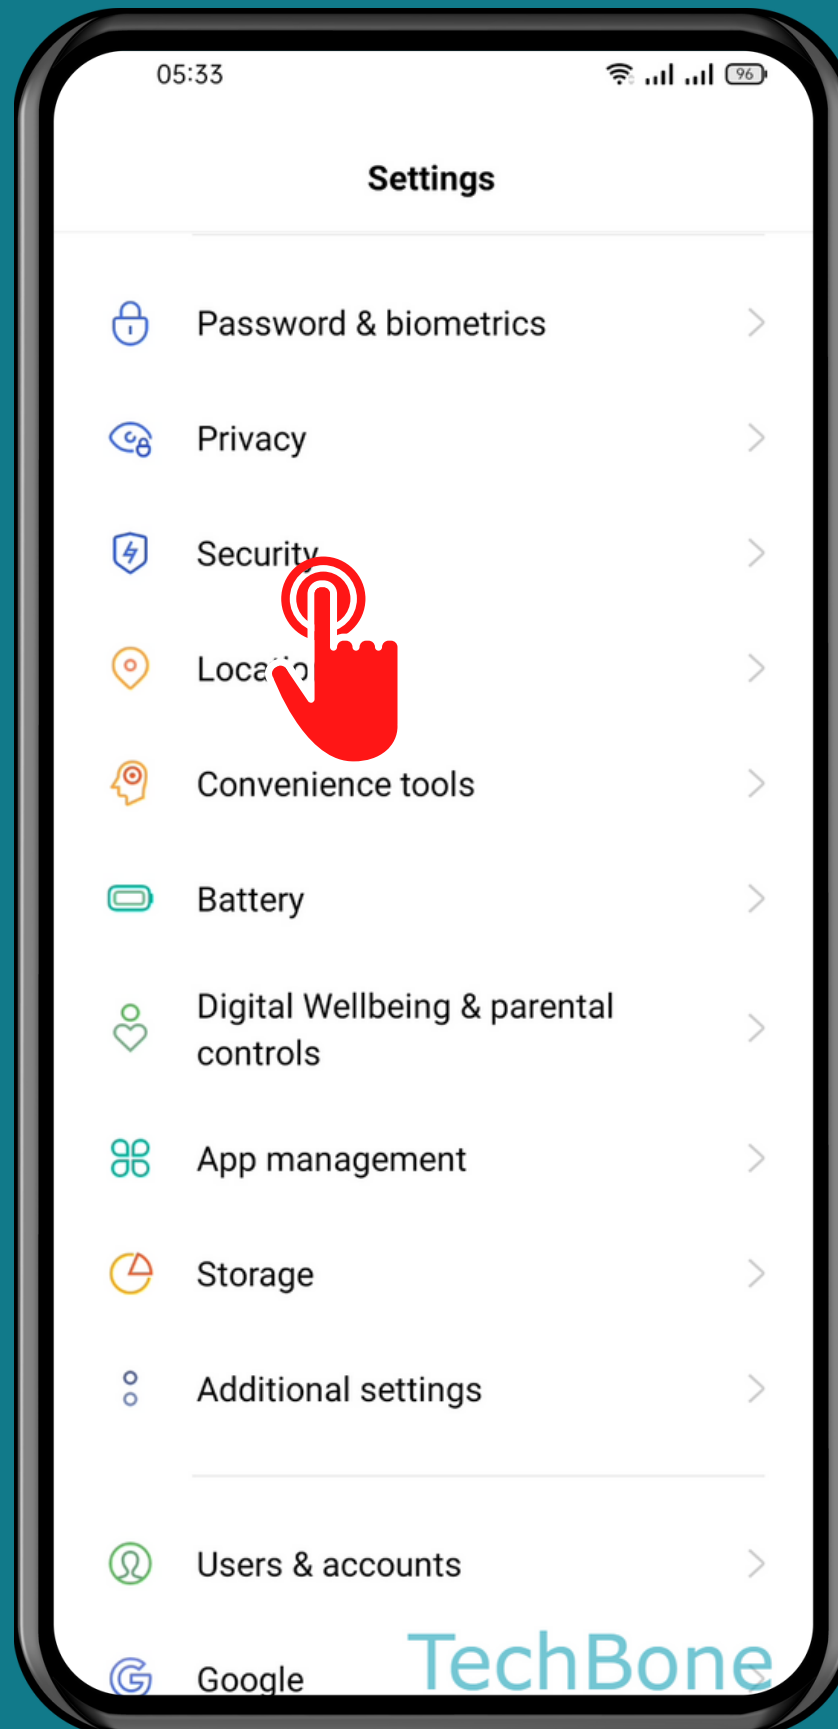


# Tap on Security

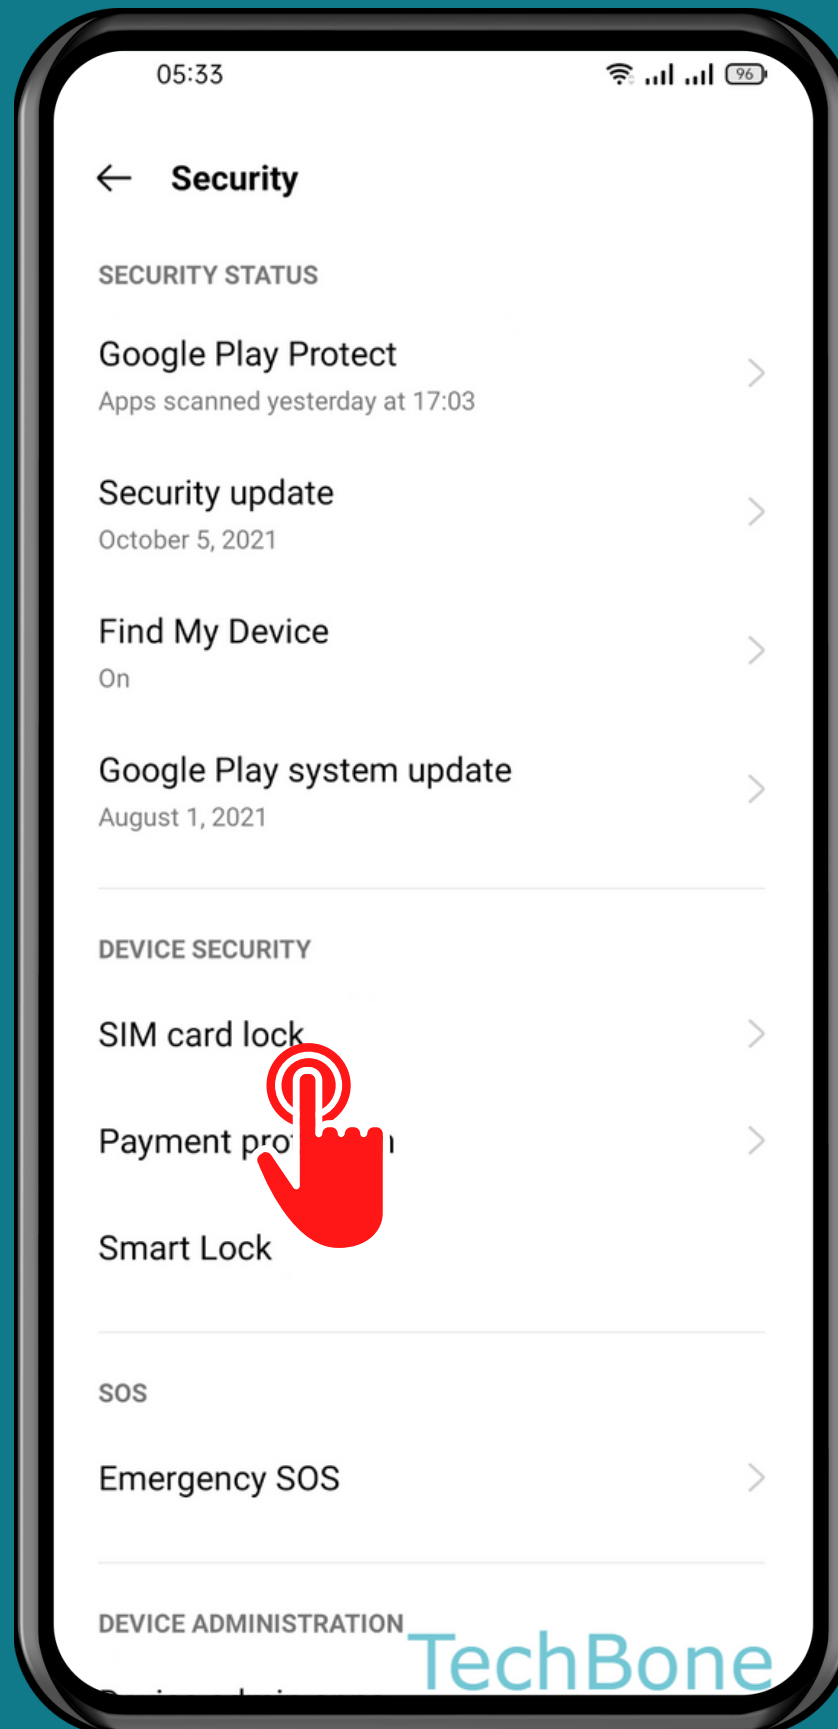


Tap on  
SIM card lock

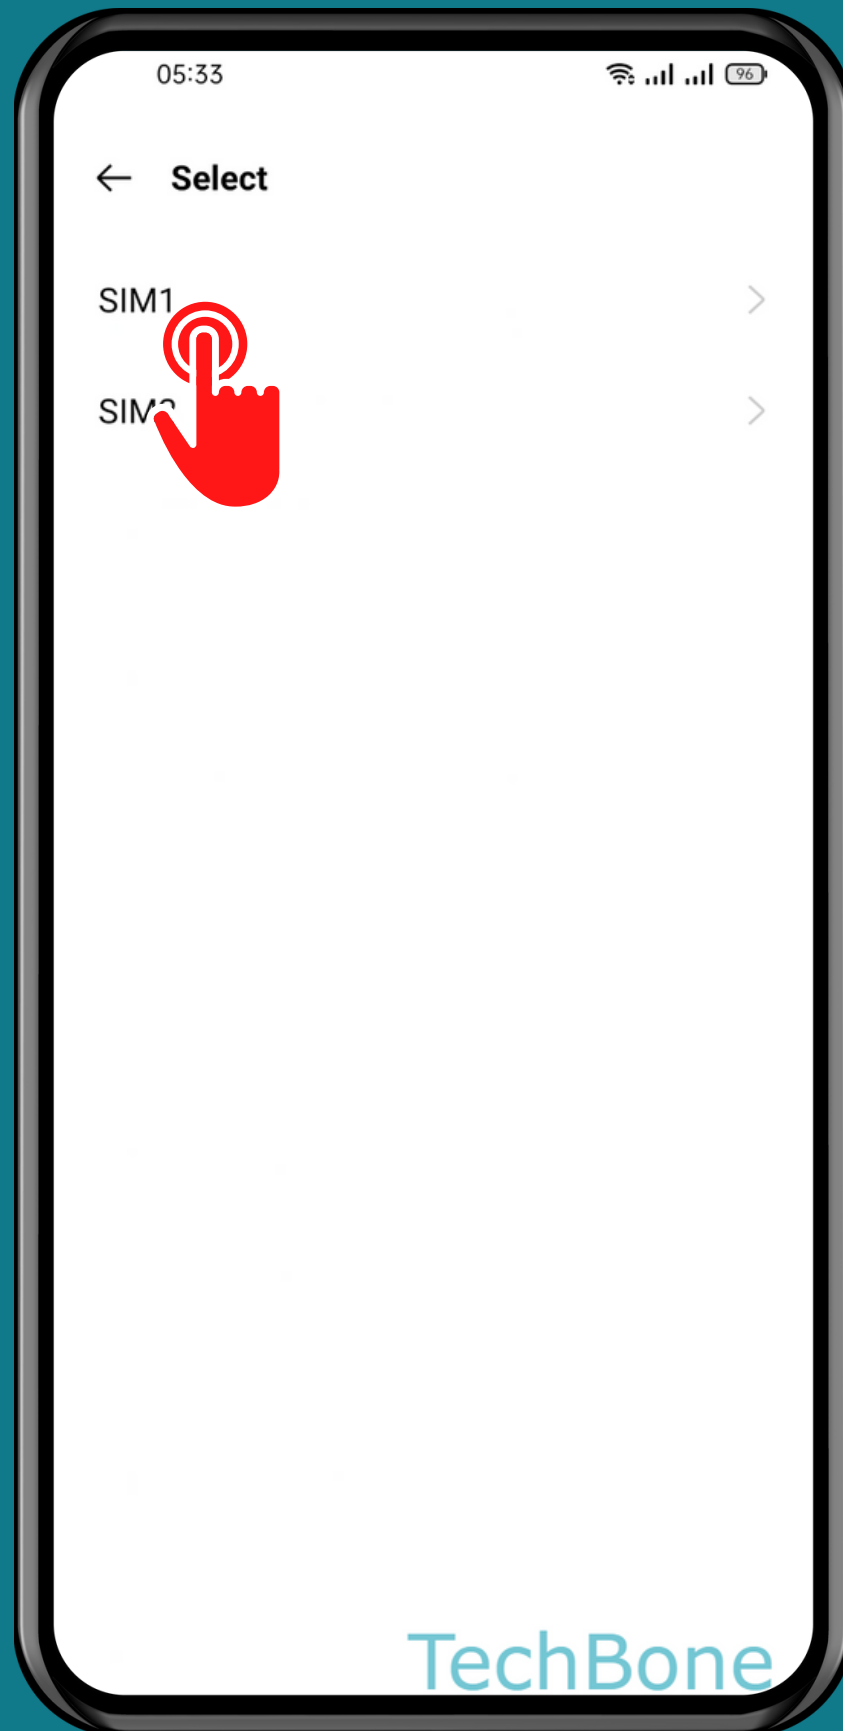

# Choose a SIM Card (Dual SIM)

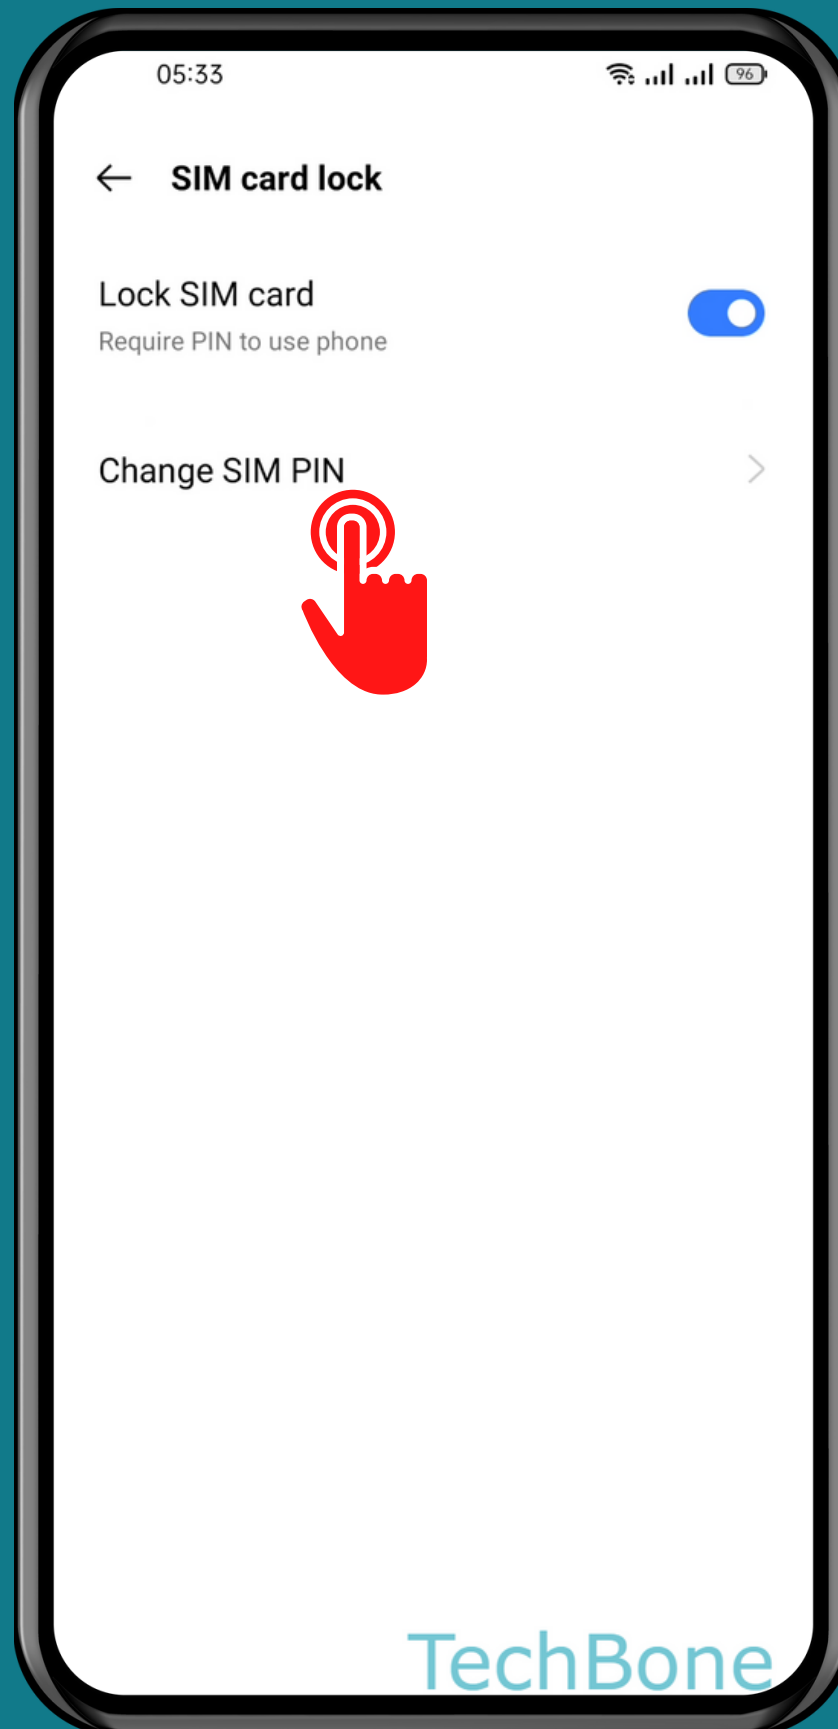

Tap on  
Change SIM PIN

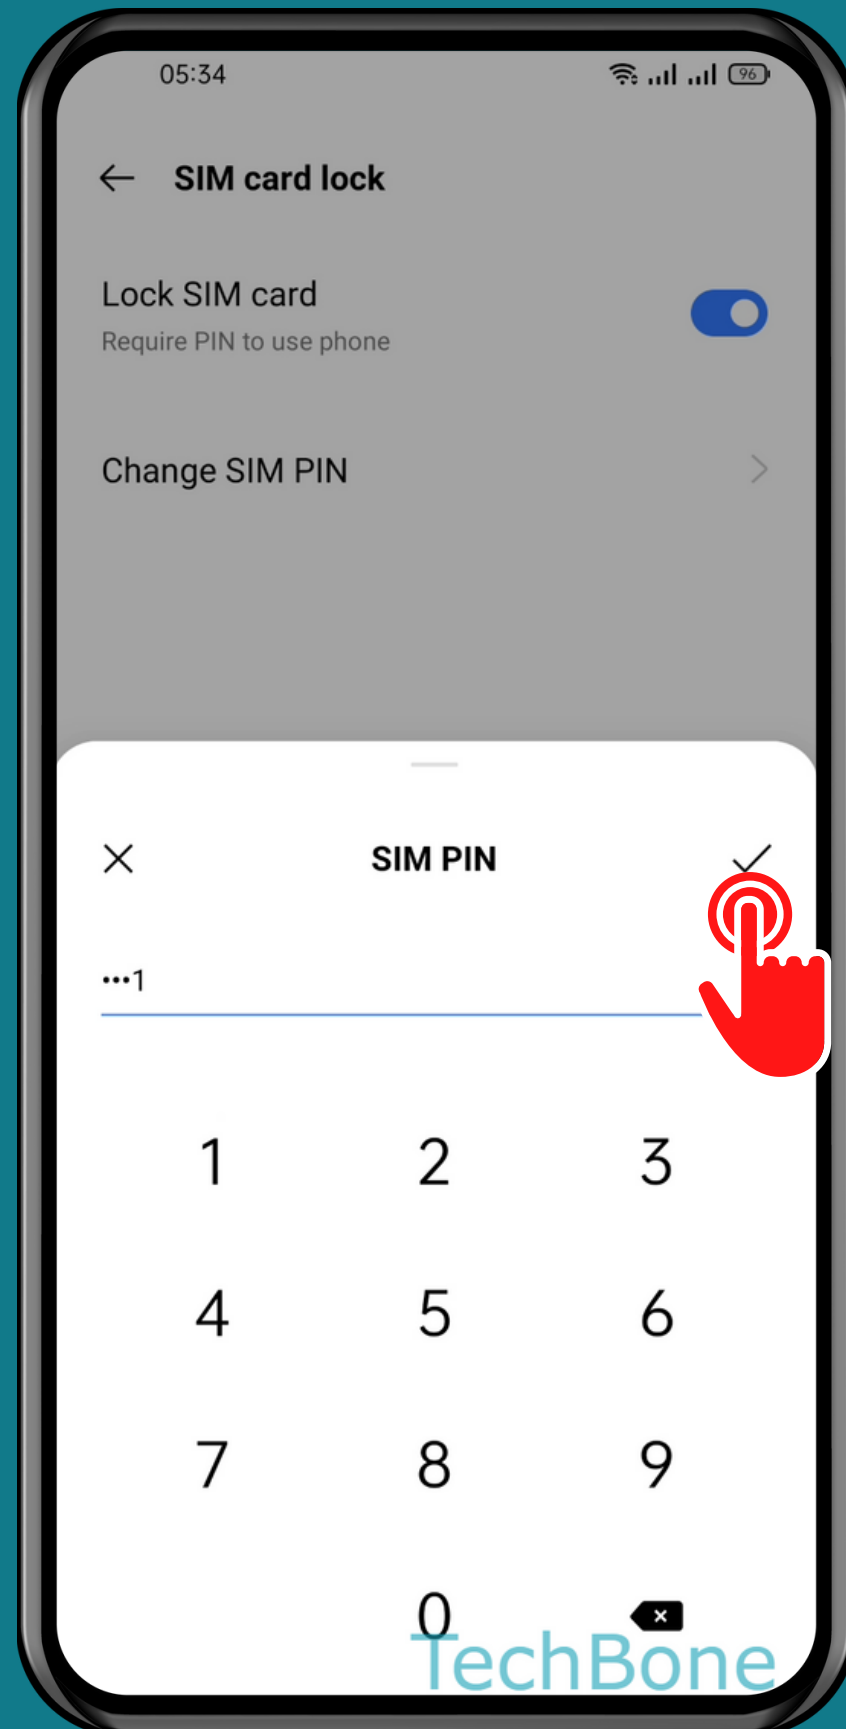

Enter the  
**Current PIN** and  
follow the instructions

Done!