


REALME

Android 11 - realme UI 2


HOW TO ENABLE/DISABLE SIM CARDS




Tap on
Settings

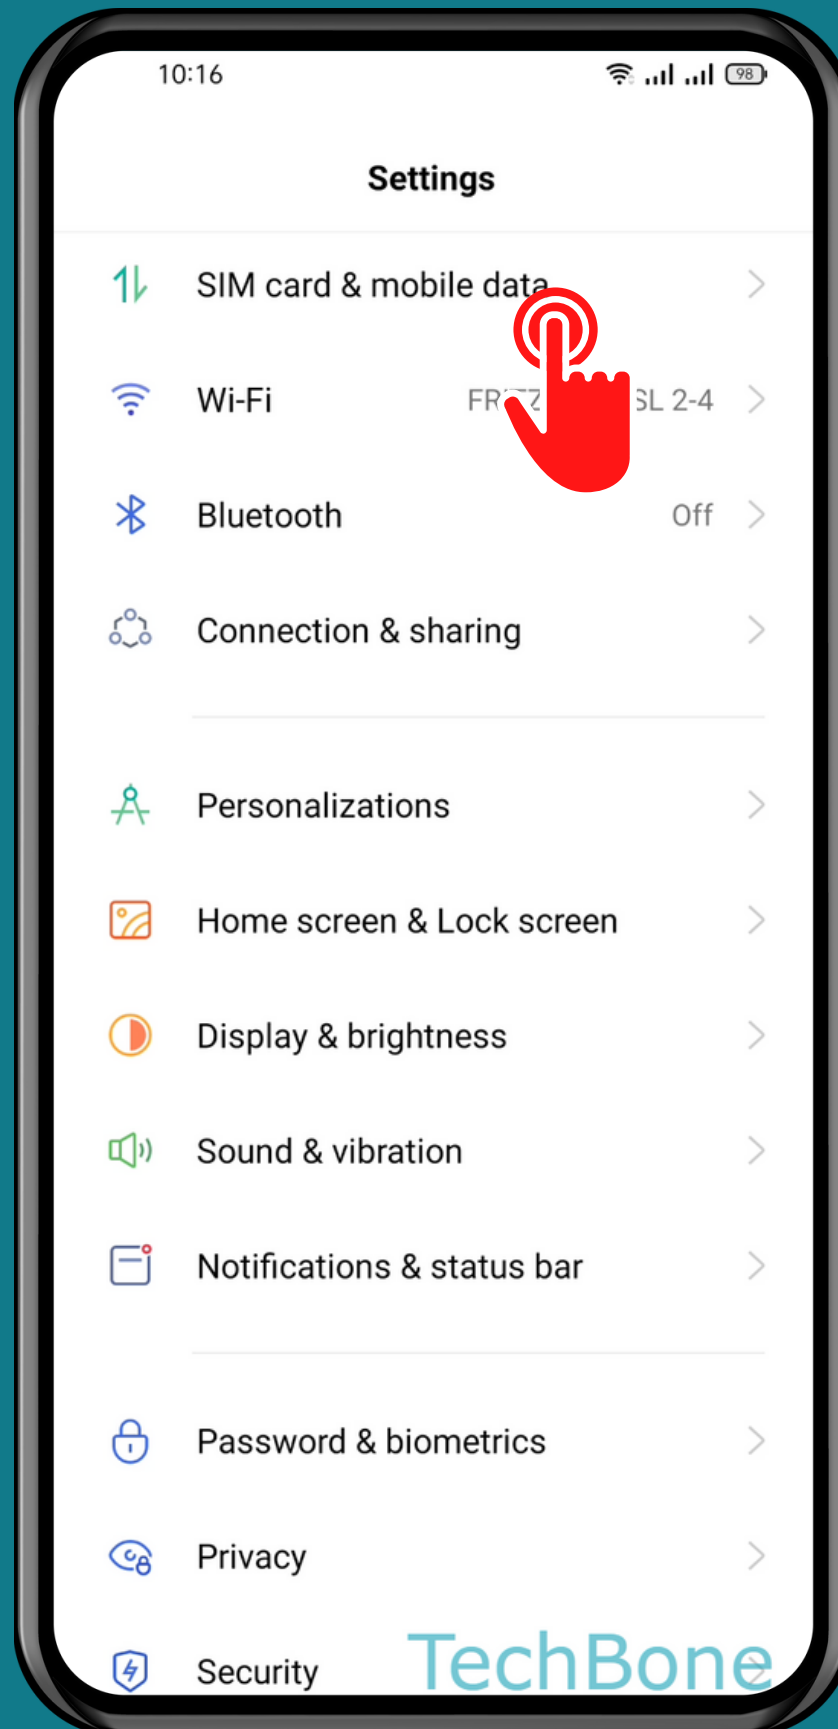

Tap on
SIM card &
mobile data

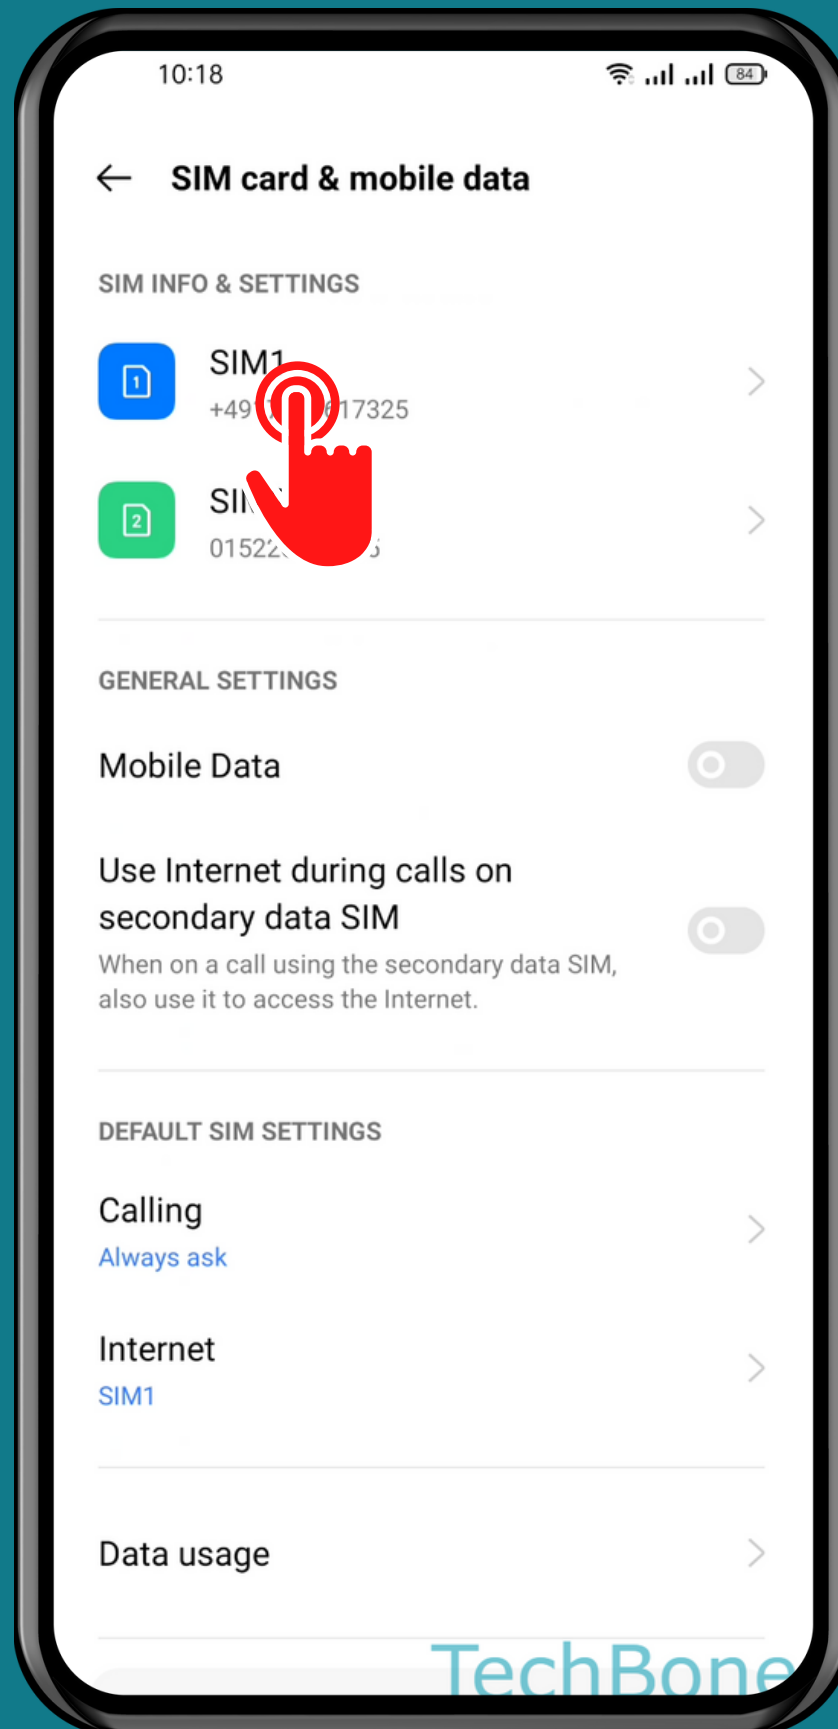

Choose a SIM card (Dual SIM)

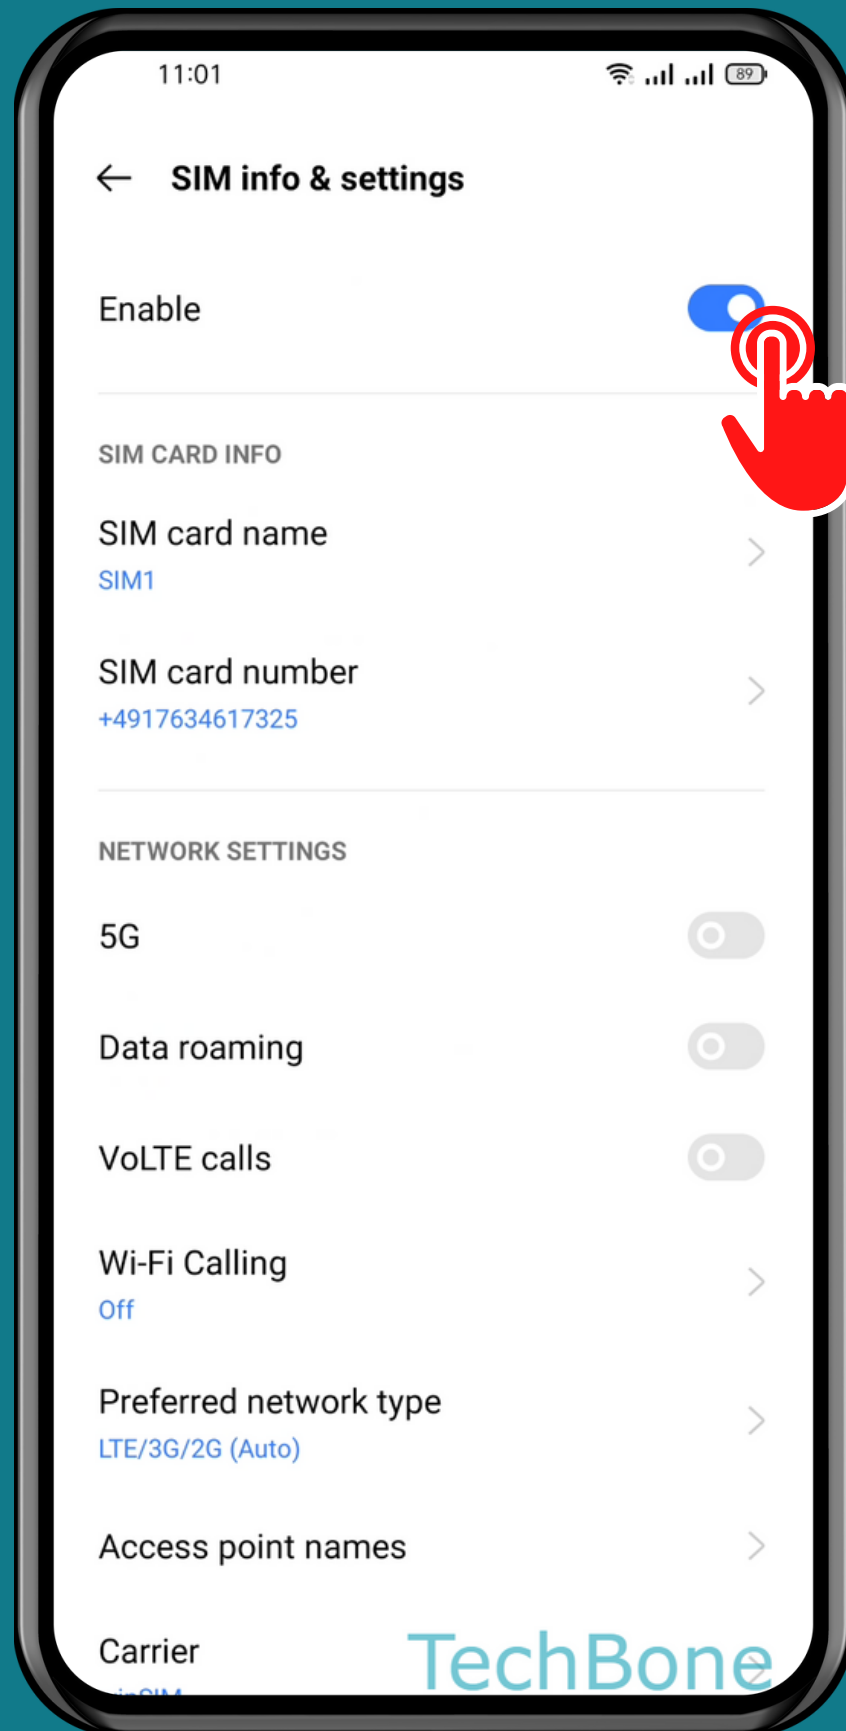

Enable or Disable the SIM Card

Done!