




REALME

Android 11 - realme UI 2


HOW TO CHANGE HOME SCREEN LAYOUT




Tap on
Settings

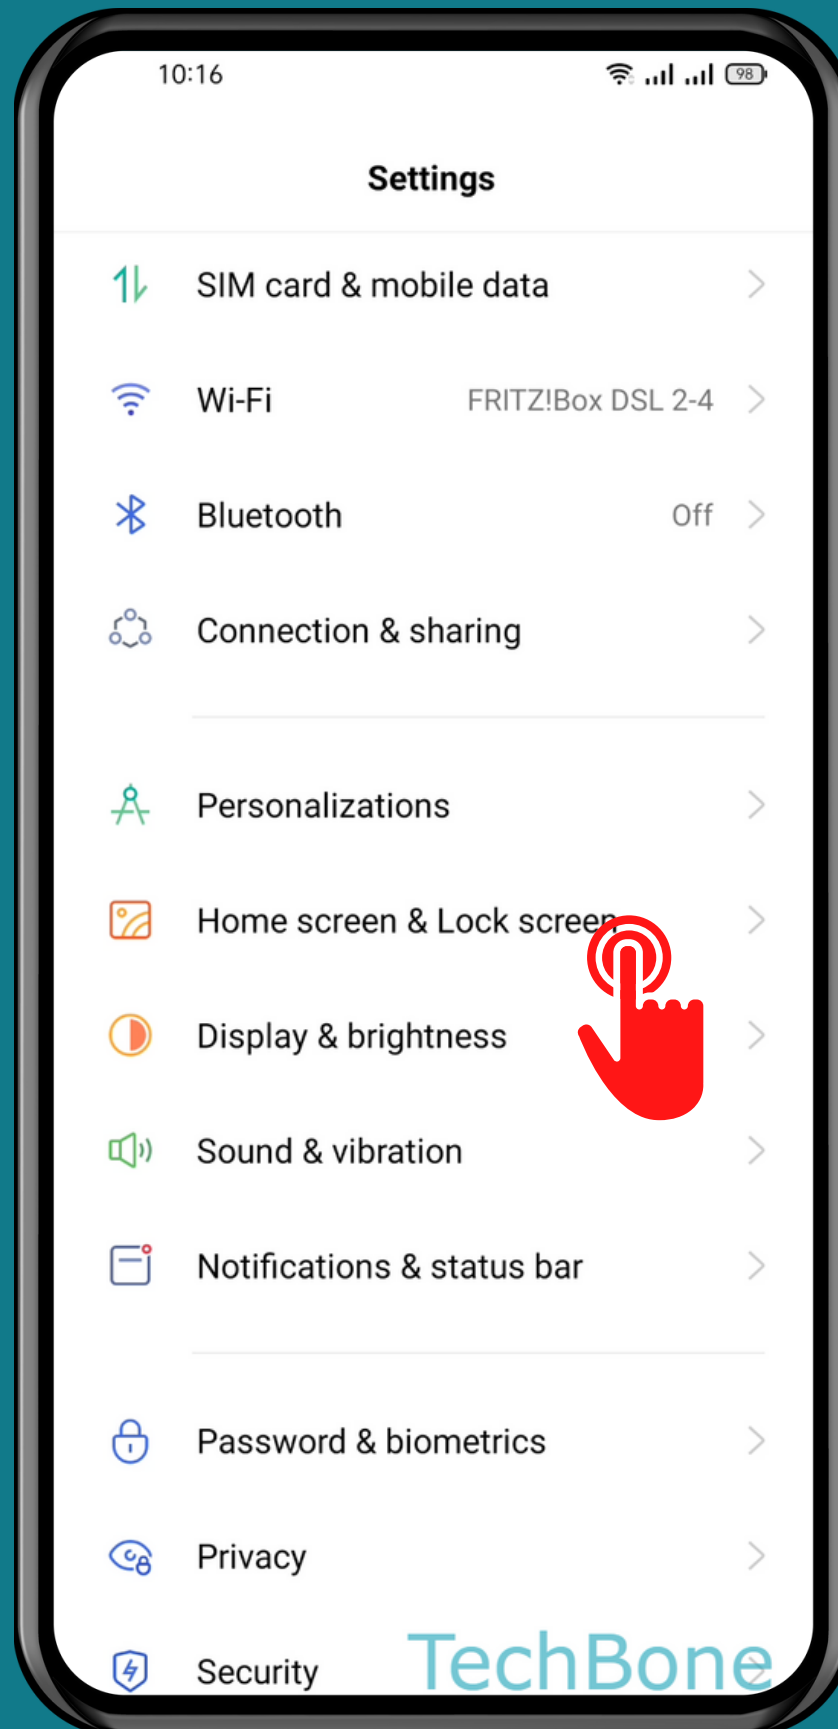

Tap on Home screen & Lock screen

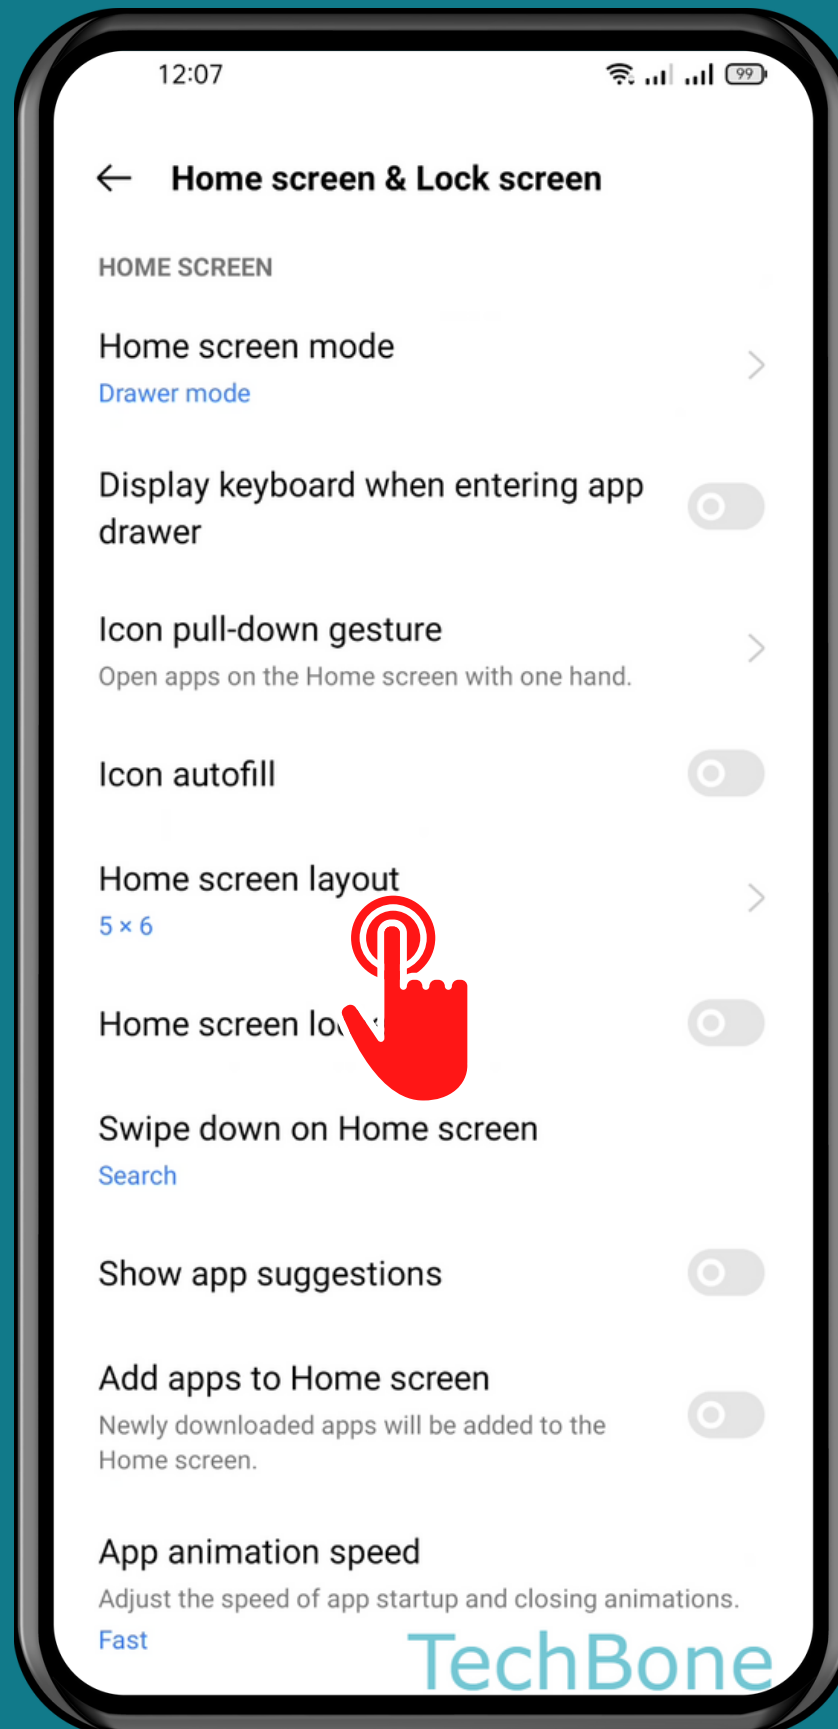

Tap on Home screen layout

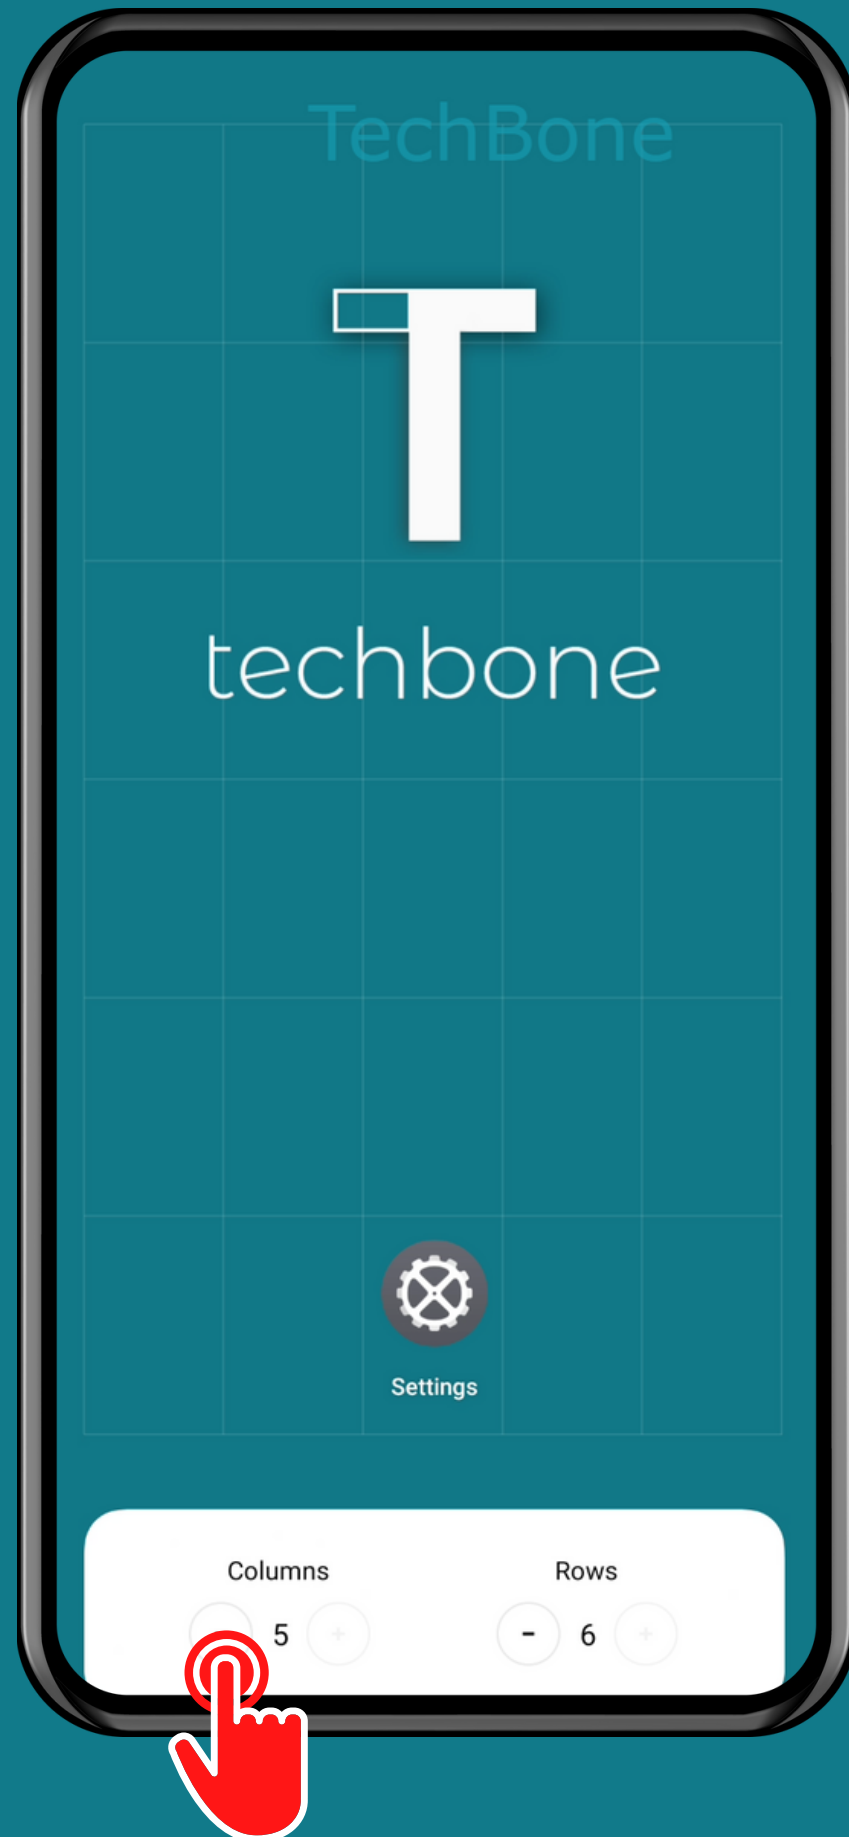

Set the number of Columns/Rows



Tap on a
Free area to exit

Done!