


REALME

Android 11 - realme UI 2


# HOW TO SCHEDULE AUTO POWER ON/OFF




Tap on  
Settings

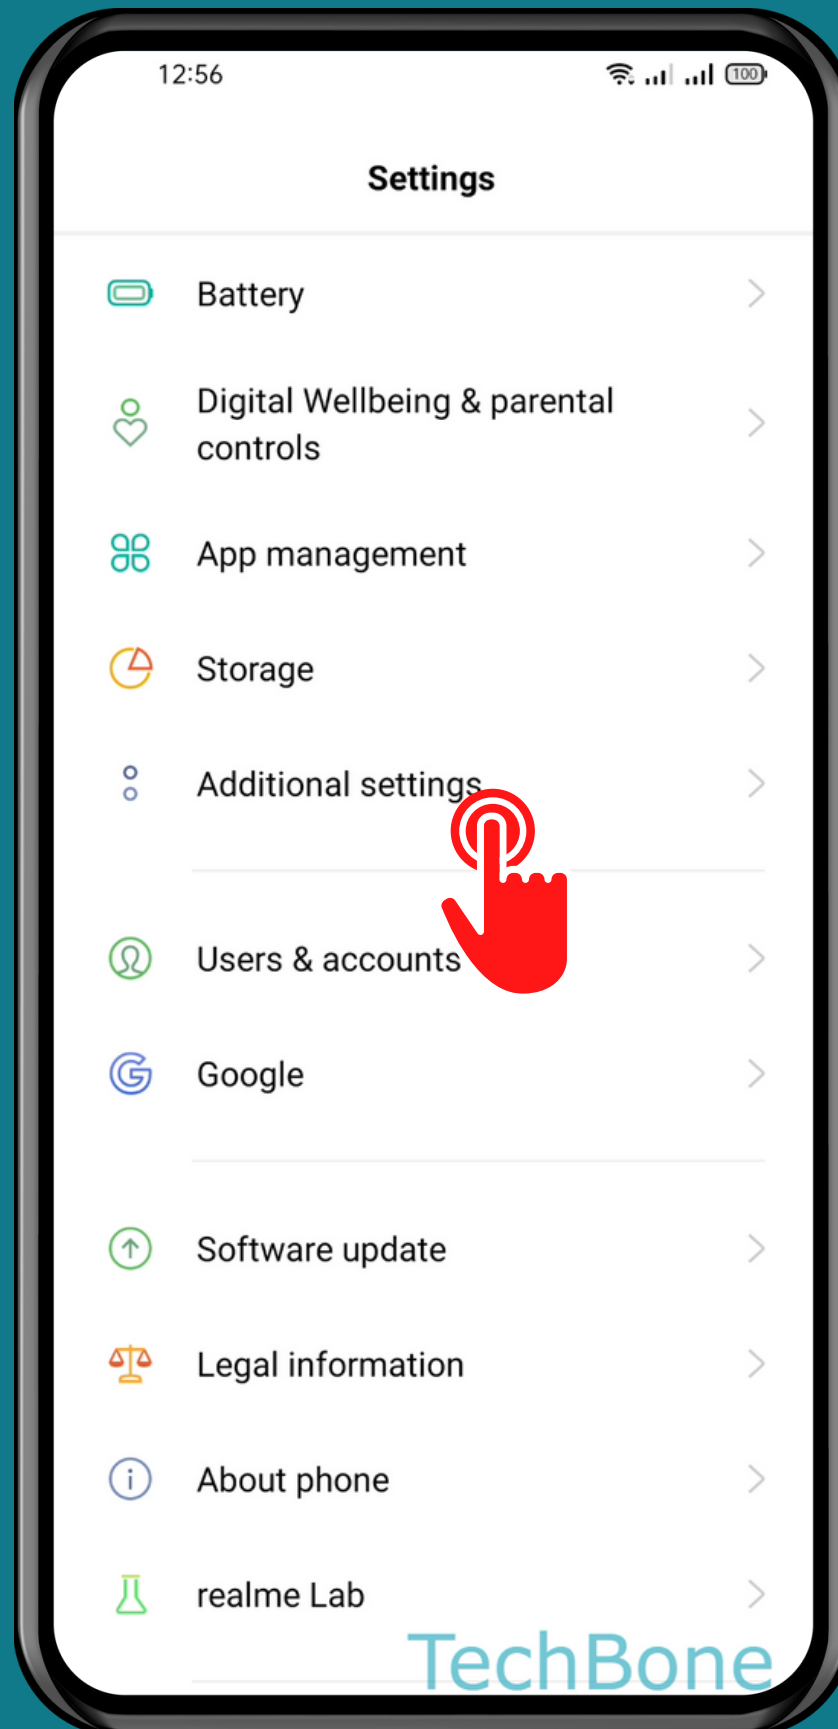


# Tap on Additional settings

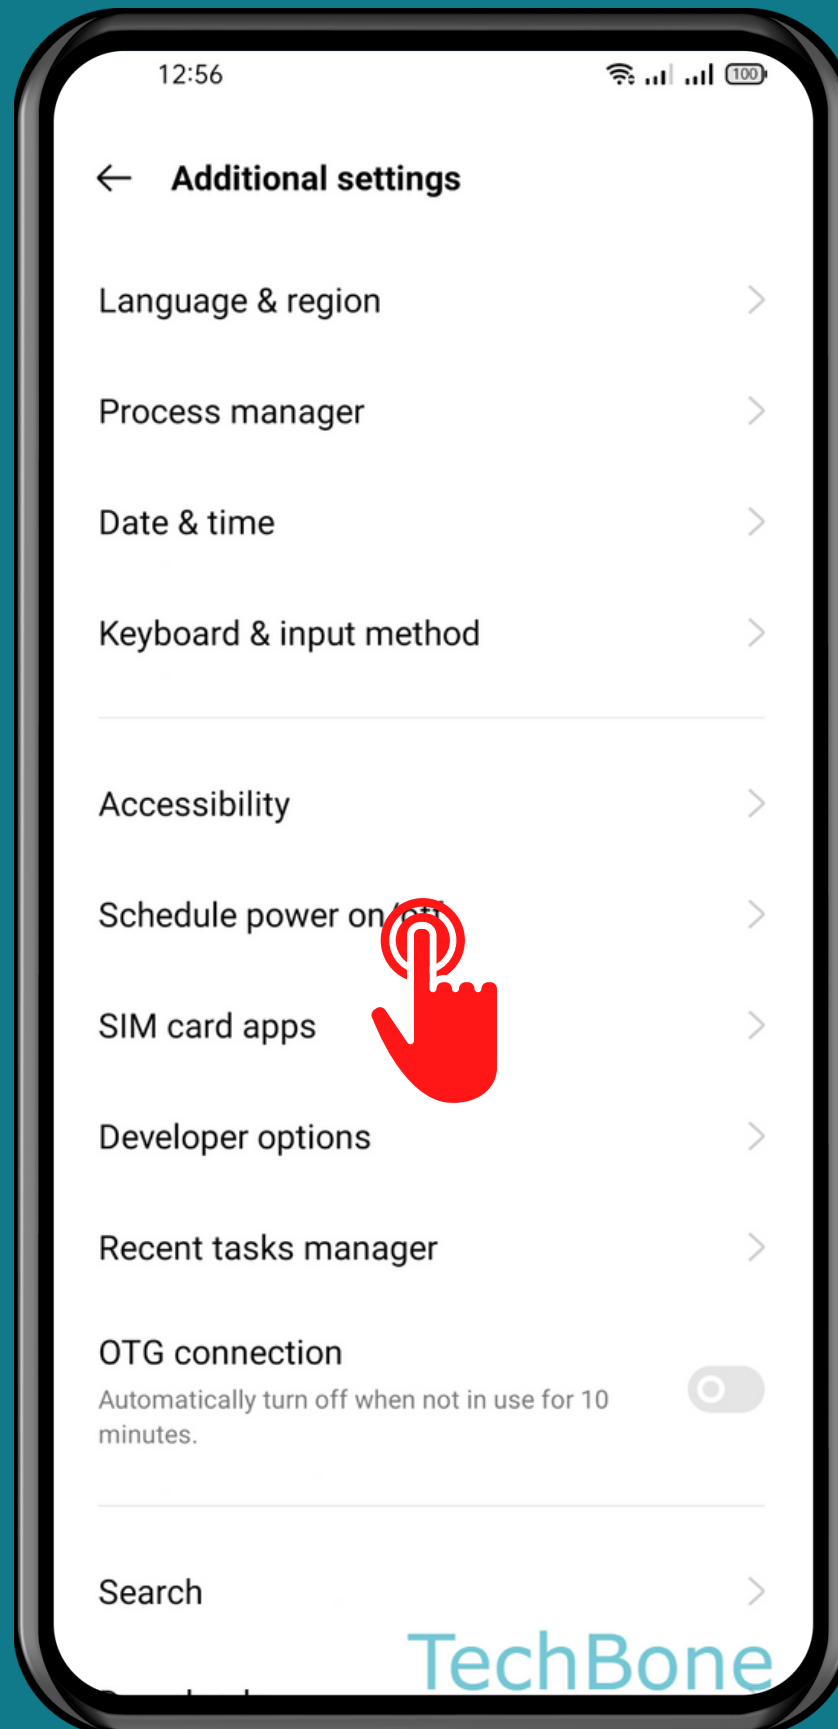

Tap on  
Schedule  
power on/off

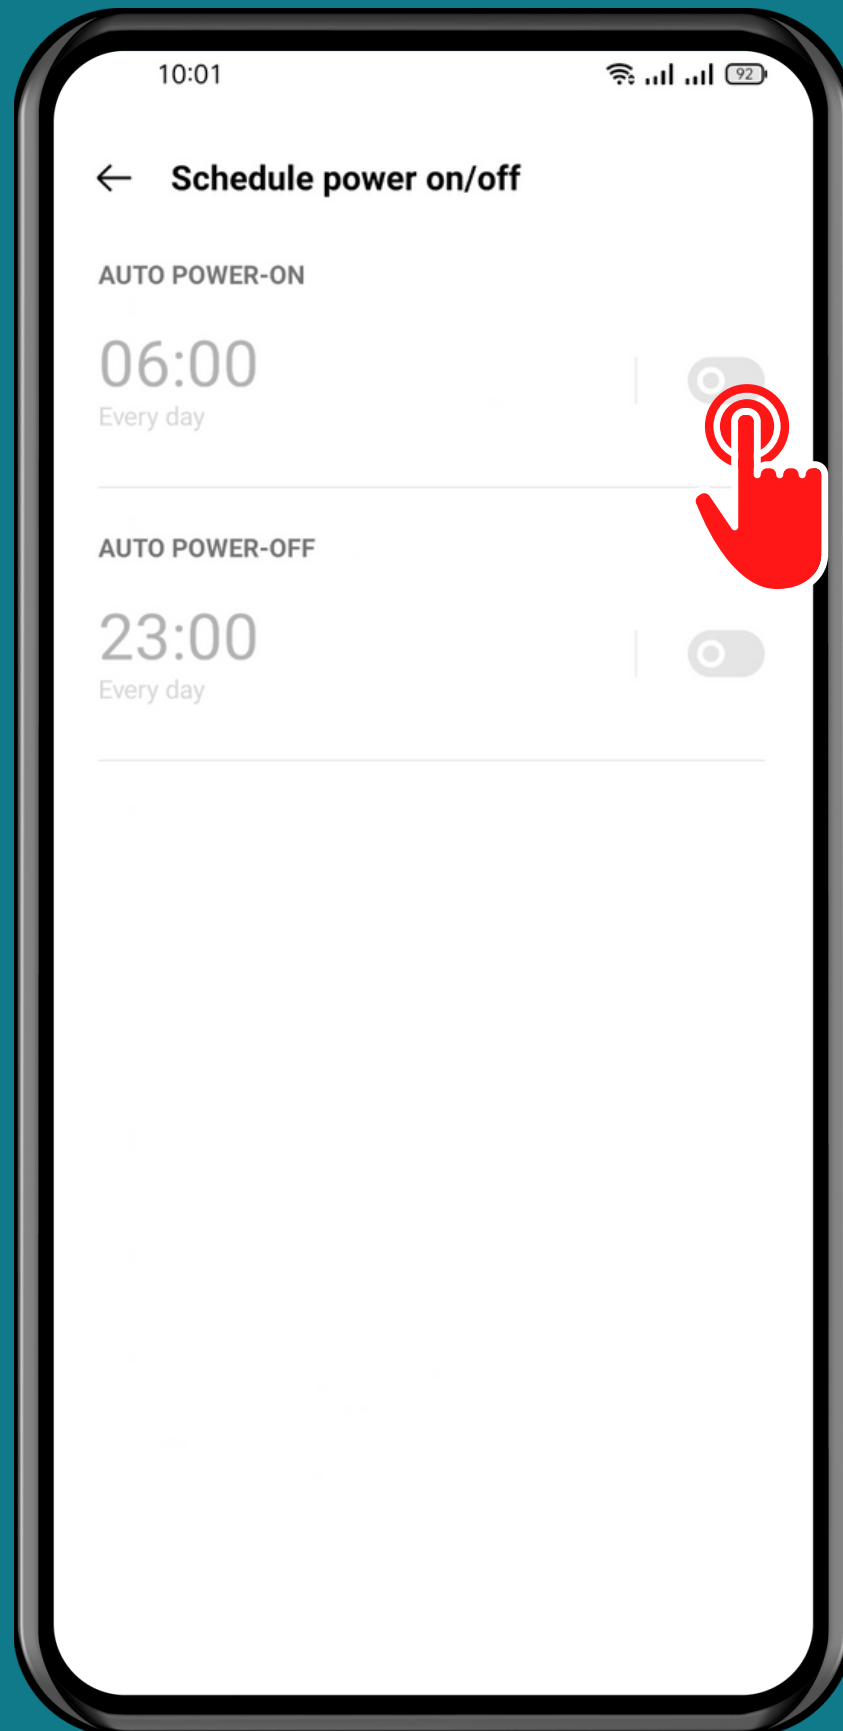

# Turn On/Off Auto Power-on/off

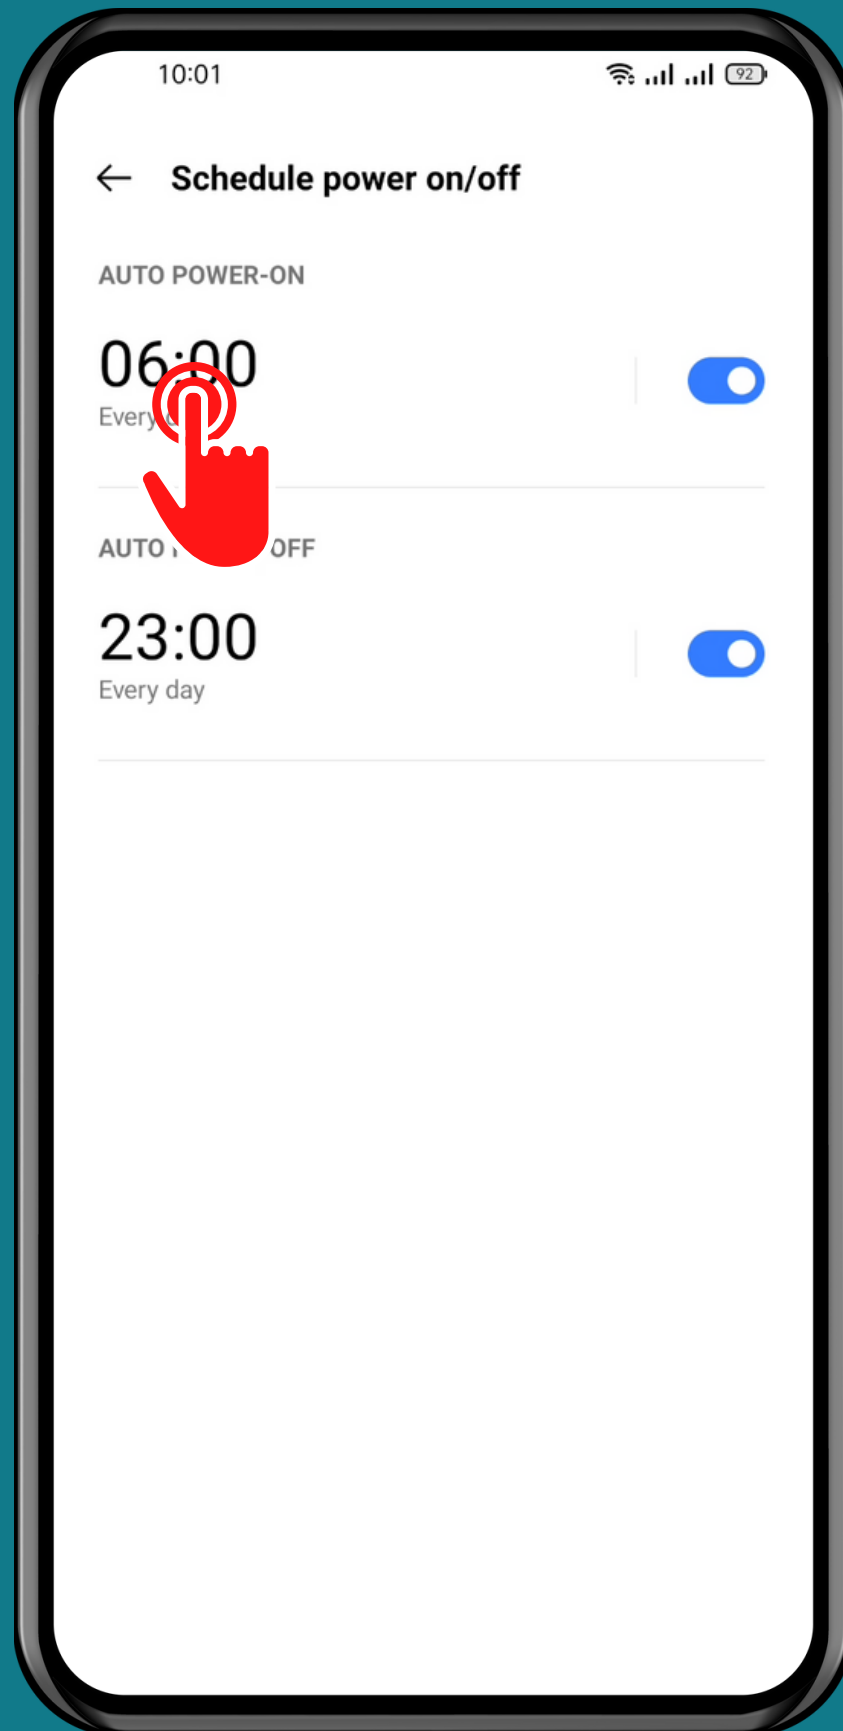

# Set the Time

Done!