


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF ANDROID BEAM




Tap on
Settings

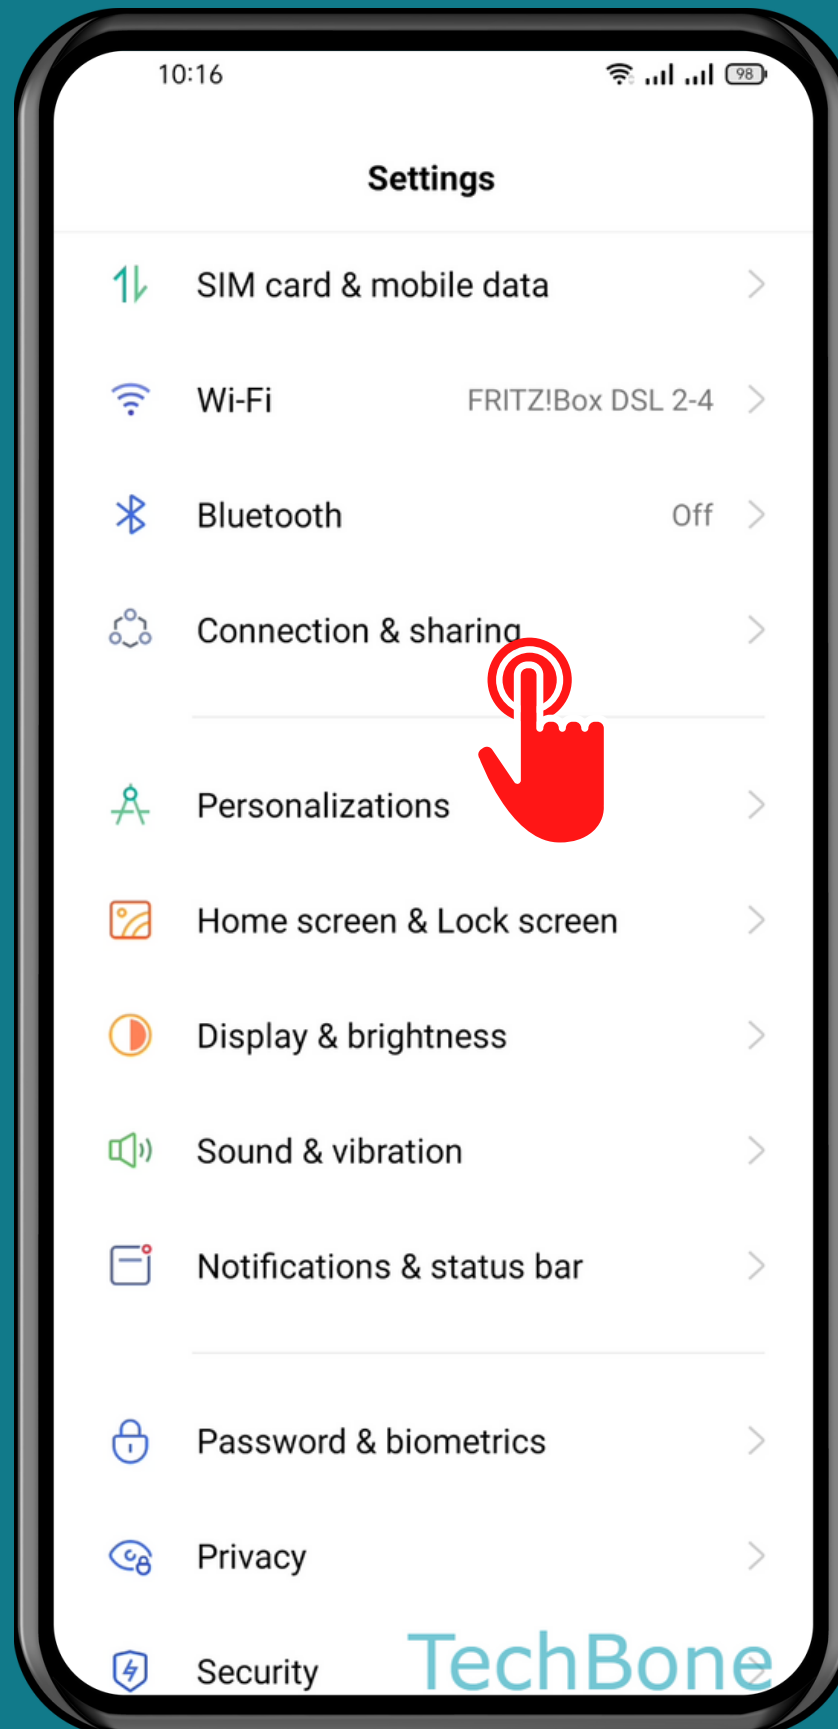


Tap on Connection & sharing

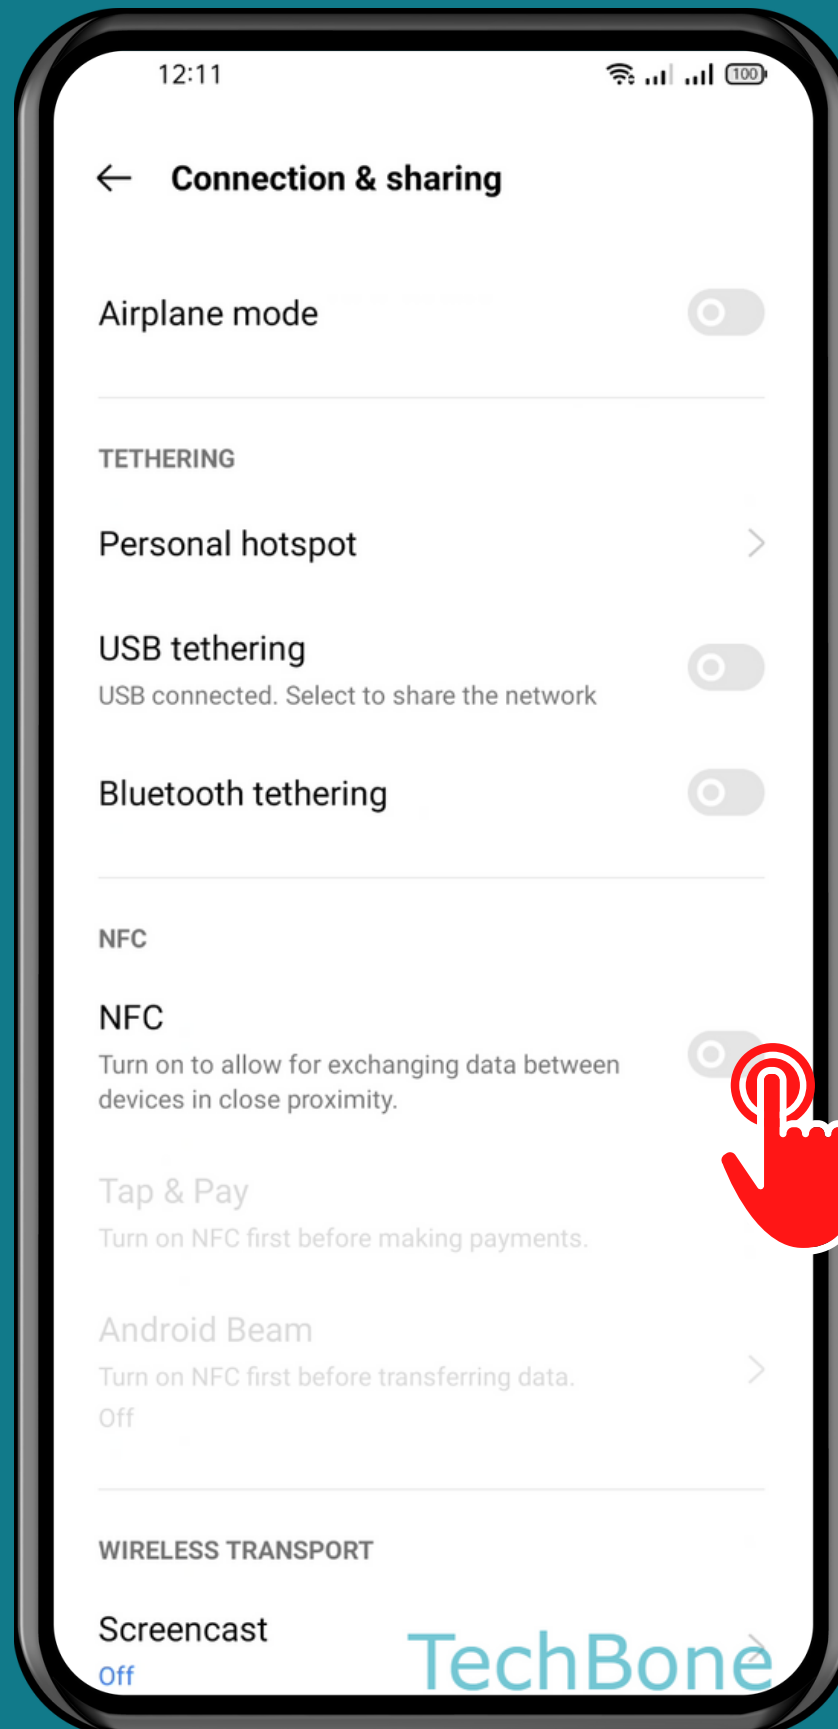

Turn On NFC

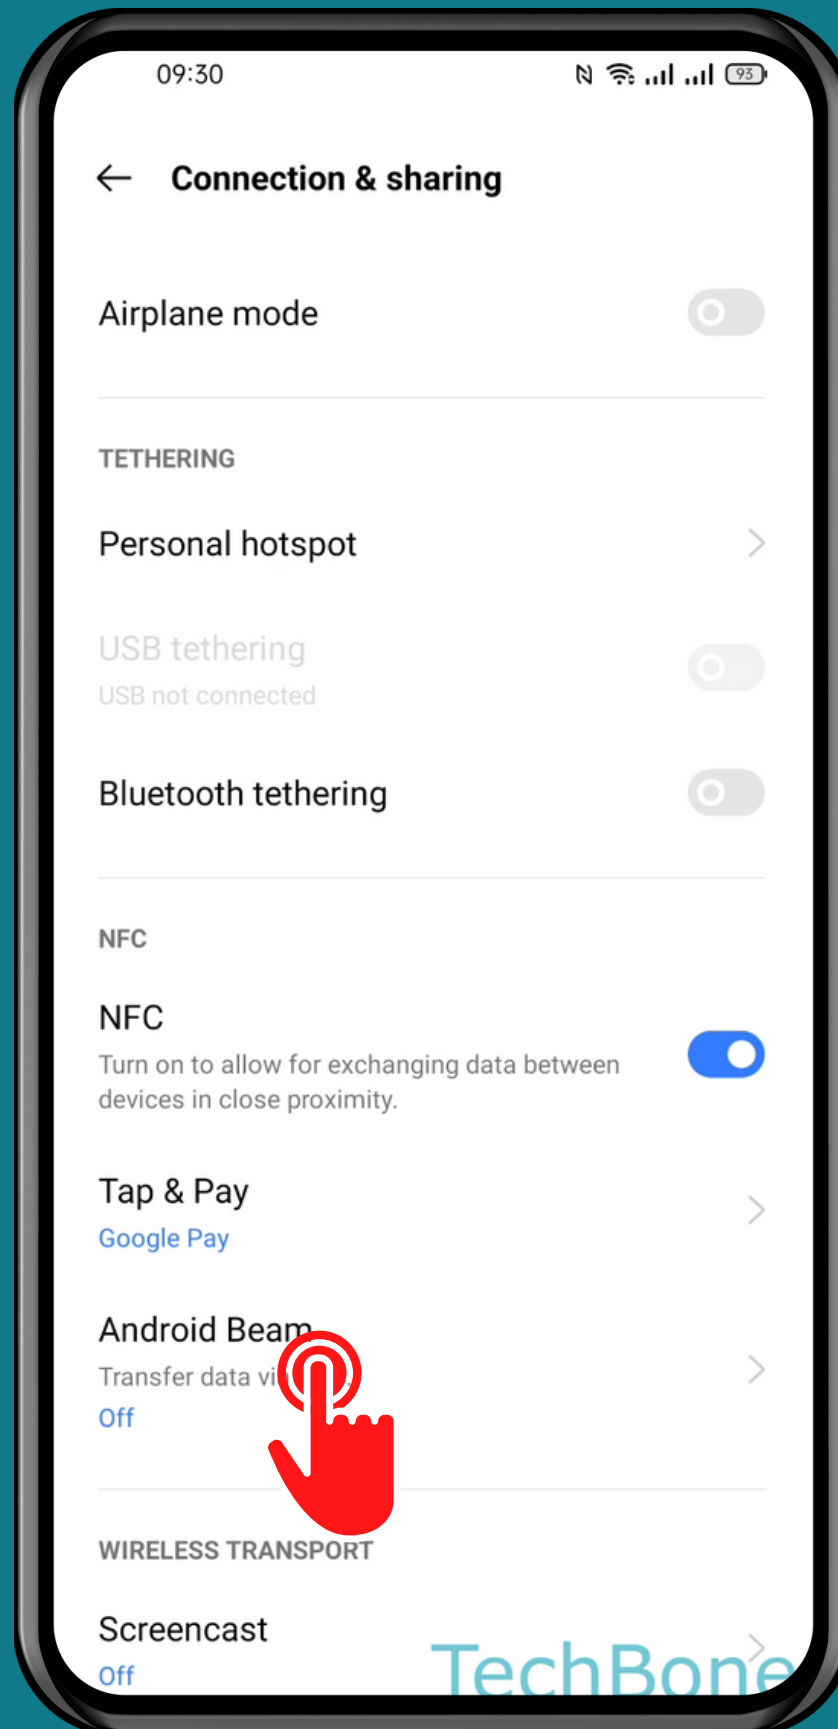

Tap on Android Beam

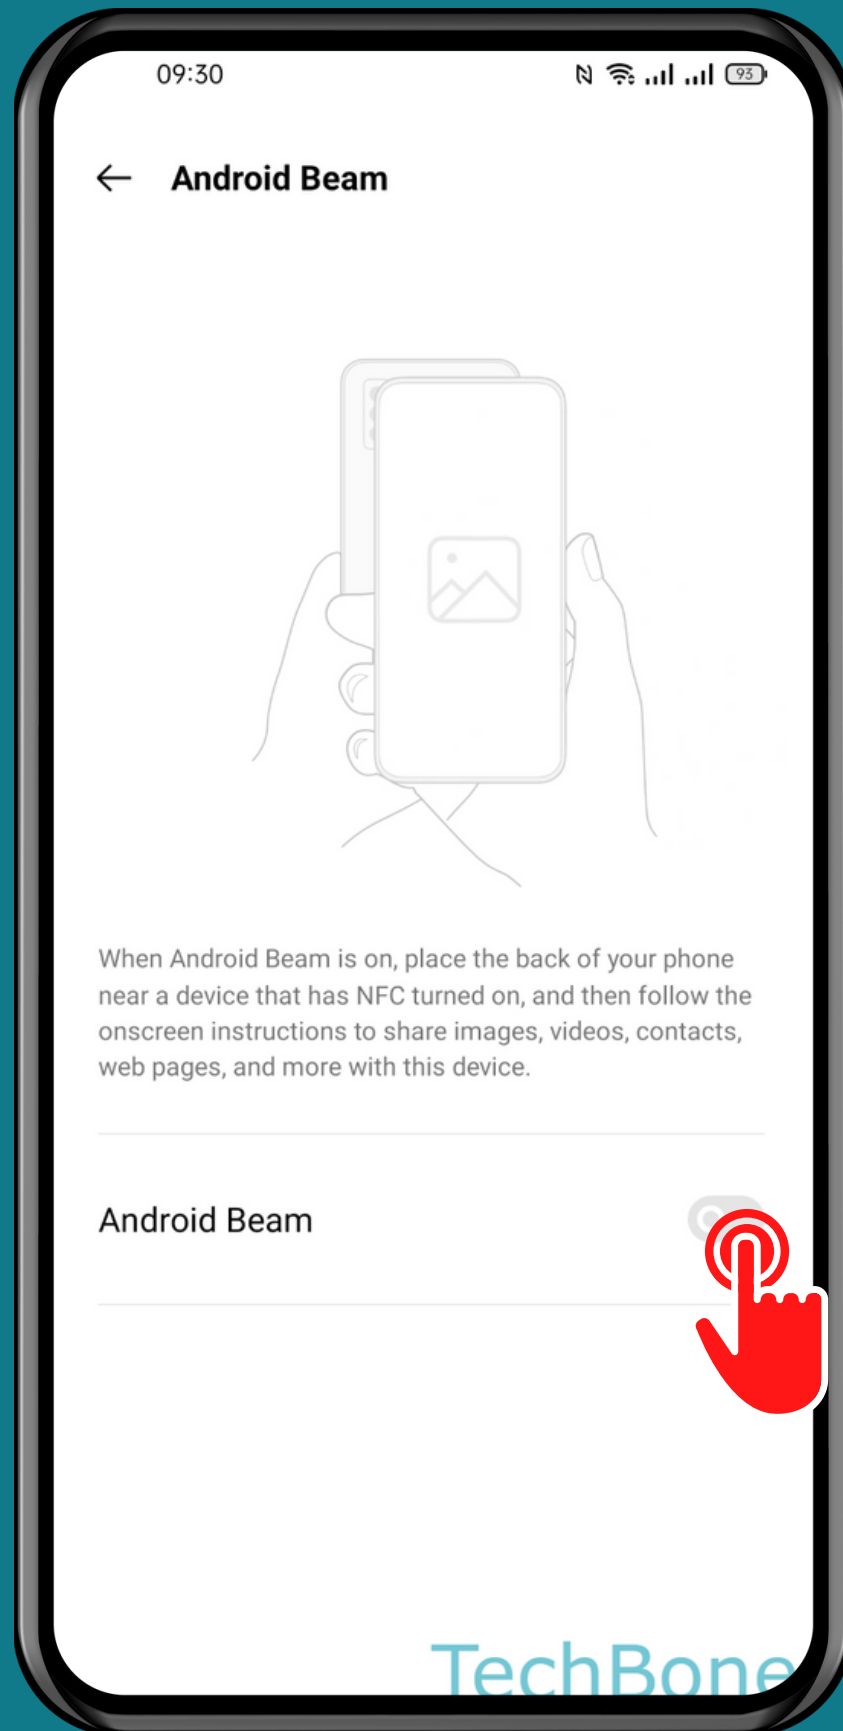

Turn On/Off Android Beam

Done!