



REALME

Phone - Android 11 - realme UI 2


# HOW TO TURN ON/OFF CALL FORWARDING

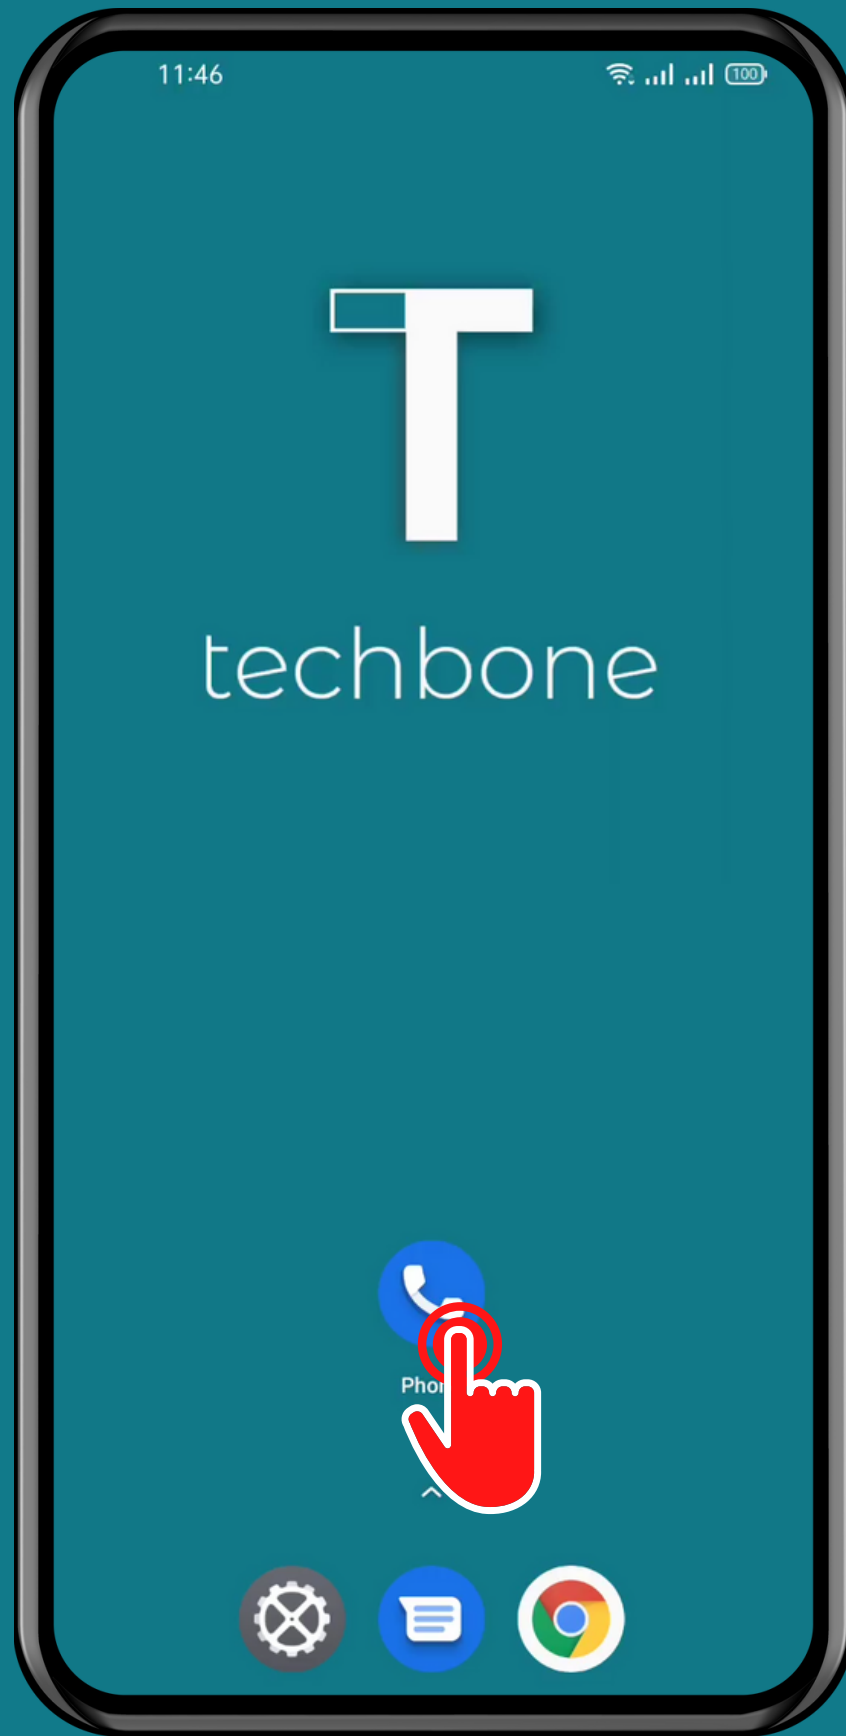


# Tap on Phone

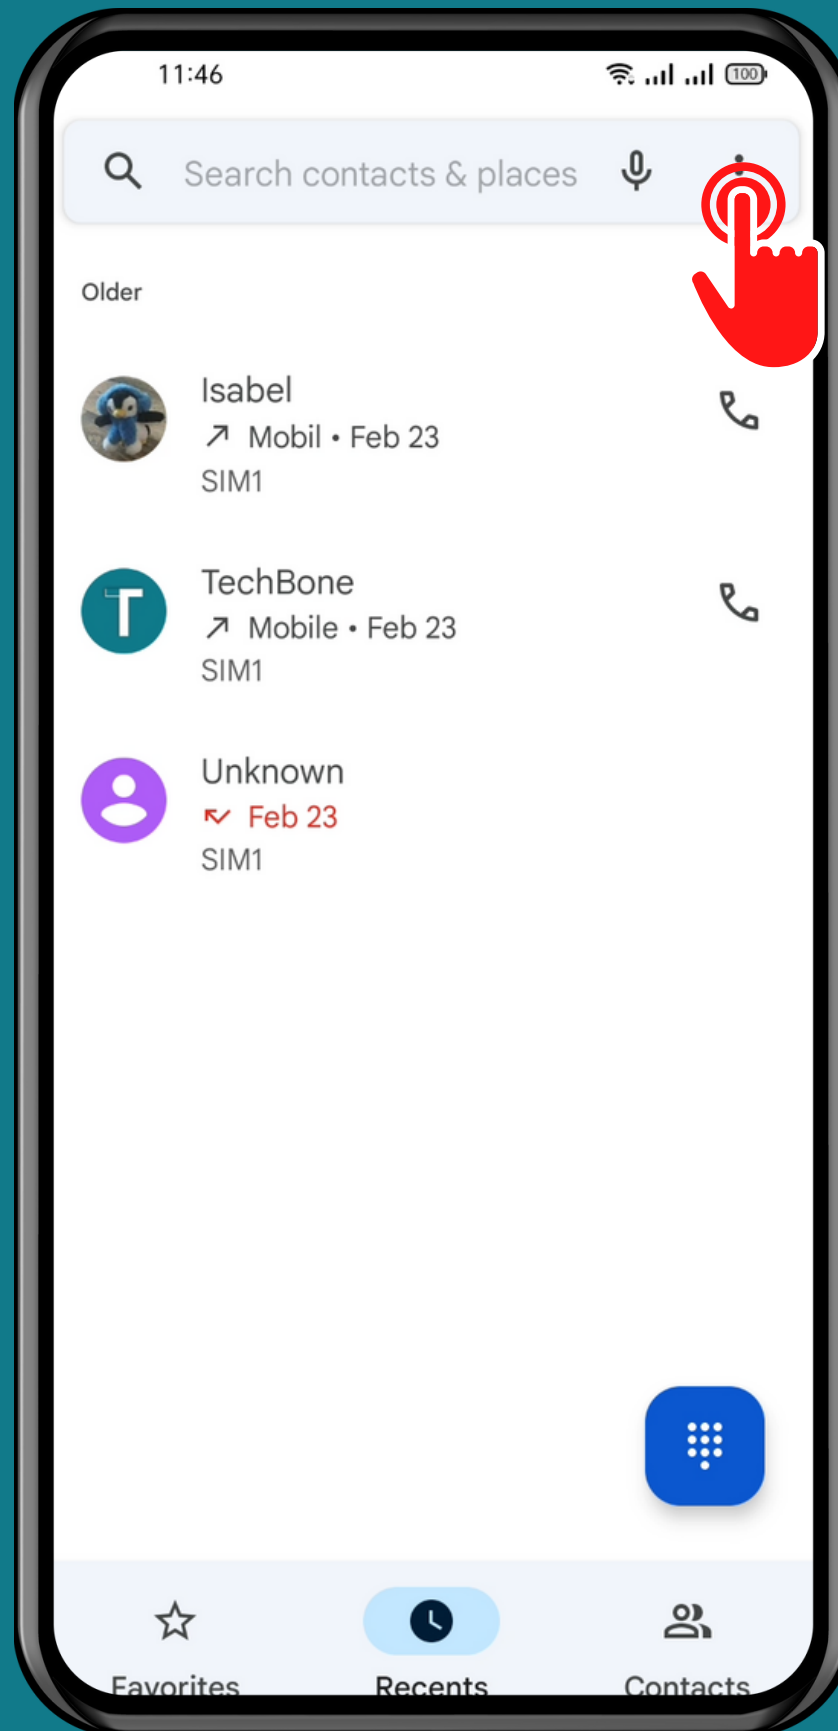


# Open the Menu

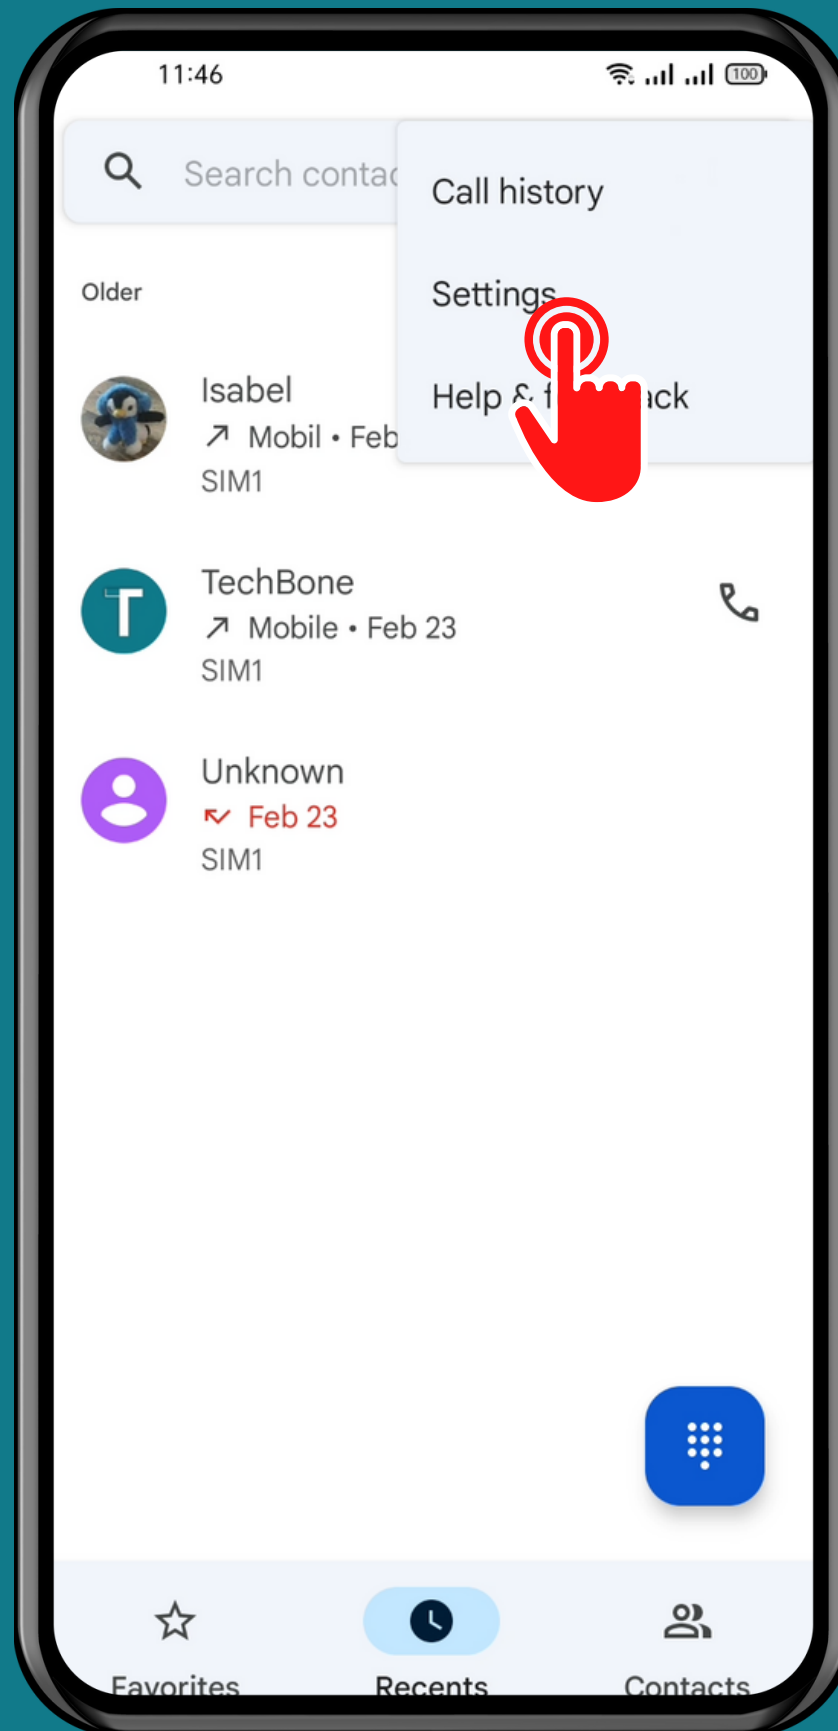


# Tap on Settings

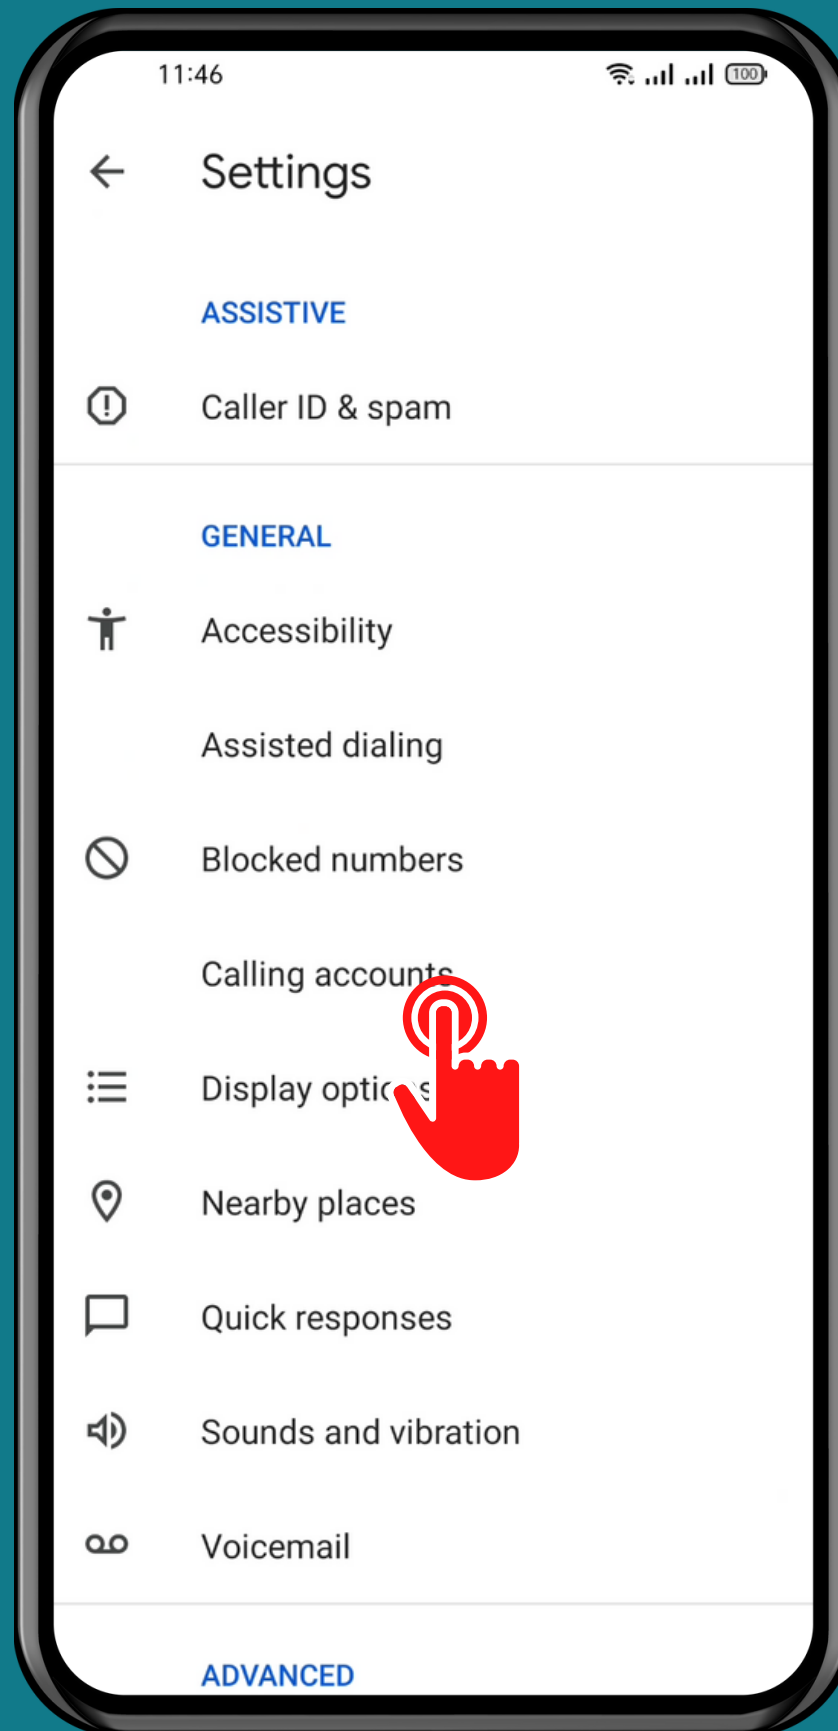


# Tap on Calling accounts

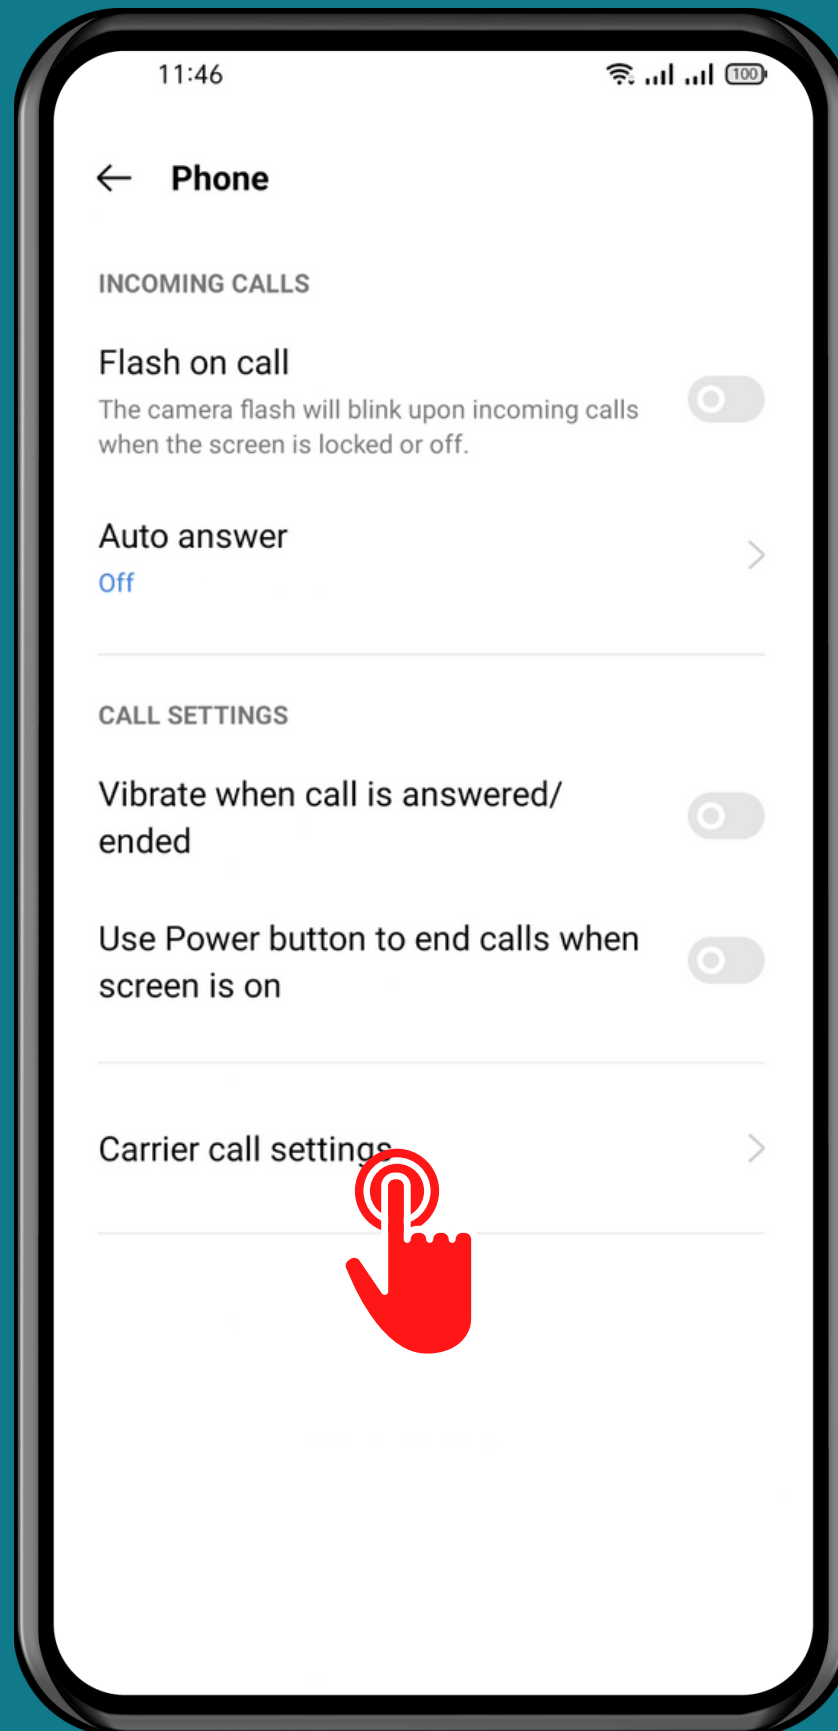

# Tap on Carrier call settings

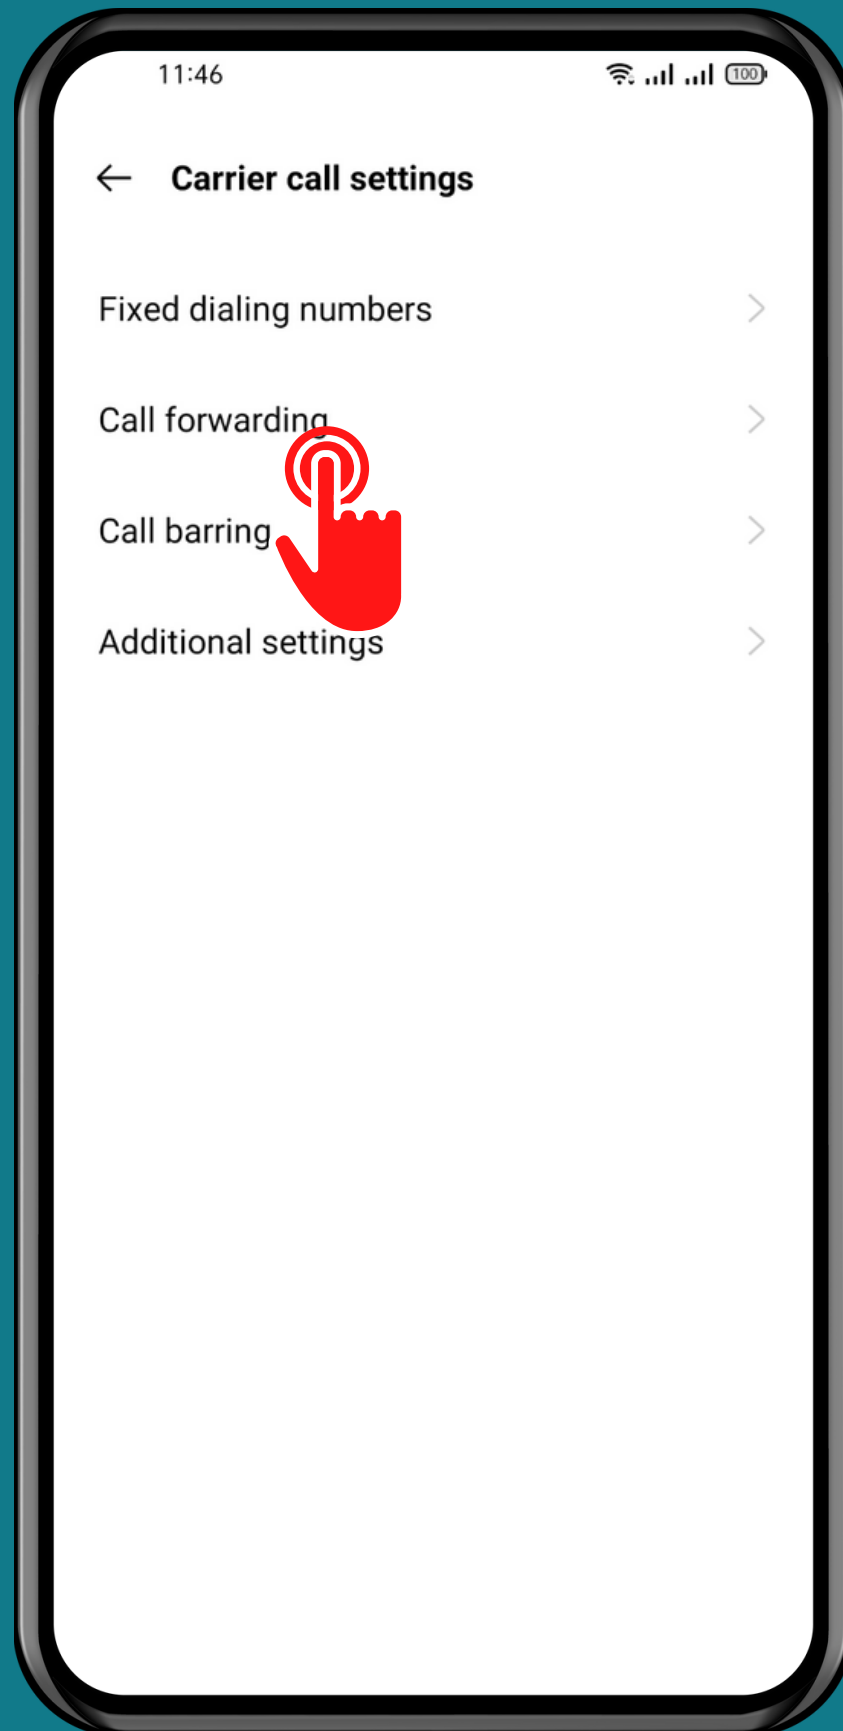


Tap on  
Call forwarding

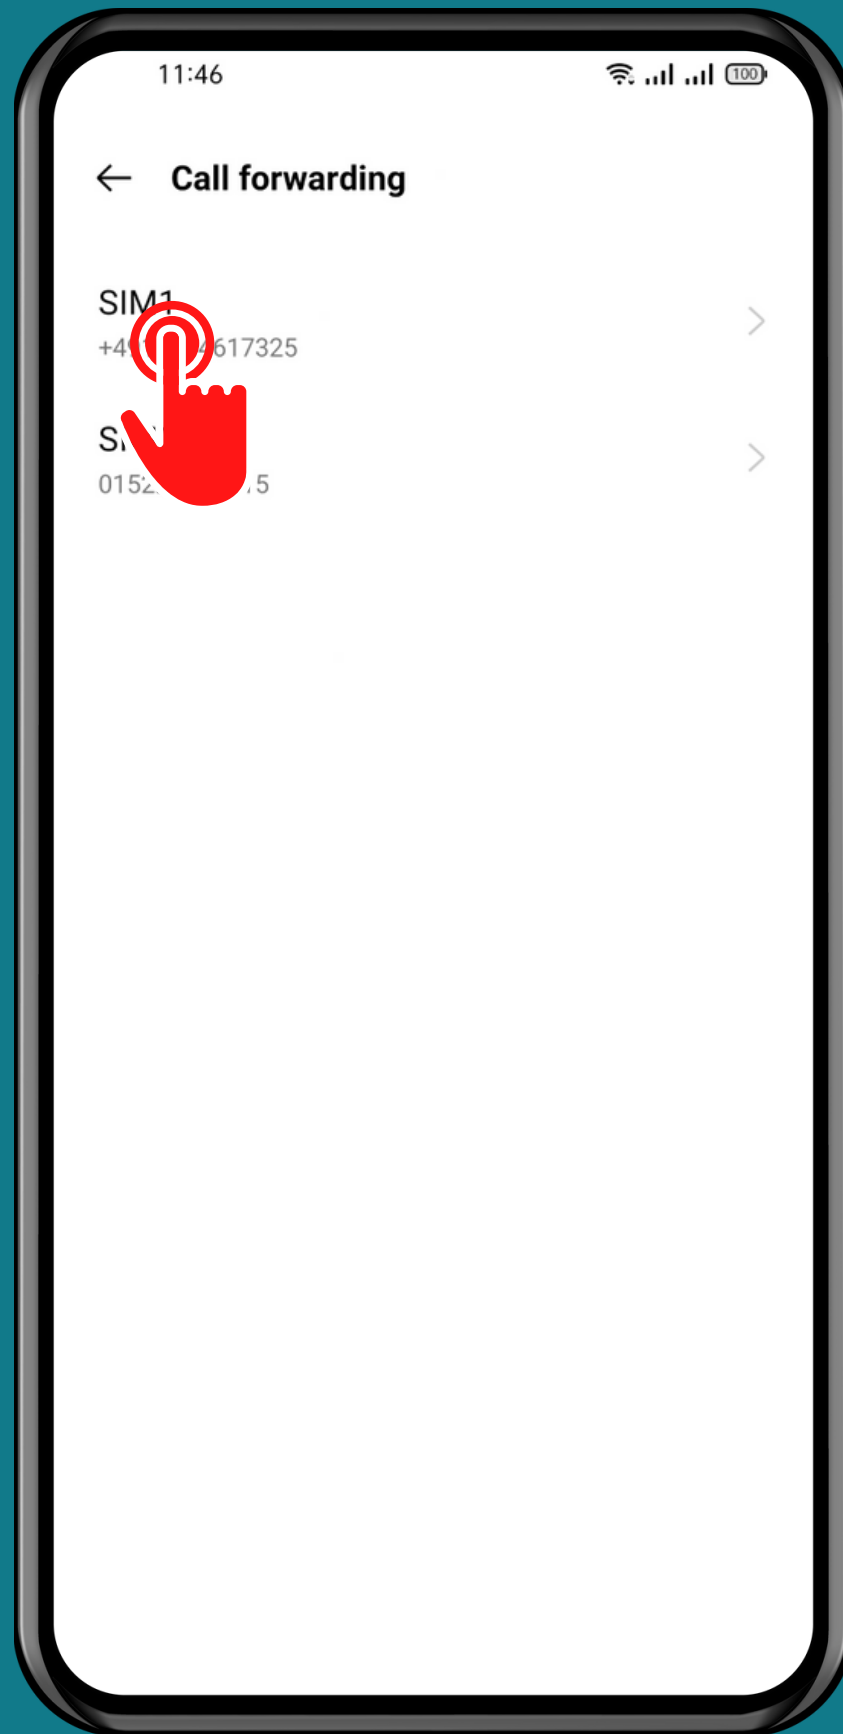

Choose a  
**SIM card** (Dual SIM)



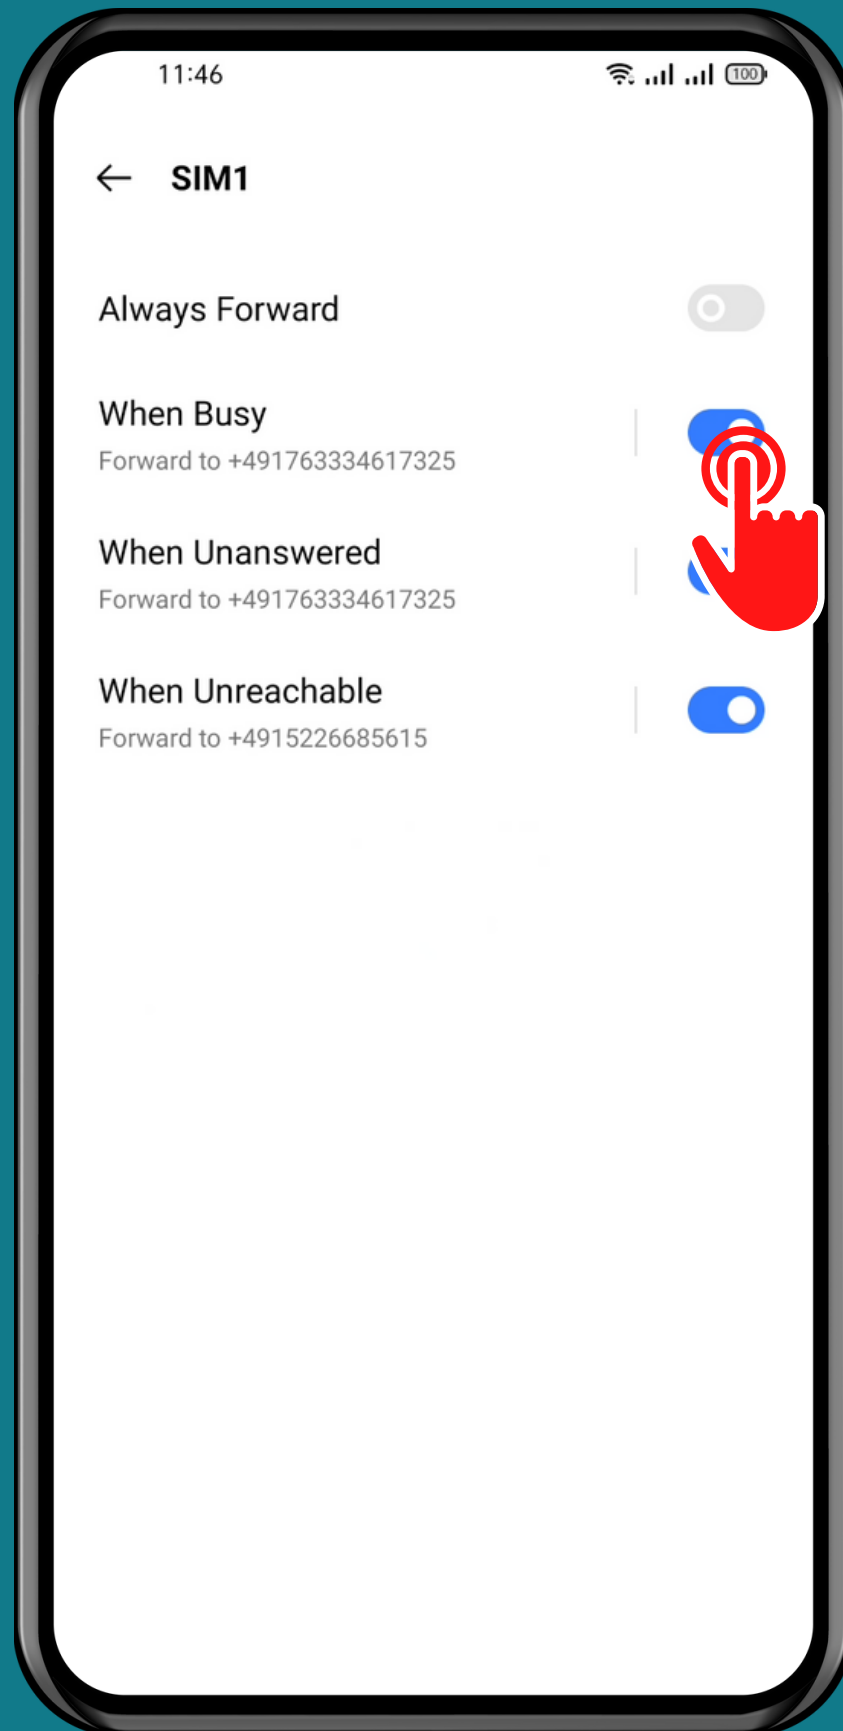

# Turn On/Off an Option

Done!