


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF KEYBOARD DATA SHARING




Tap on
Settings

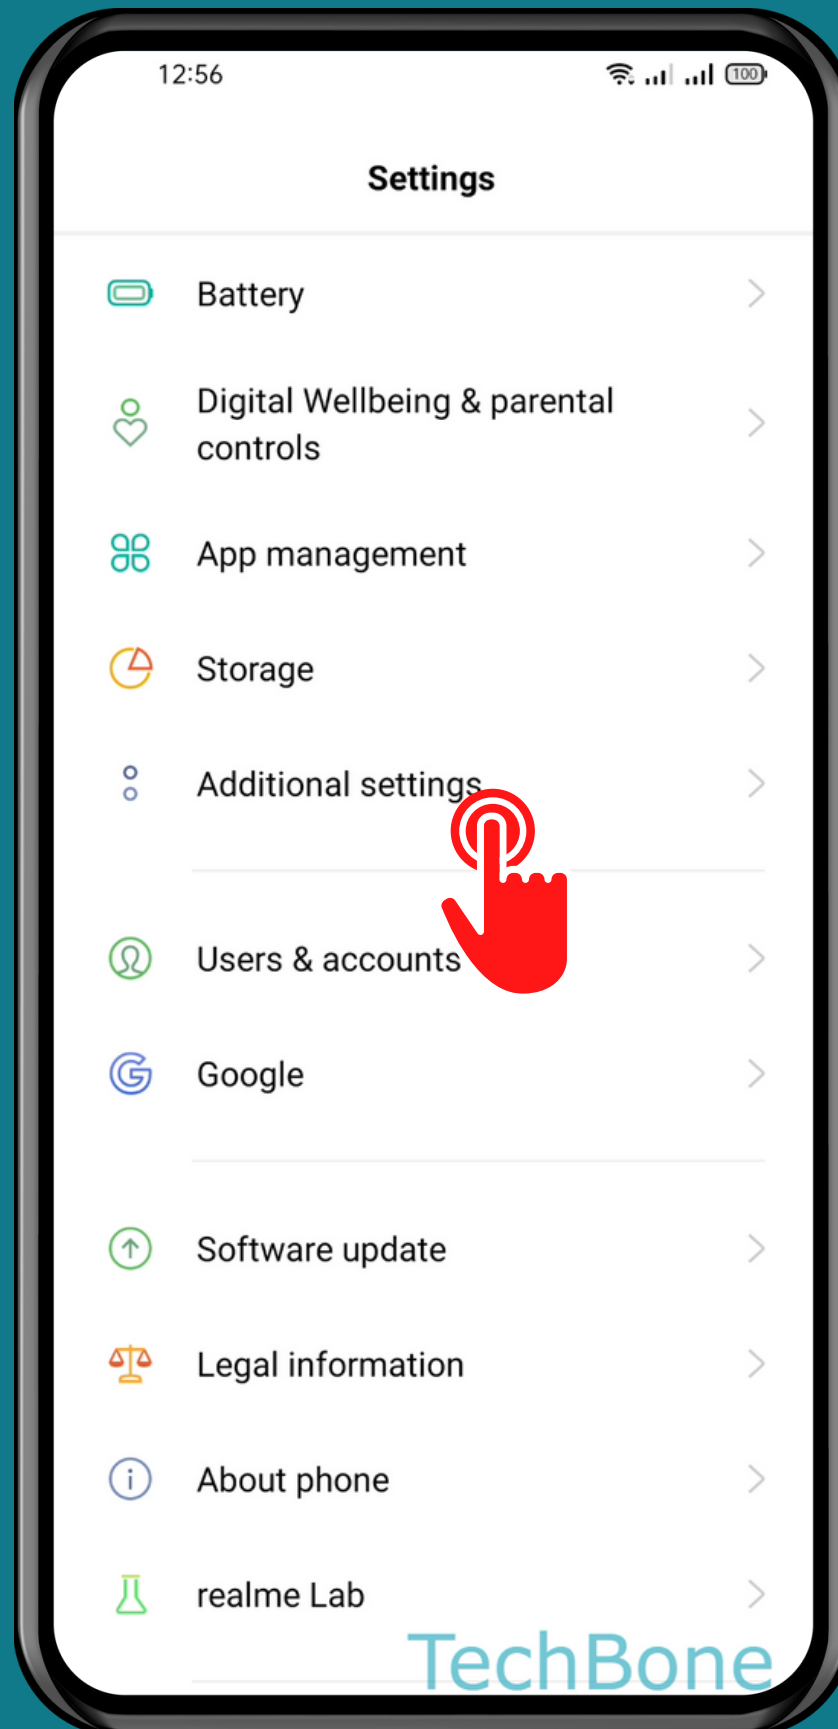


Tap on Additional settings

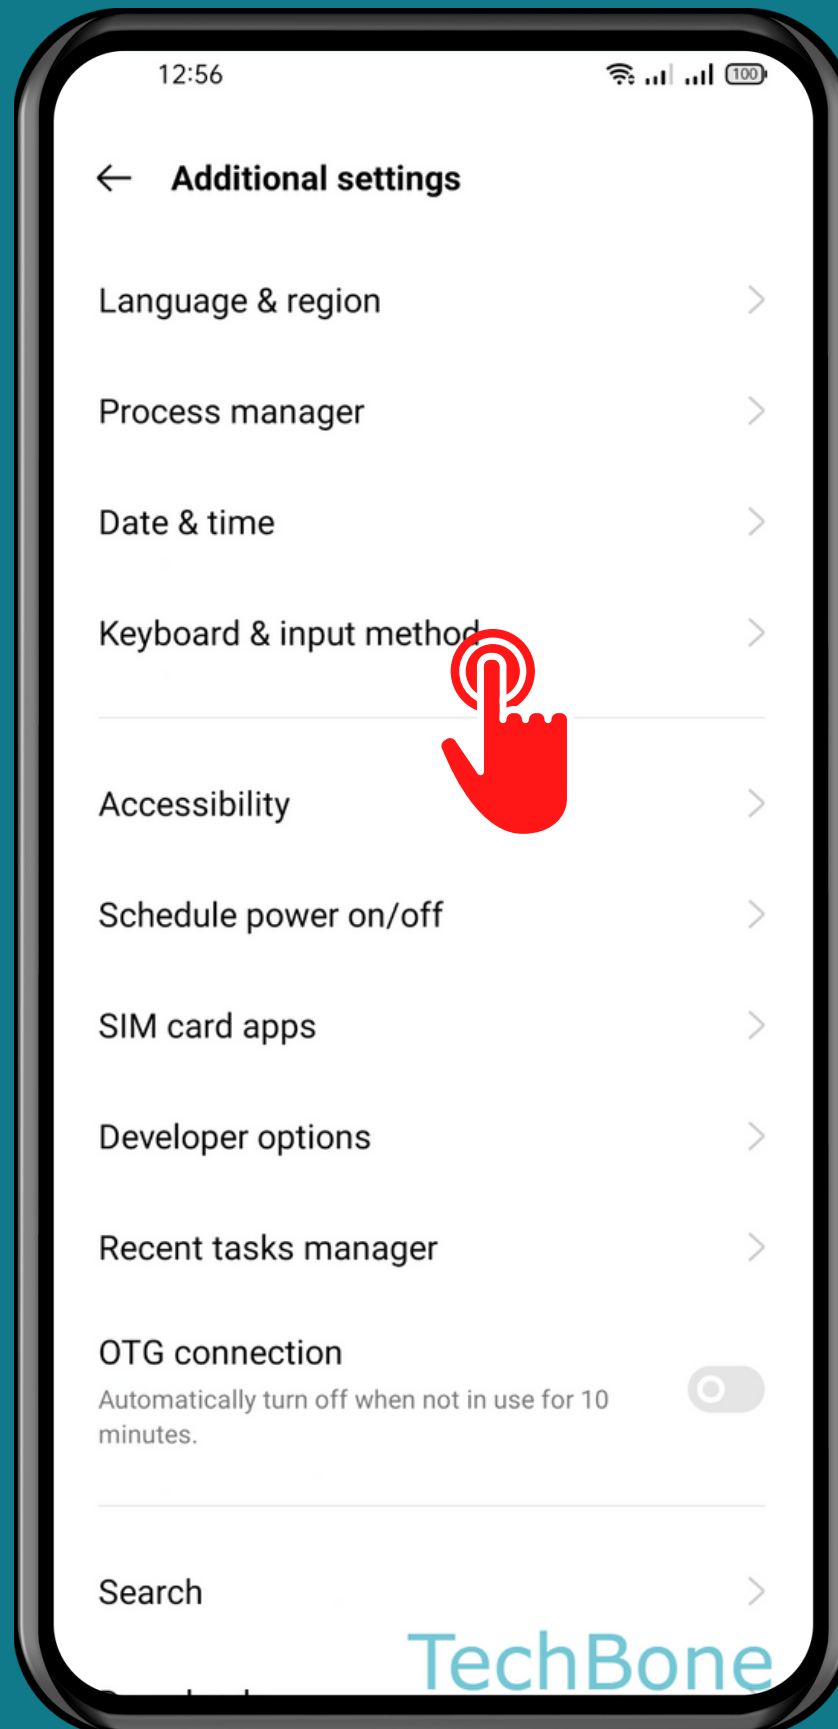


Tap on Keyboard & input method

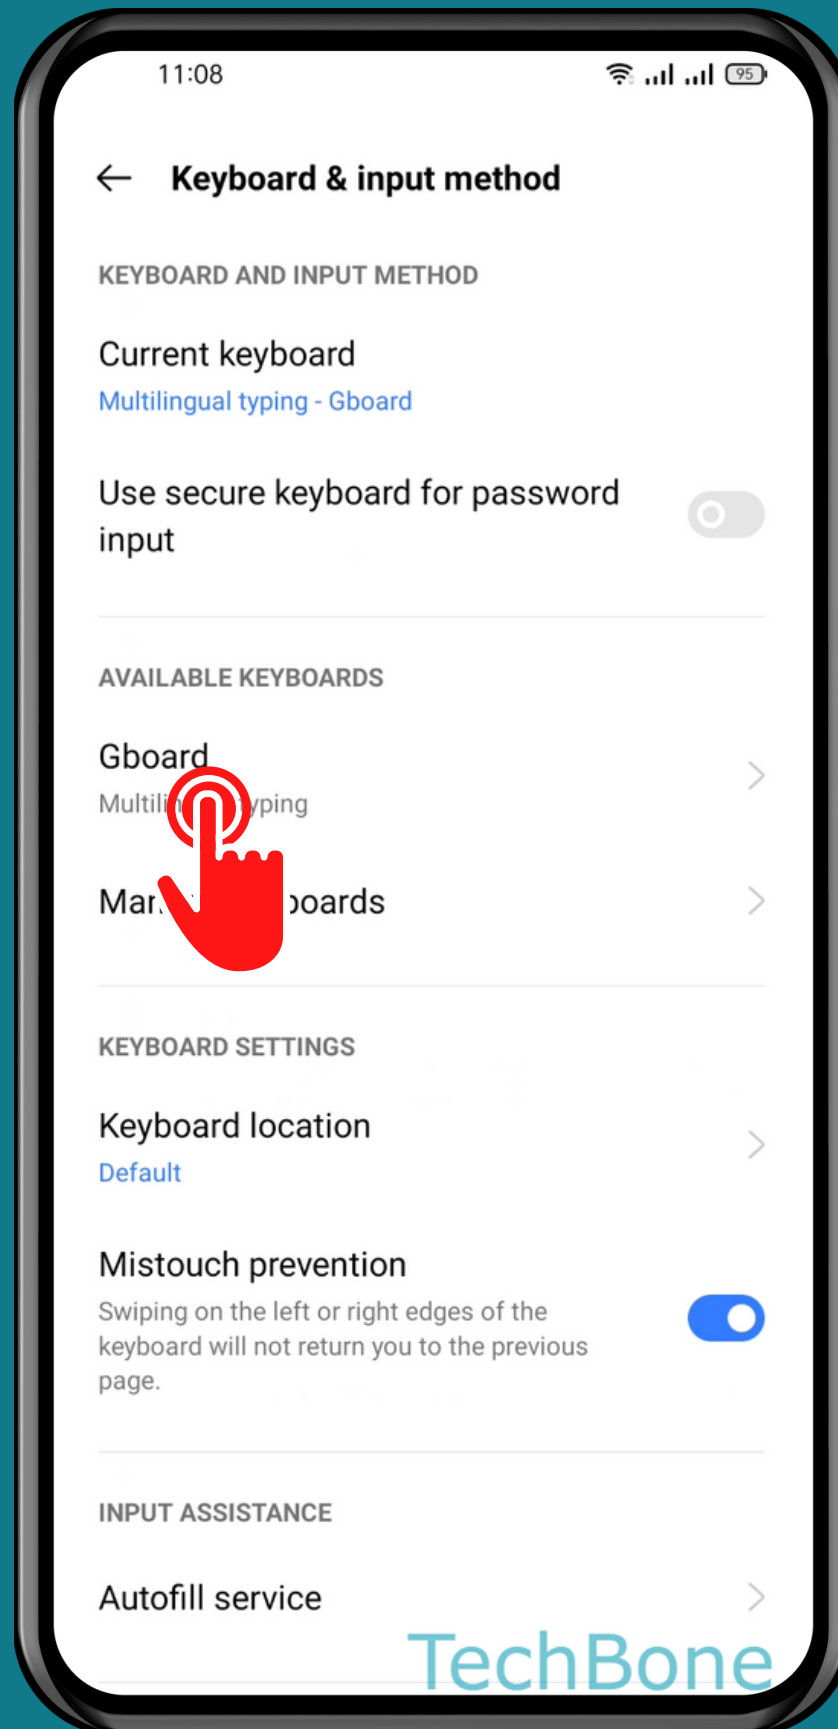

Tap on
Gboard

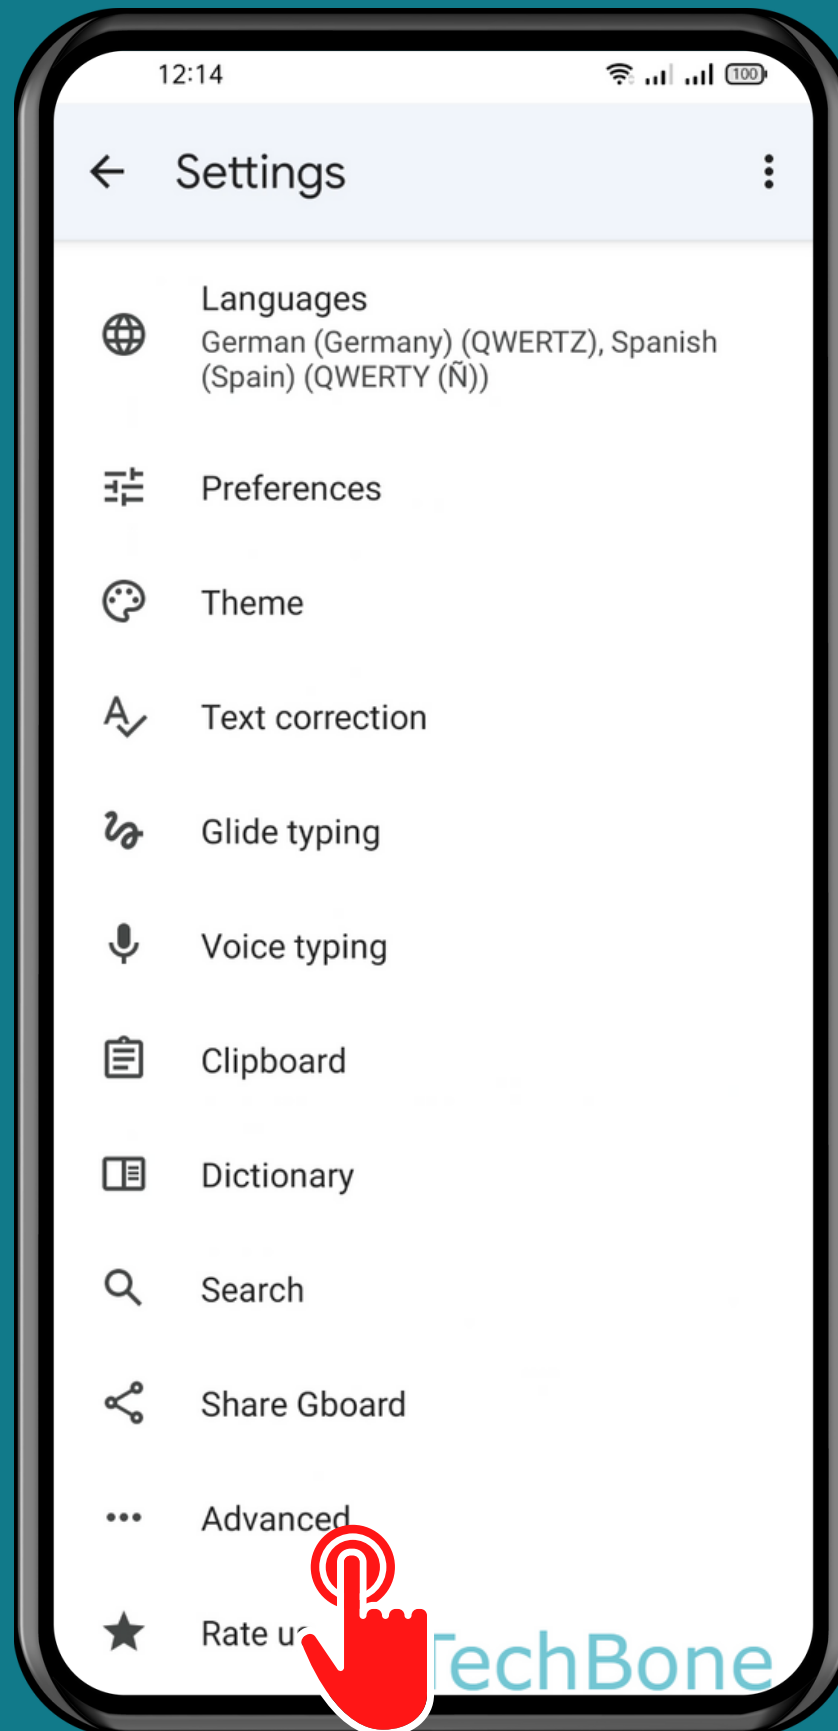

Tap on Advanced

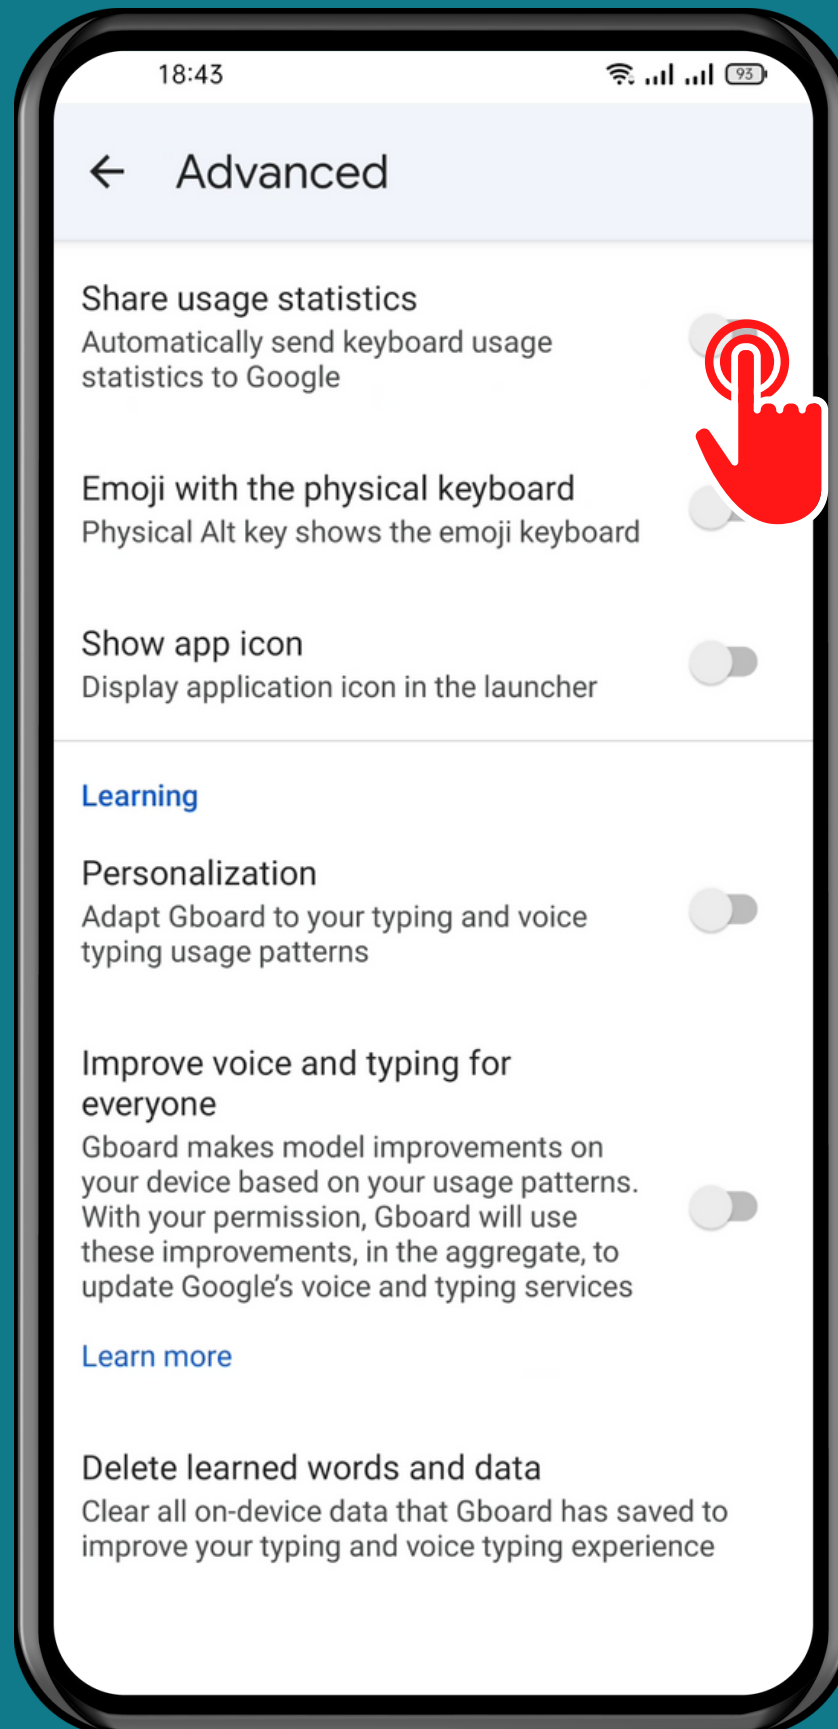

Turn On/Off Share usage statistics

Done!