


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF USB-OTG



Tap on
Settings

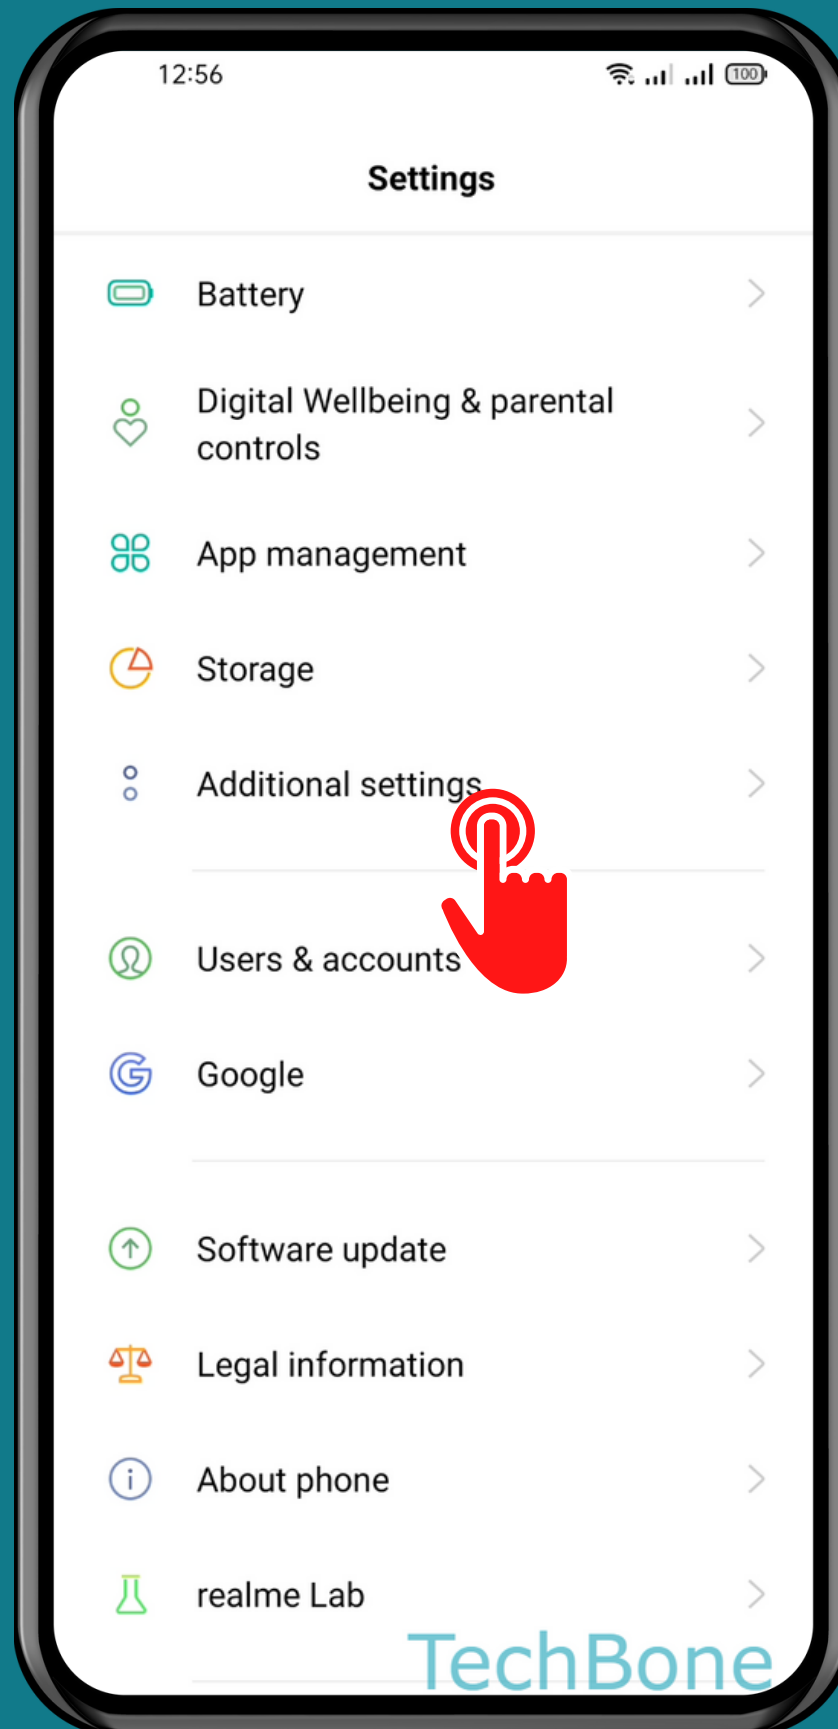

Tap on Additional settings

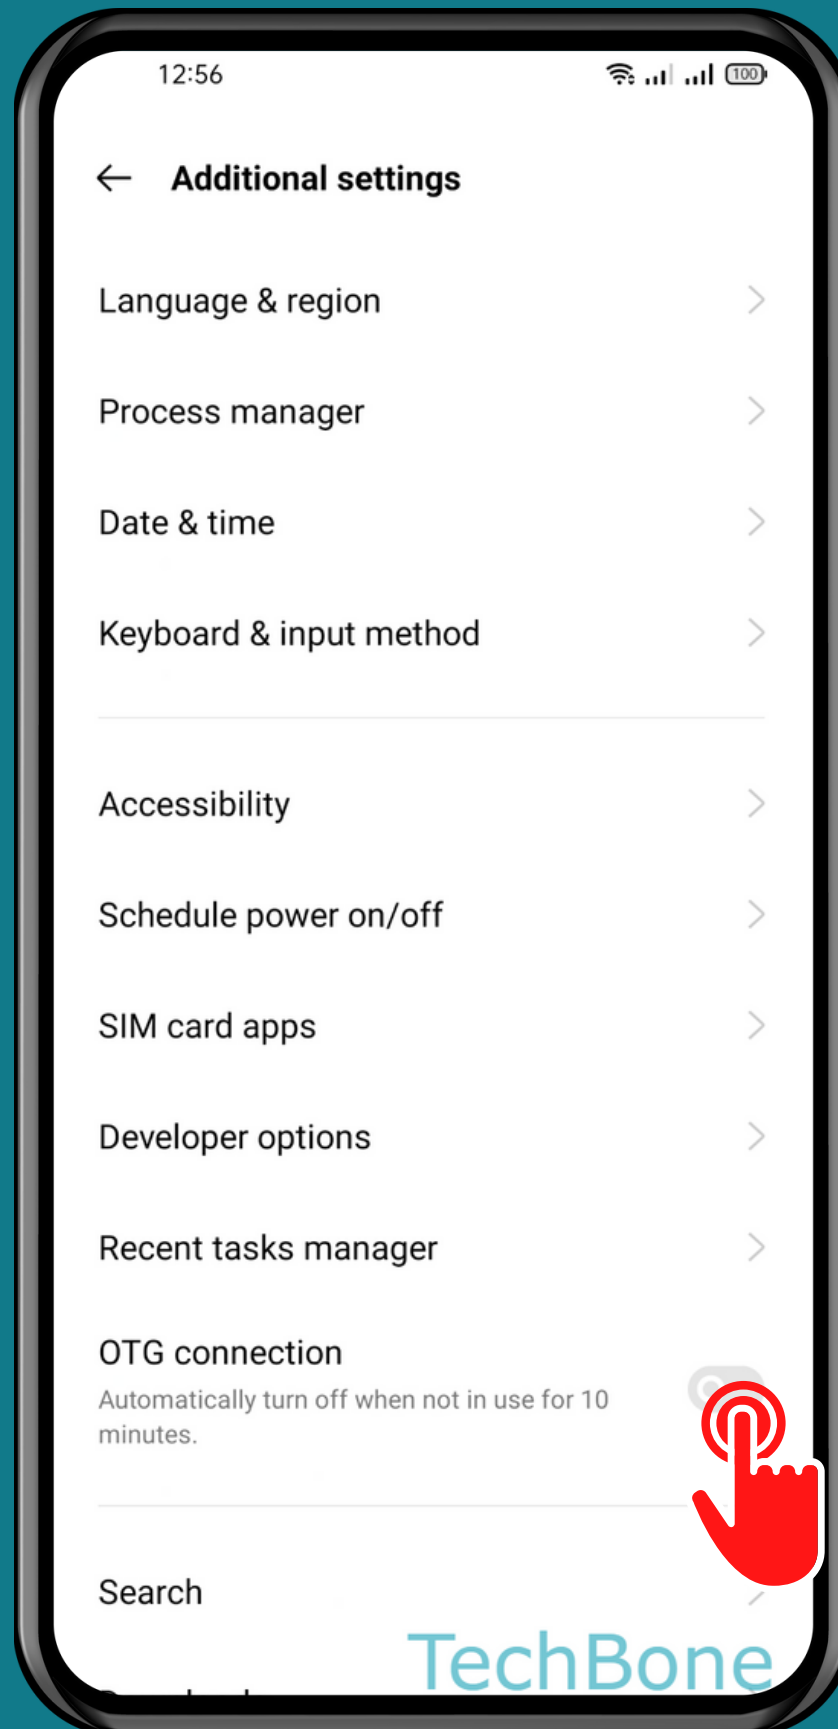

Turn On/Off OTG connection

Done!