


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF VOLTE CALLS




Tap on
Settings

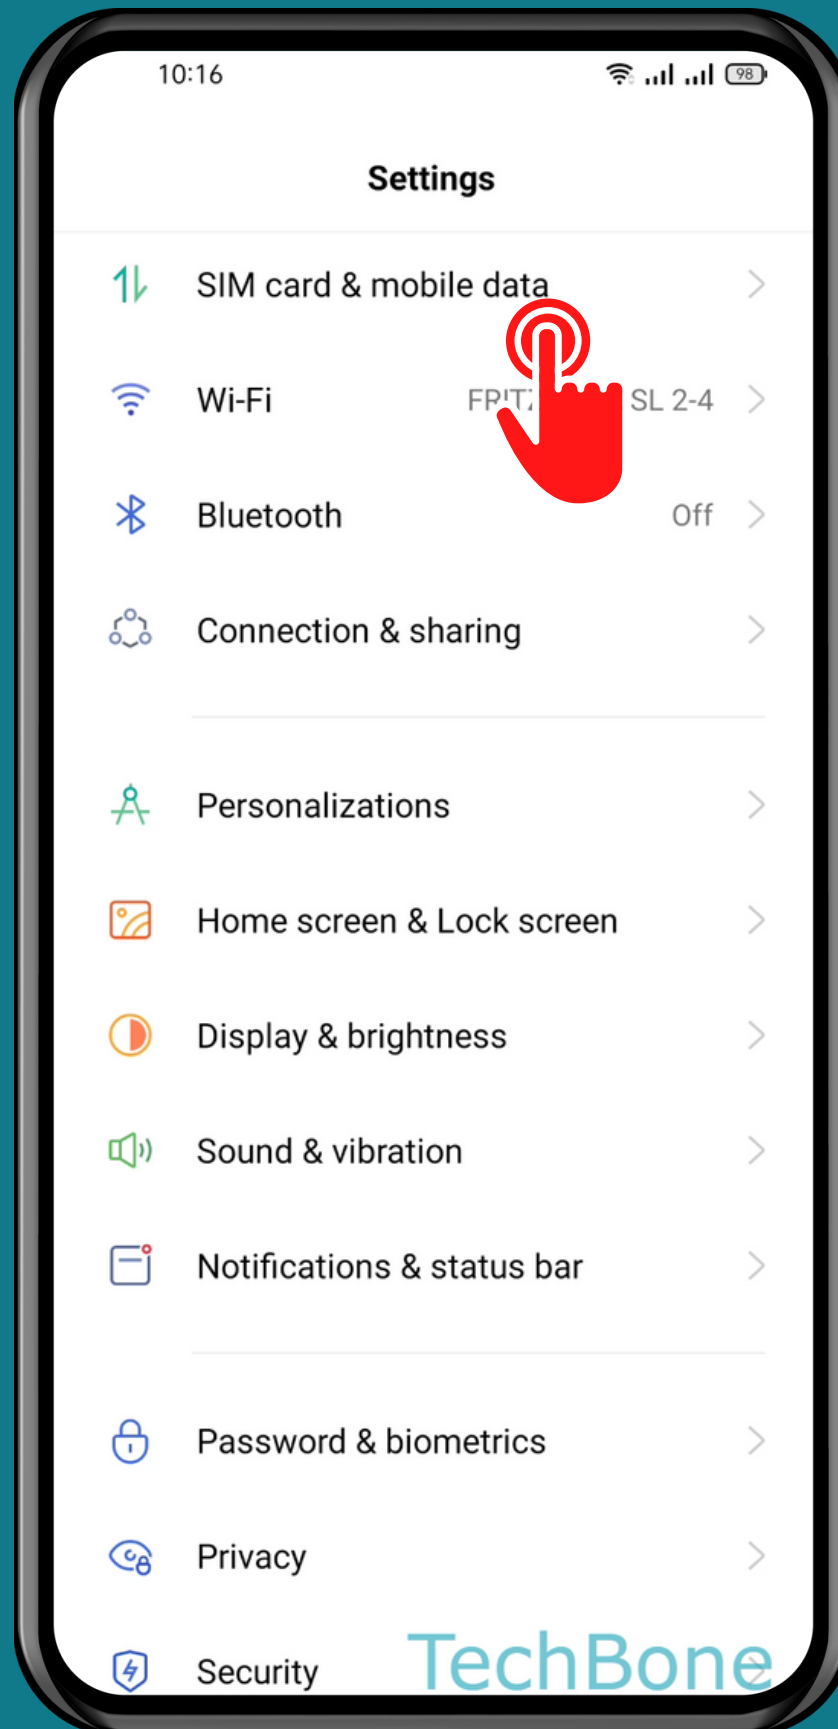

Tap on
SIM card &
mobile data

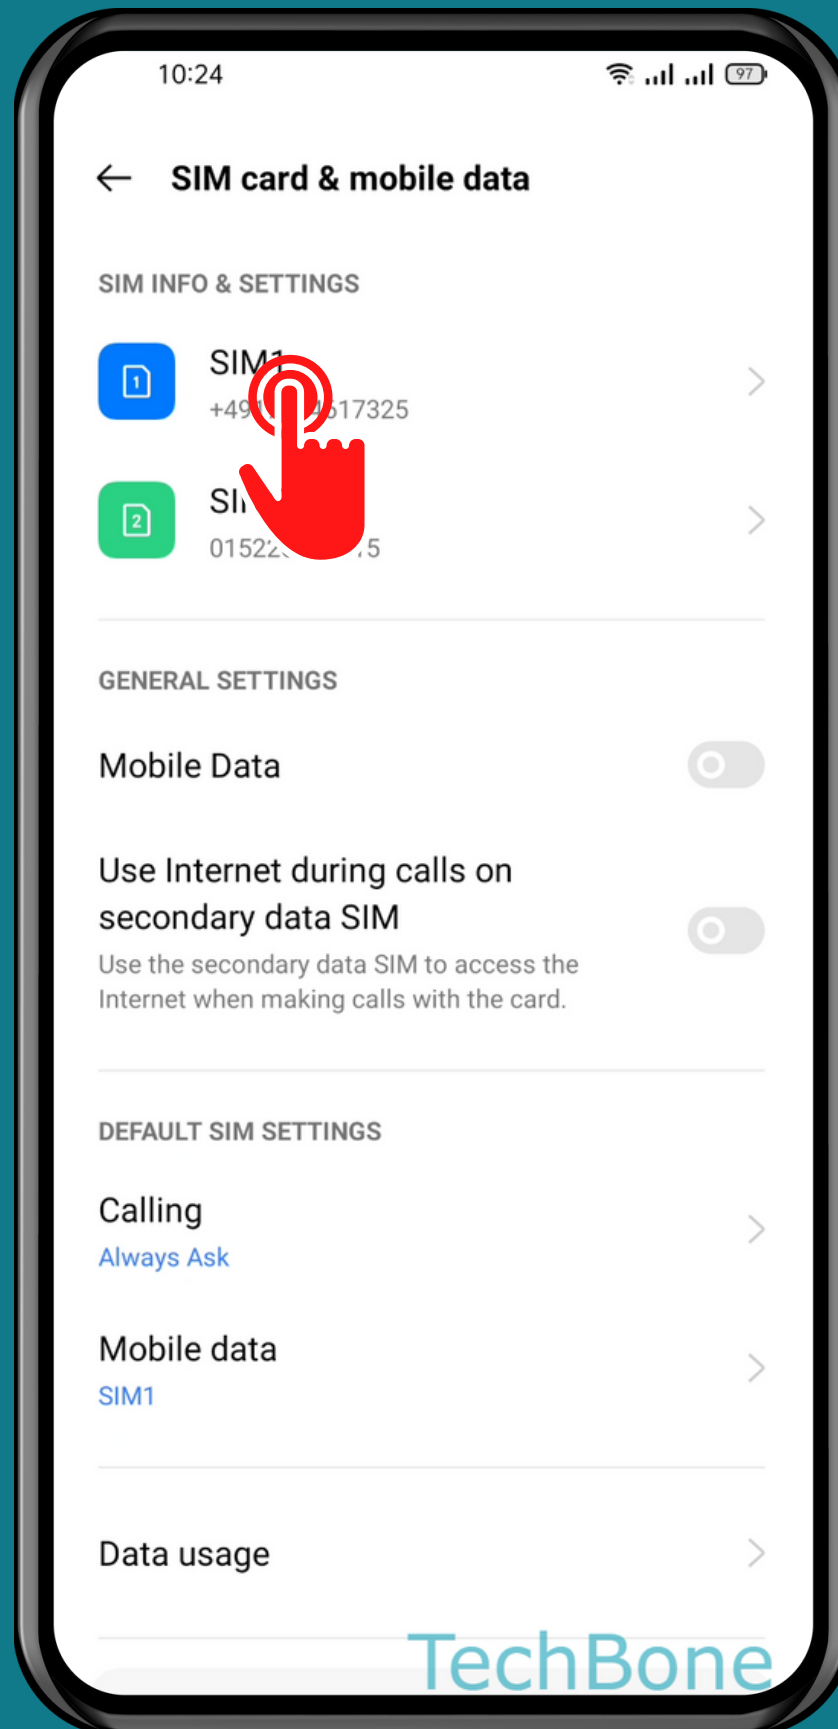

Choose a SIM card

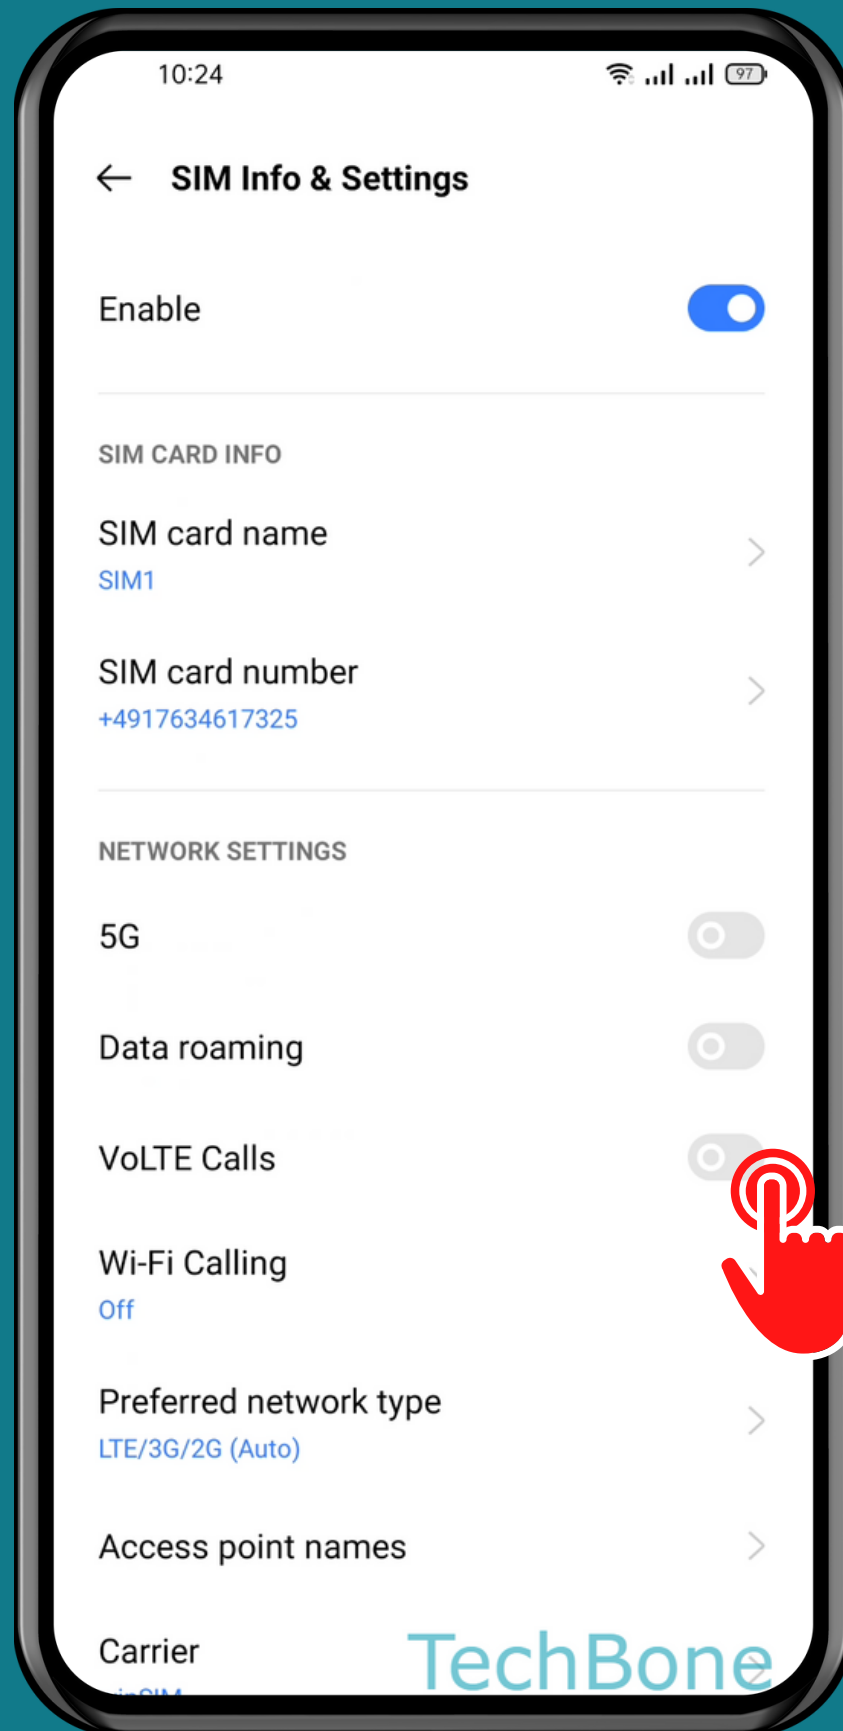

Turn On/Off VoLTE Calls

Done!