


REALME

Android 11 - realme UI 2


MAXIMUM OF ALLOWED CONNECTIONS (PERSONAL HOTSPOT)




Tap on
Settings

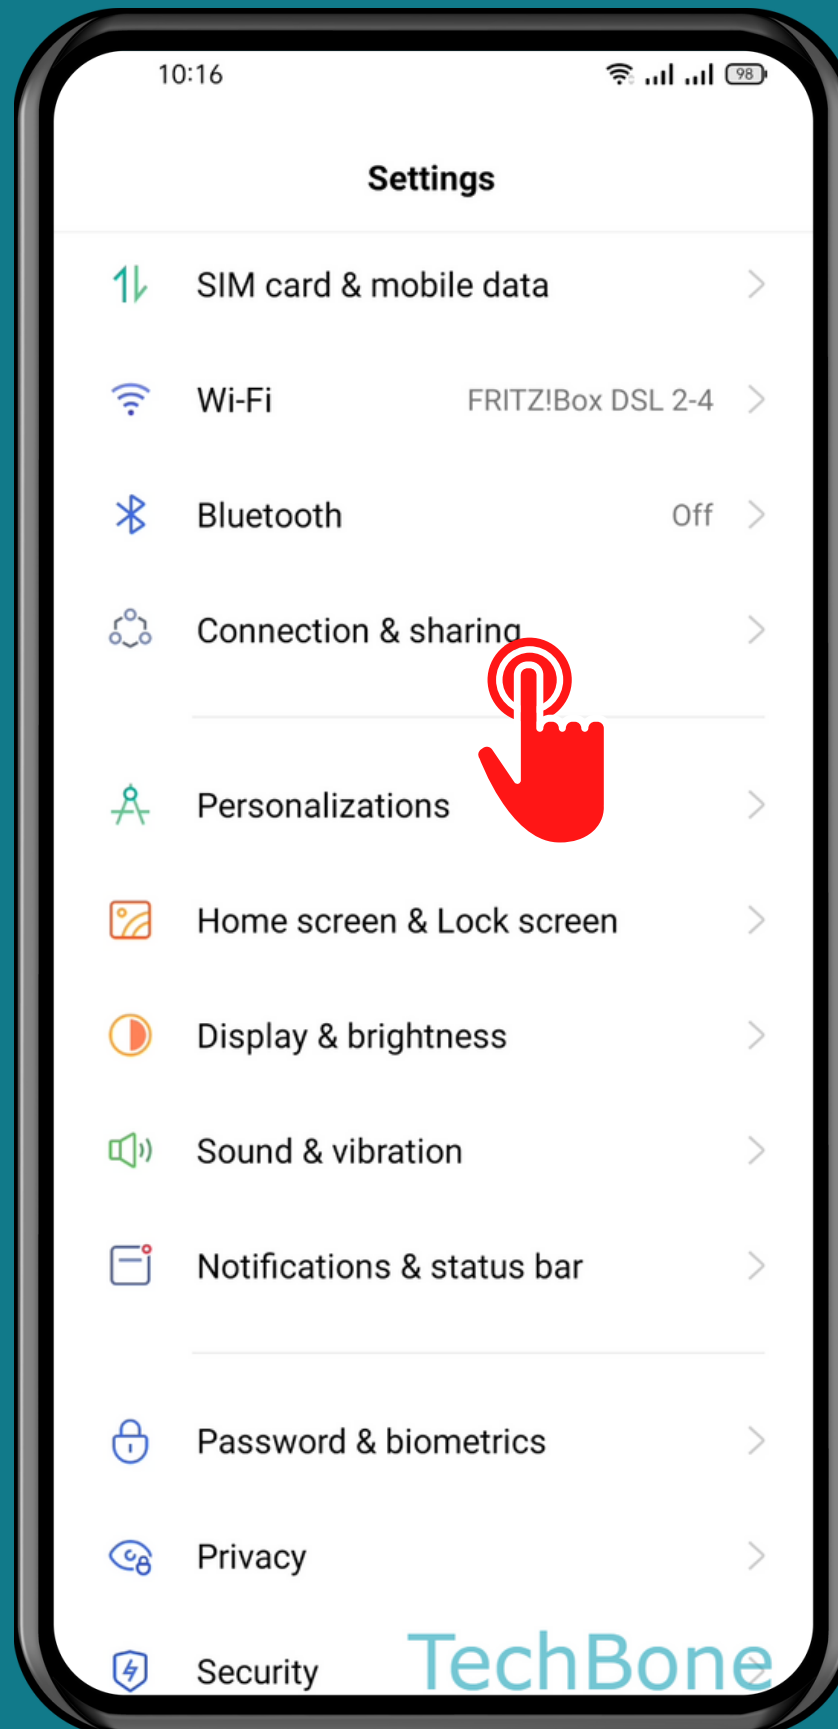


Tap on Connection & sharing

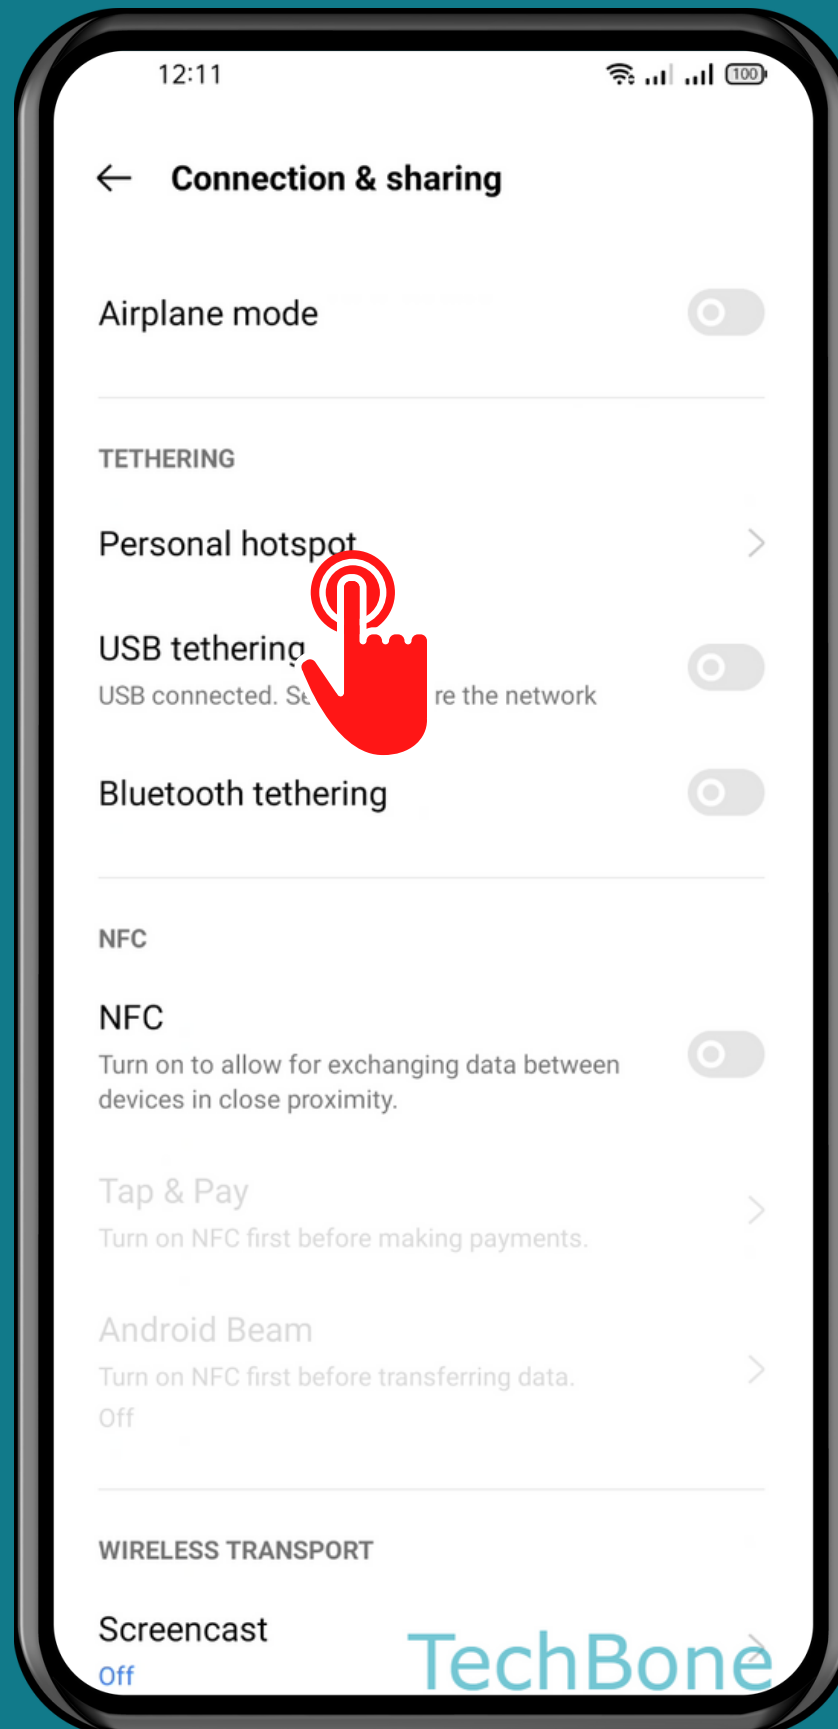


Tap on Personal hotspot

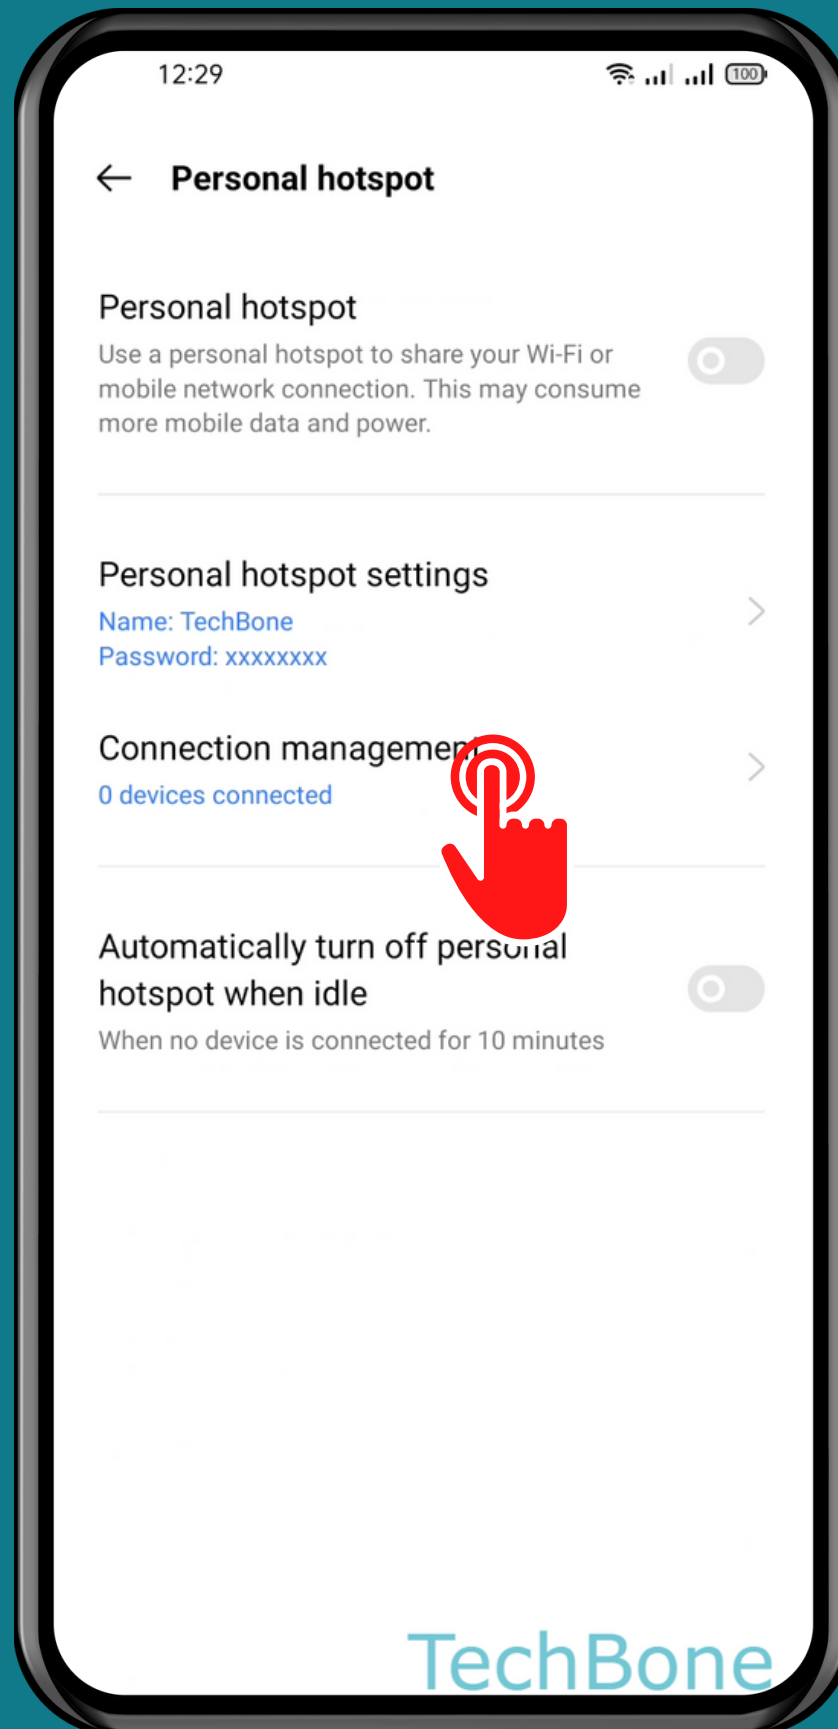

Tap on
Connection
management

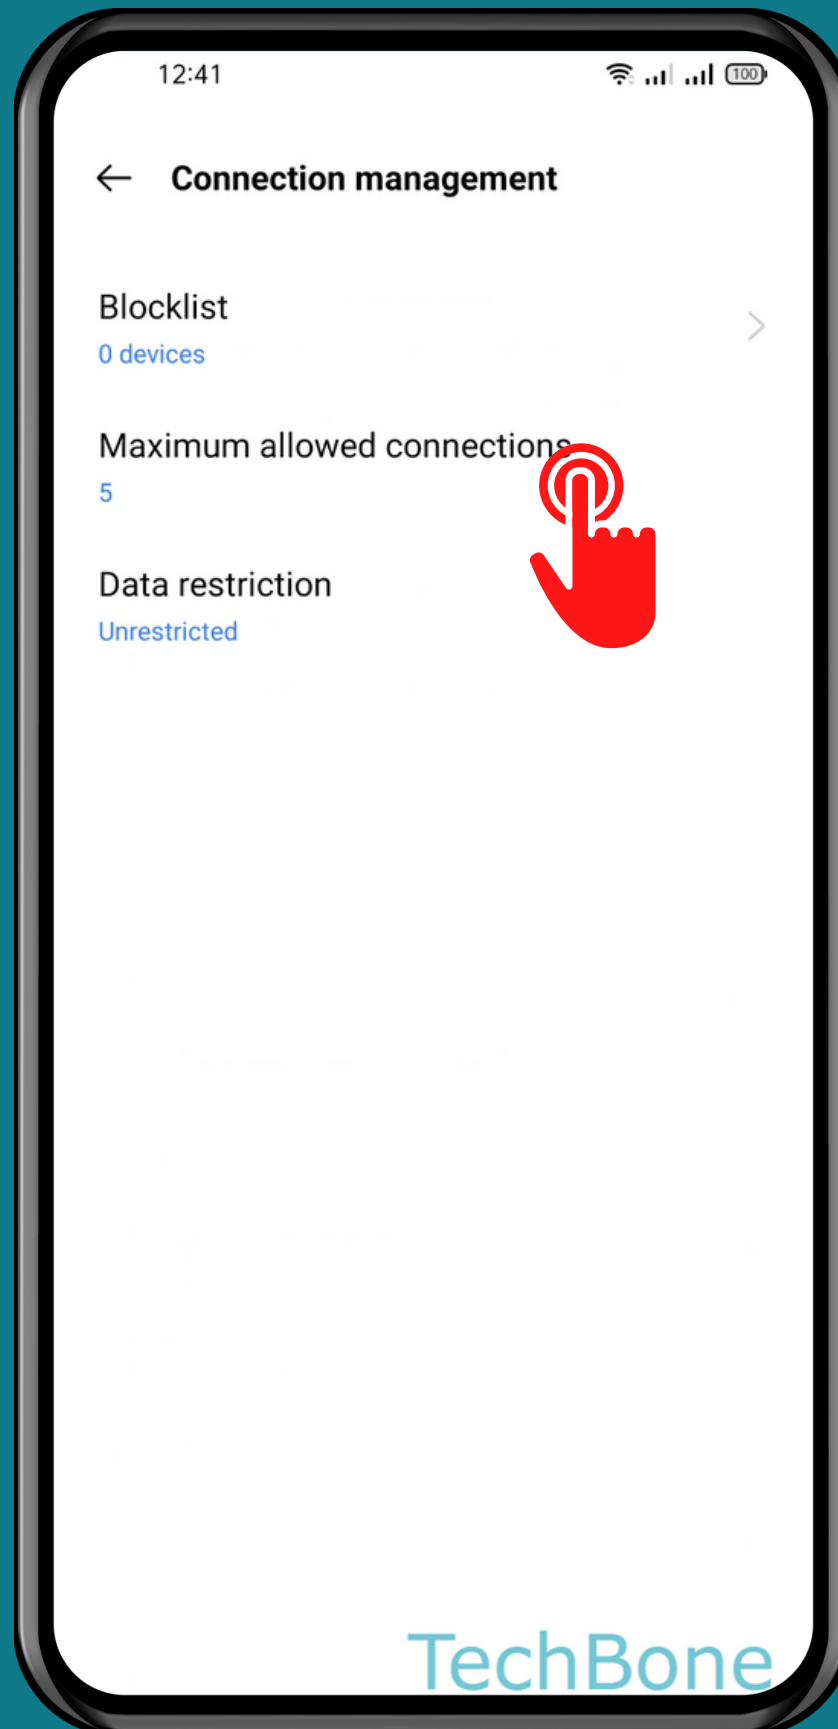

Tap on
Maximum allowed
connections

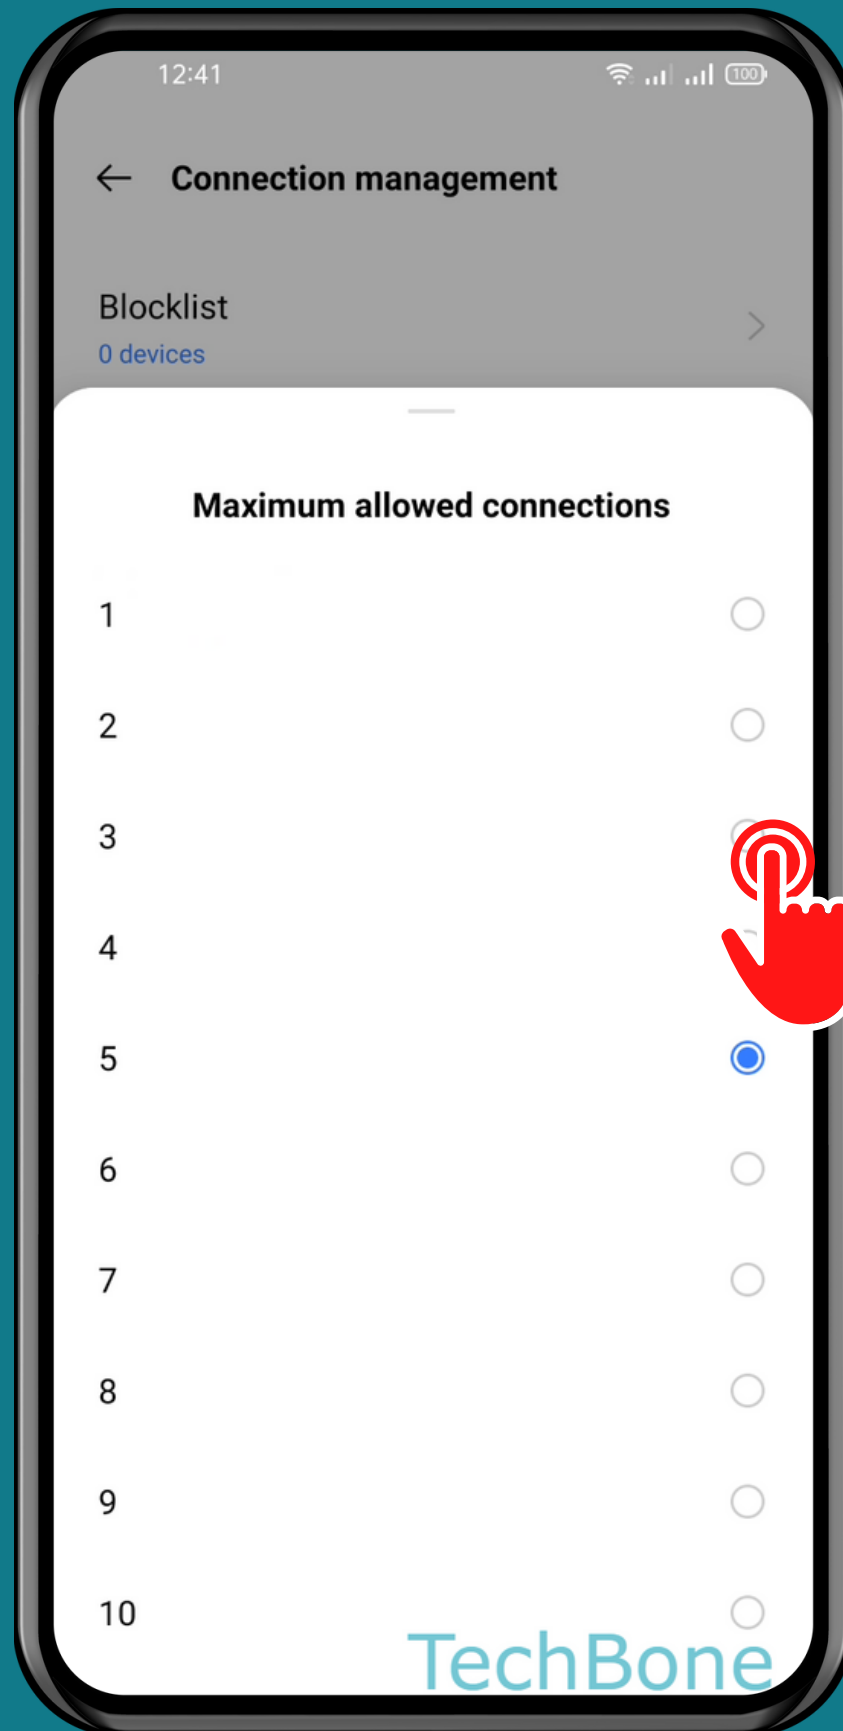

Choose an
Option

Done!