


REALME

Android 11 - realme UI 2


HOW TO SET DEFAULT KEYBOARD




Tap on
Settings

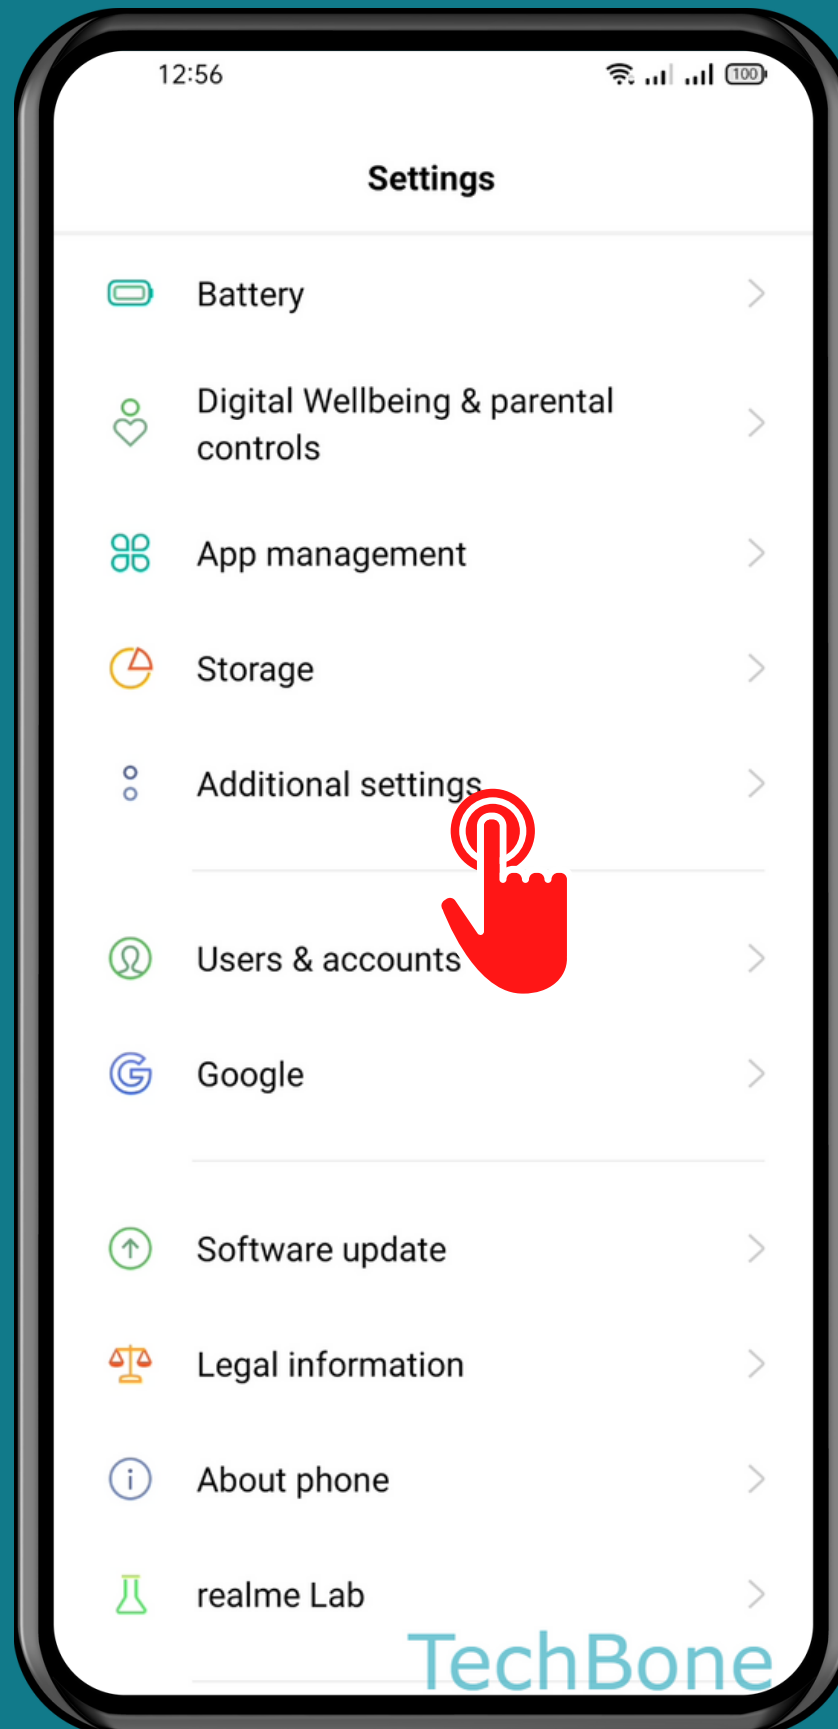


Tap on Additional settings

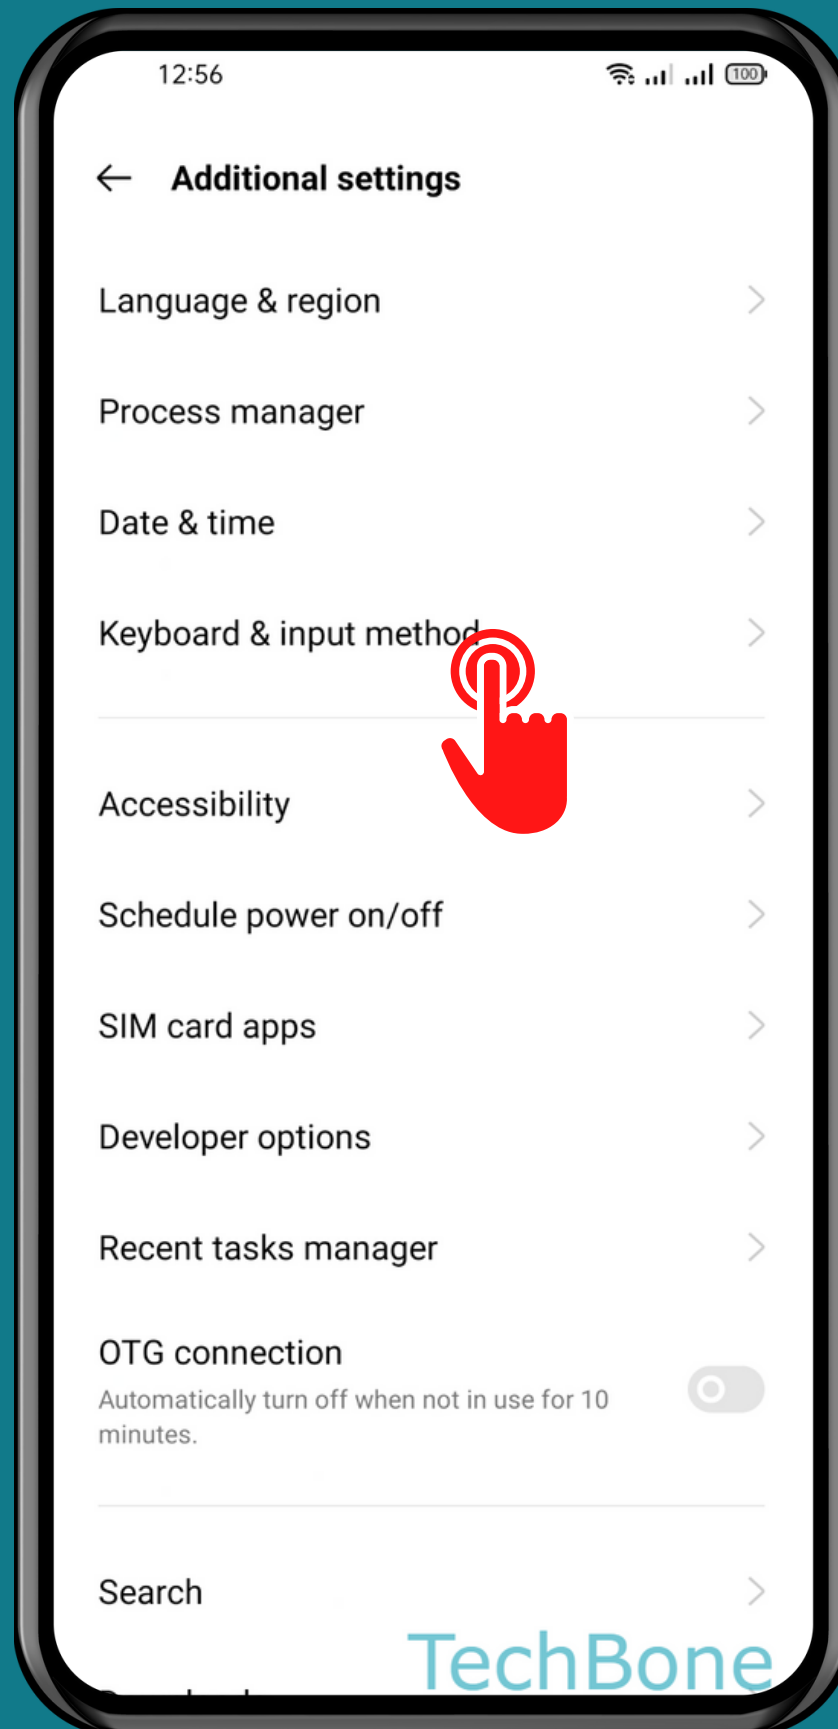

Tap on
Keyboard &
input method

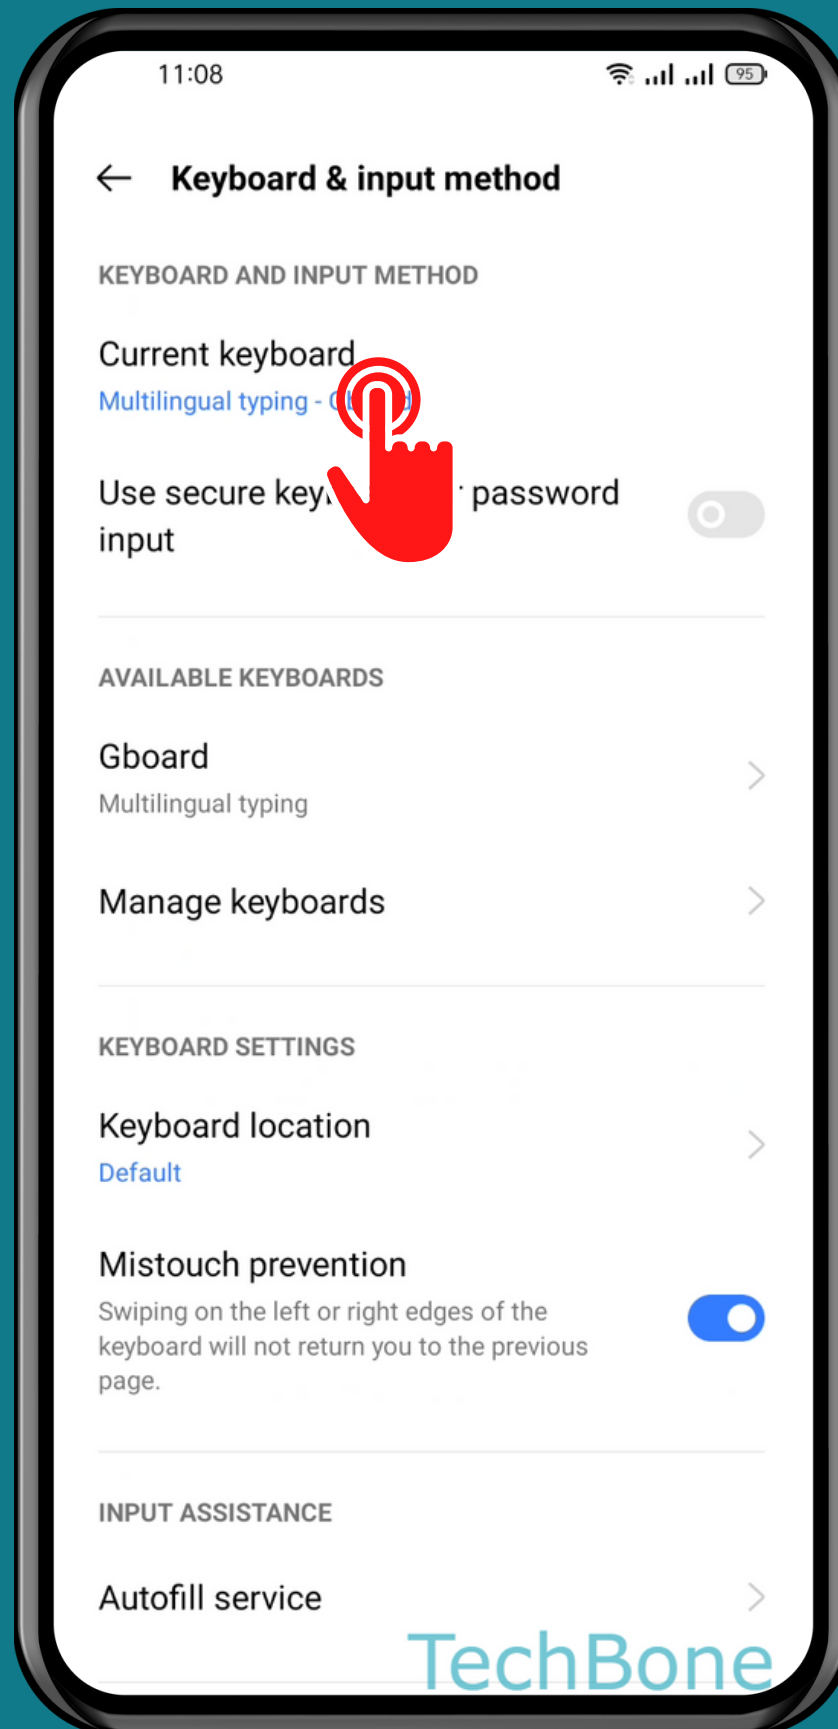

Tap on
Current keyboard

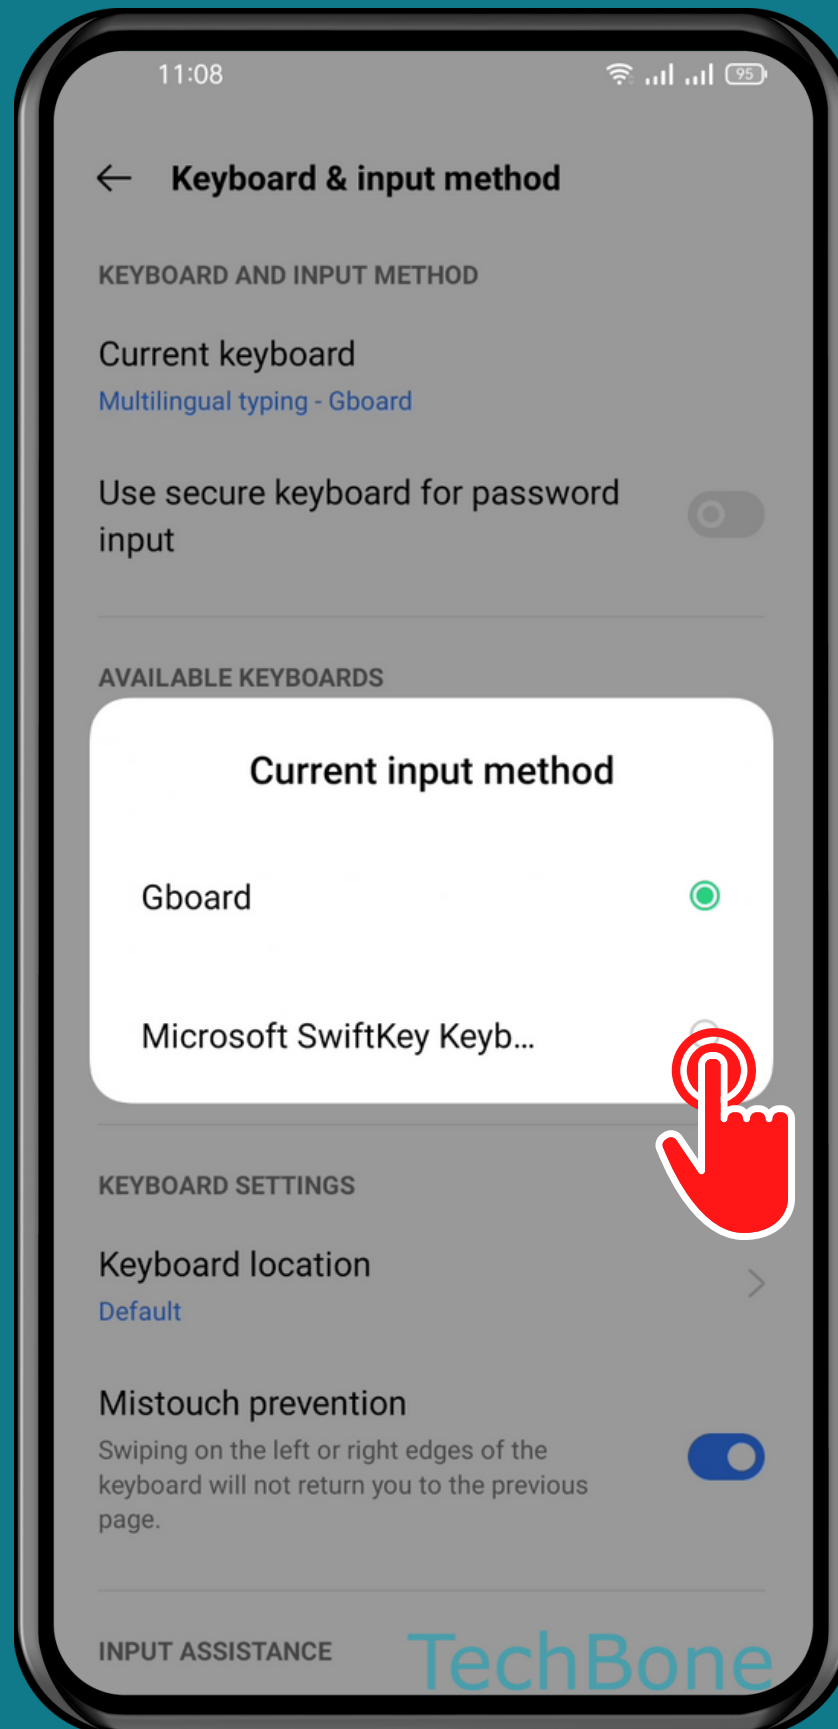

Set the Default keyboard

Done!