


REALME

Android 11 - realme UI 2


HOW TO SET DEFAULT SIM CARD FOR CALLS




Tap on
Settings

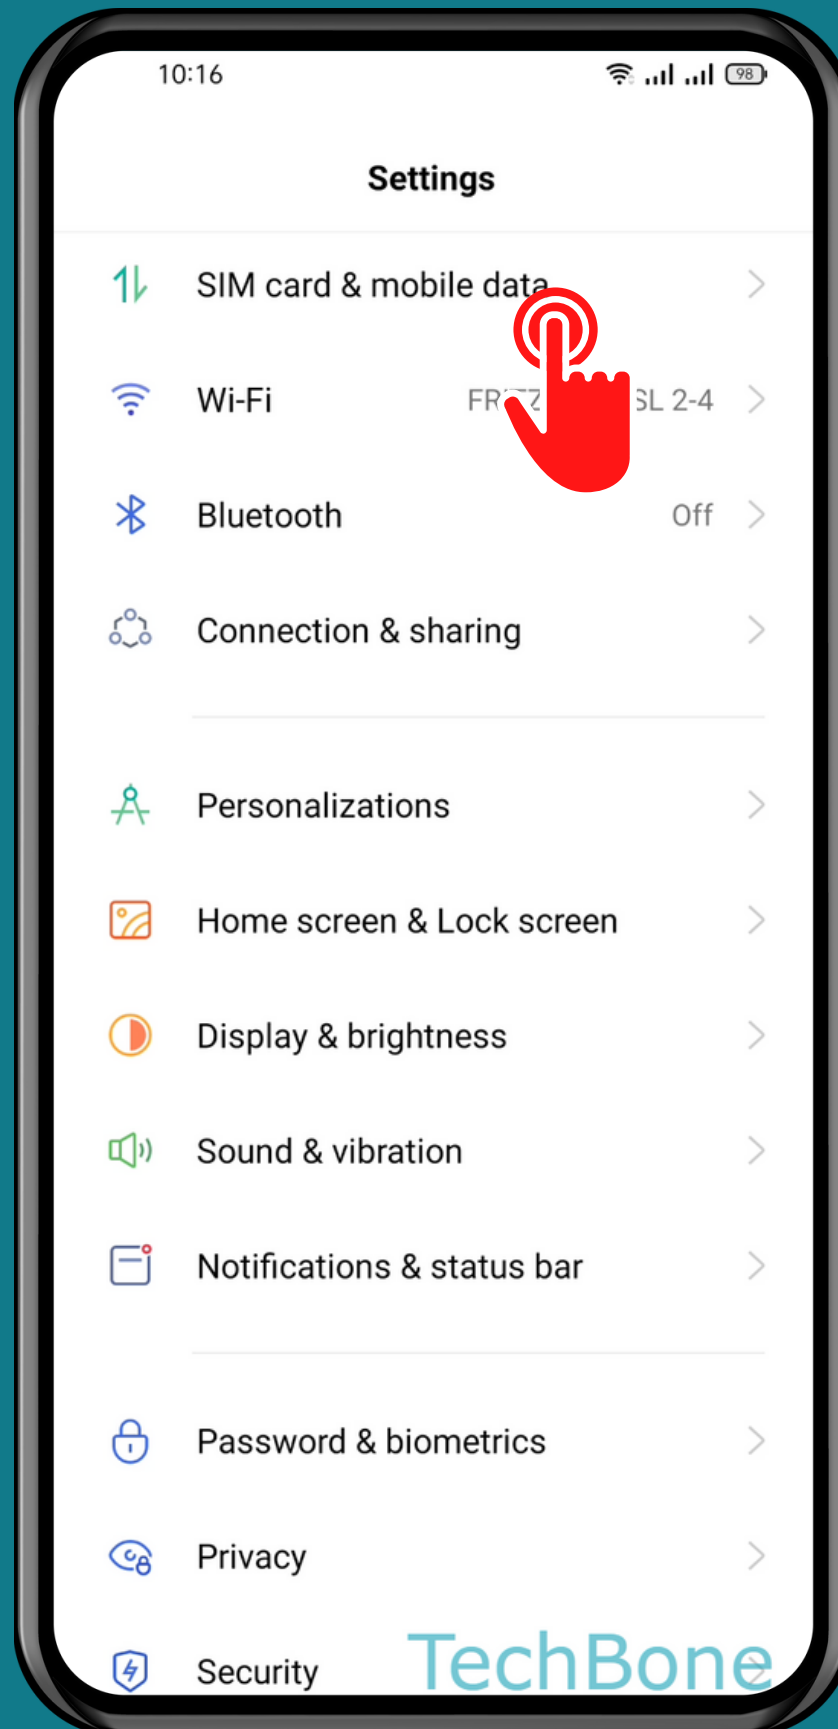

Tap on
SIM card &
mobile data

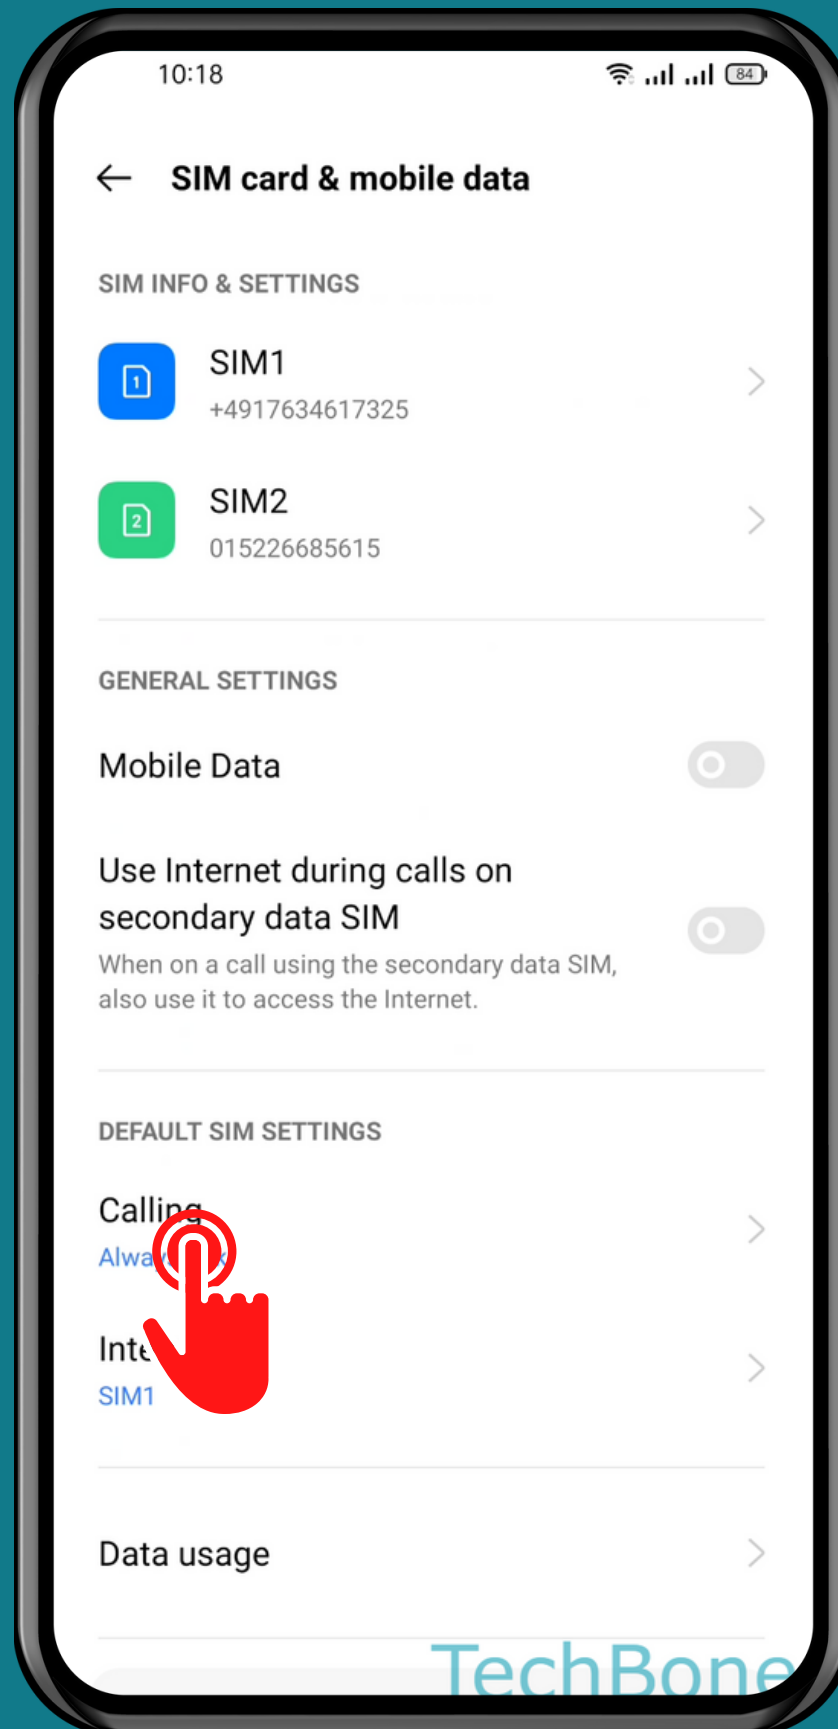

Tap on Calling

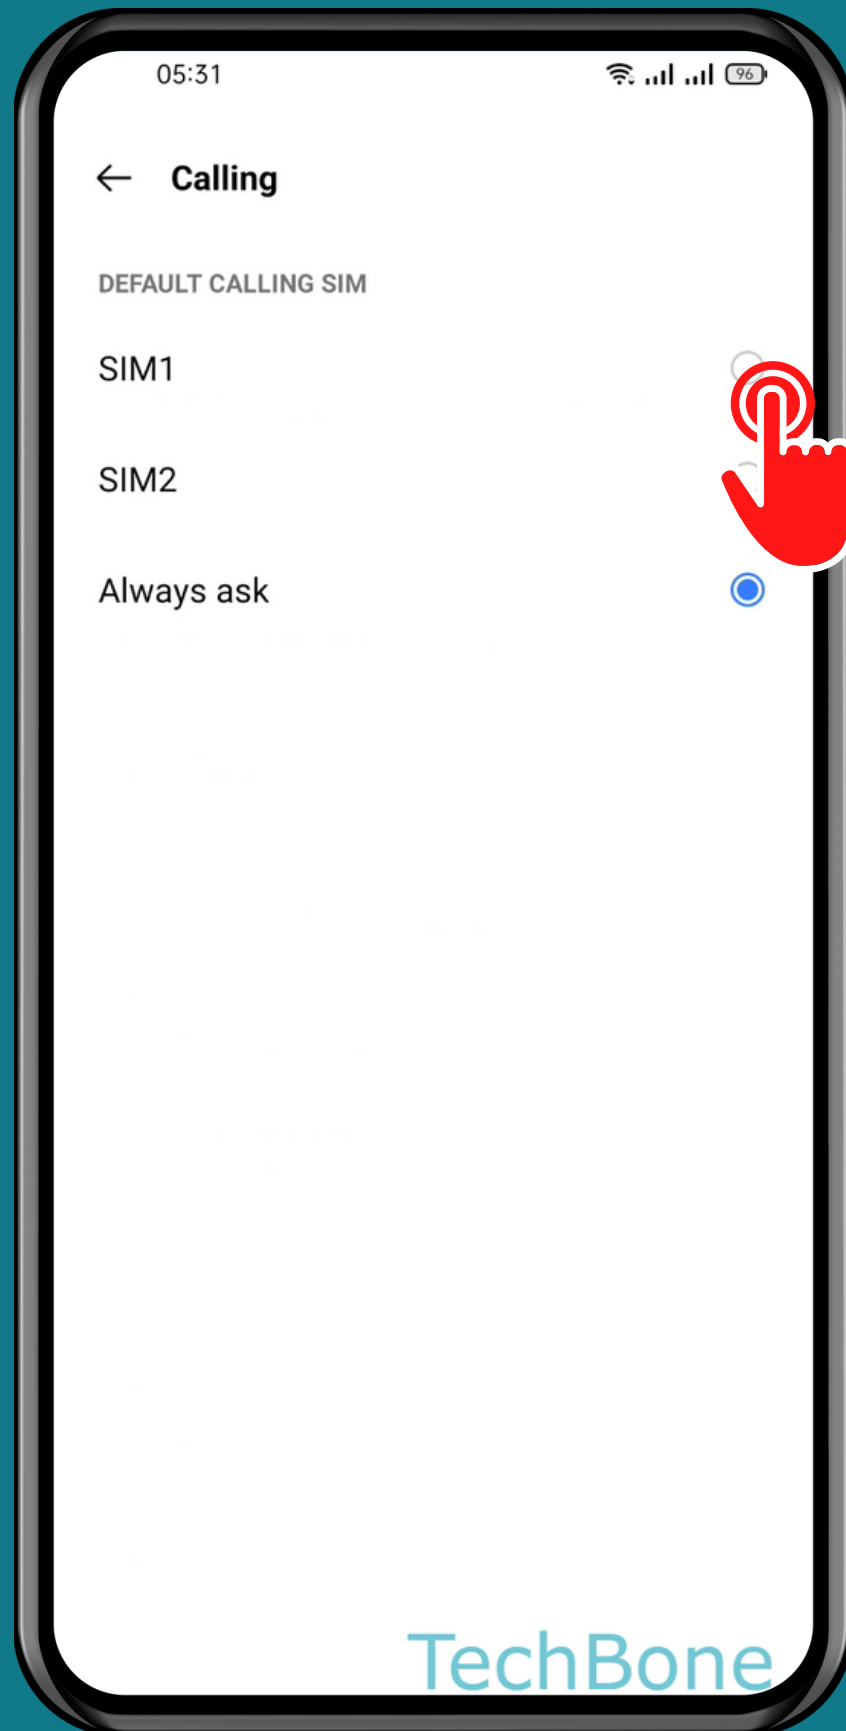

Choose an Option

Done!