


REALME

Android 11 - realme UI 2


# HOW TO SET DATE & TIME




Tap on  
Settings

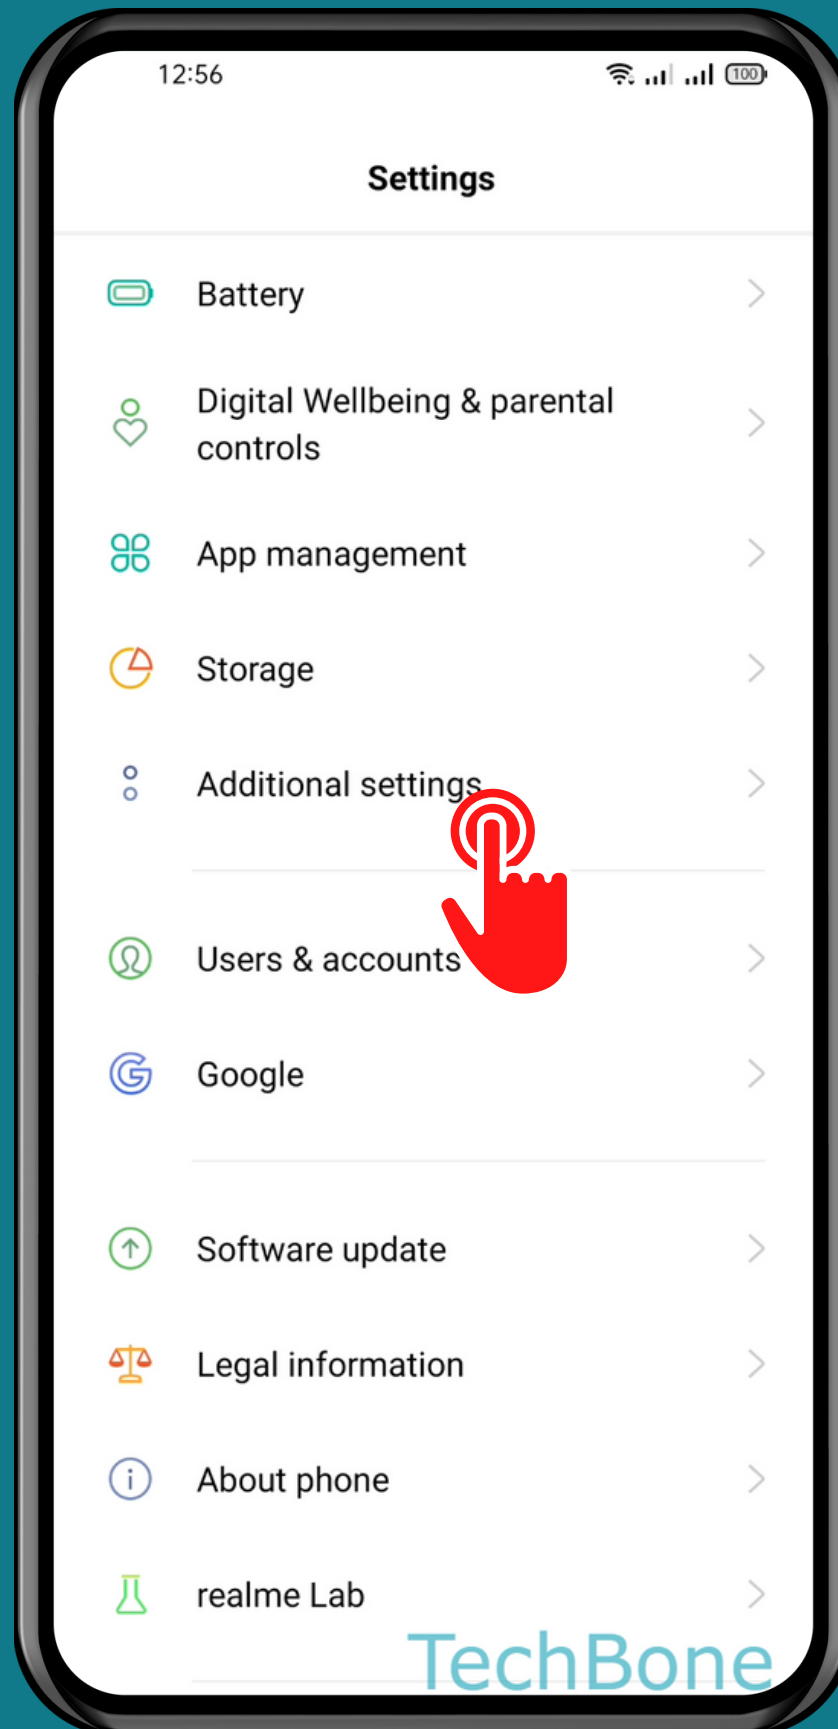


# Tap on Additional settings

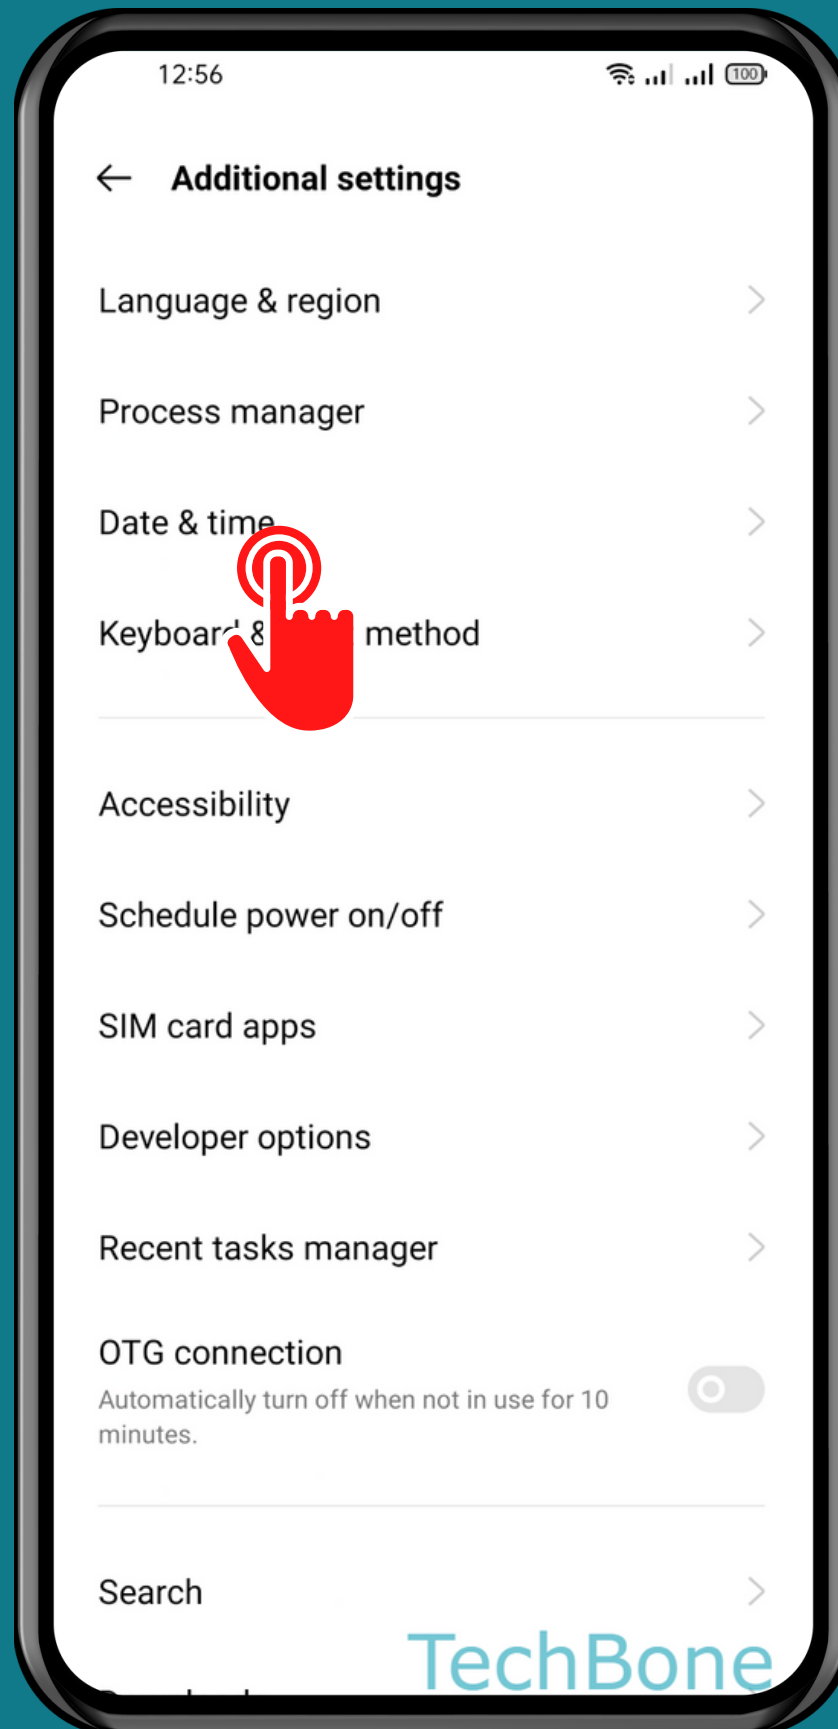

# Tap on Date & time

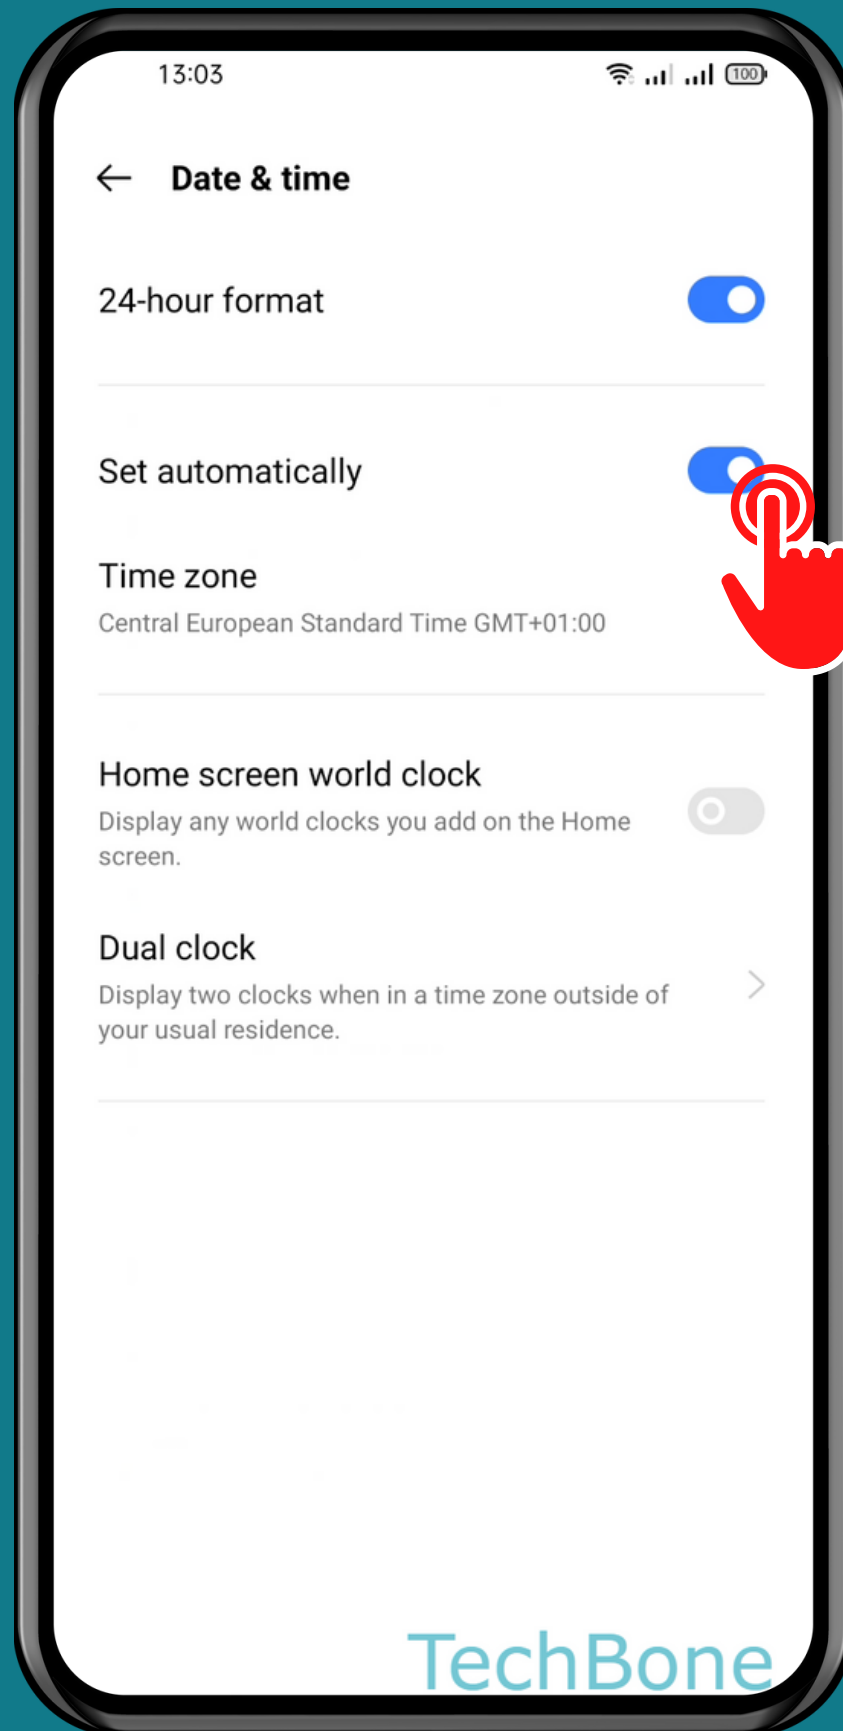

# Turn Off Set automatically

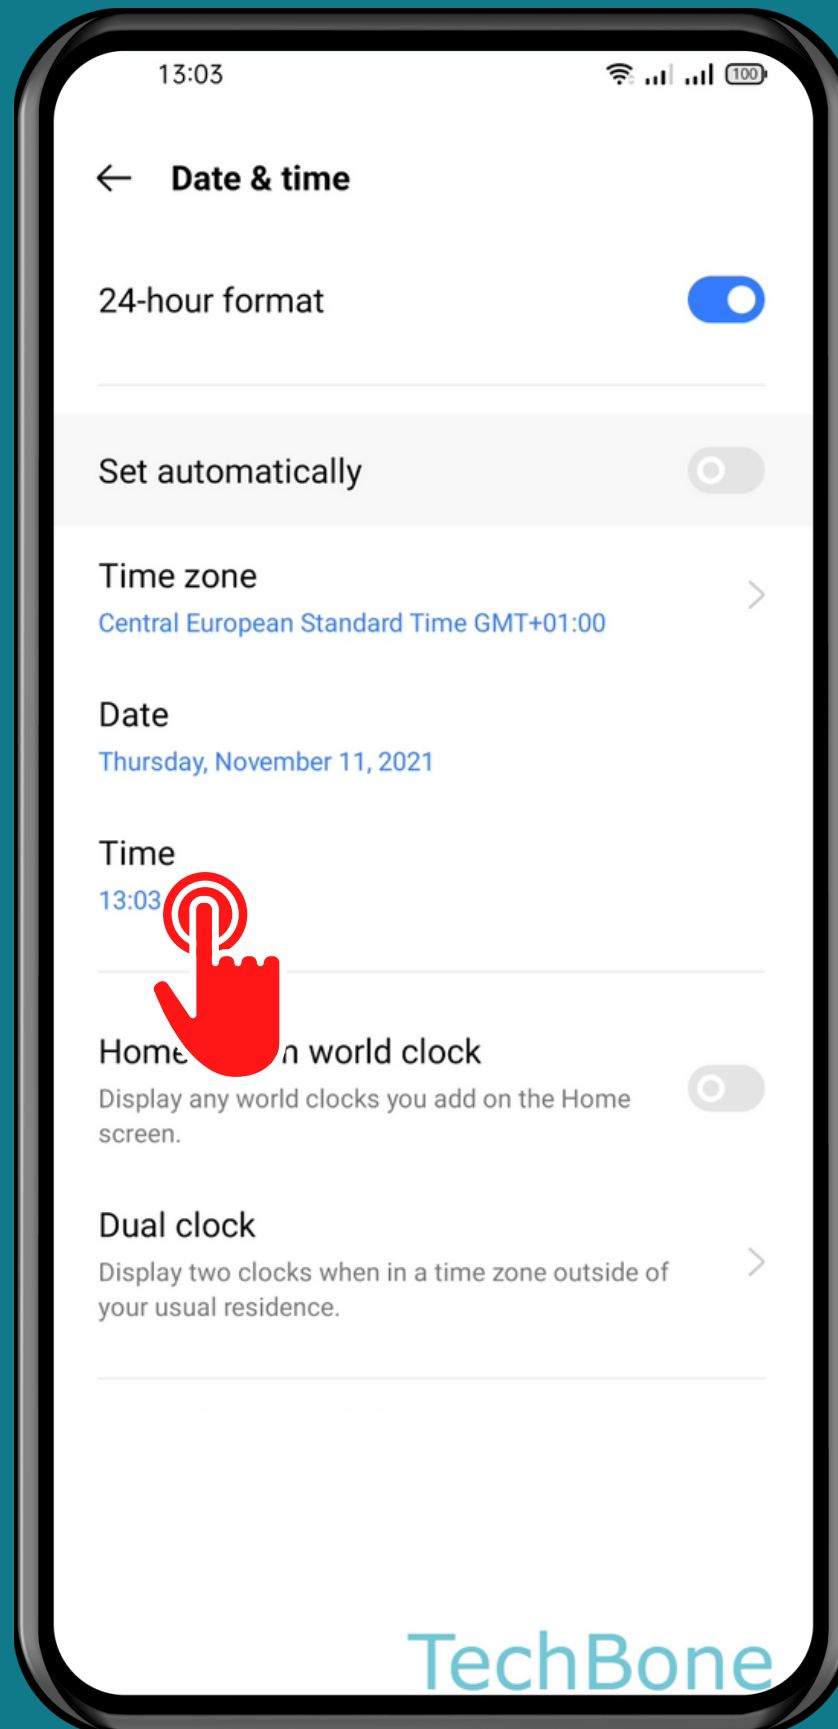

# Set the Date/Time

Done!