


REALME

Android 11 - realme UI 2


HOW TO SET UP PROXY SERVER




Tap on
Settings

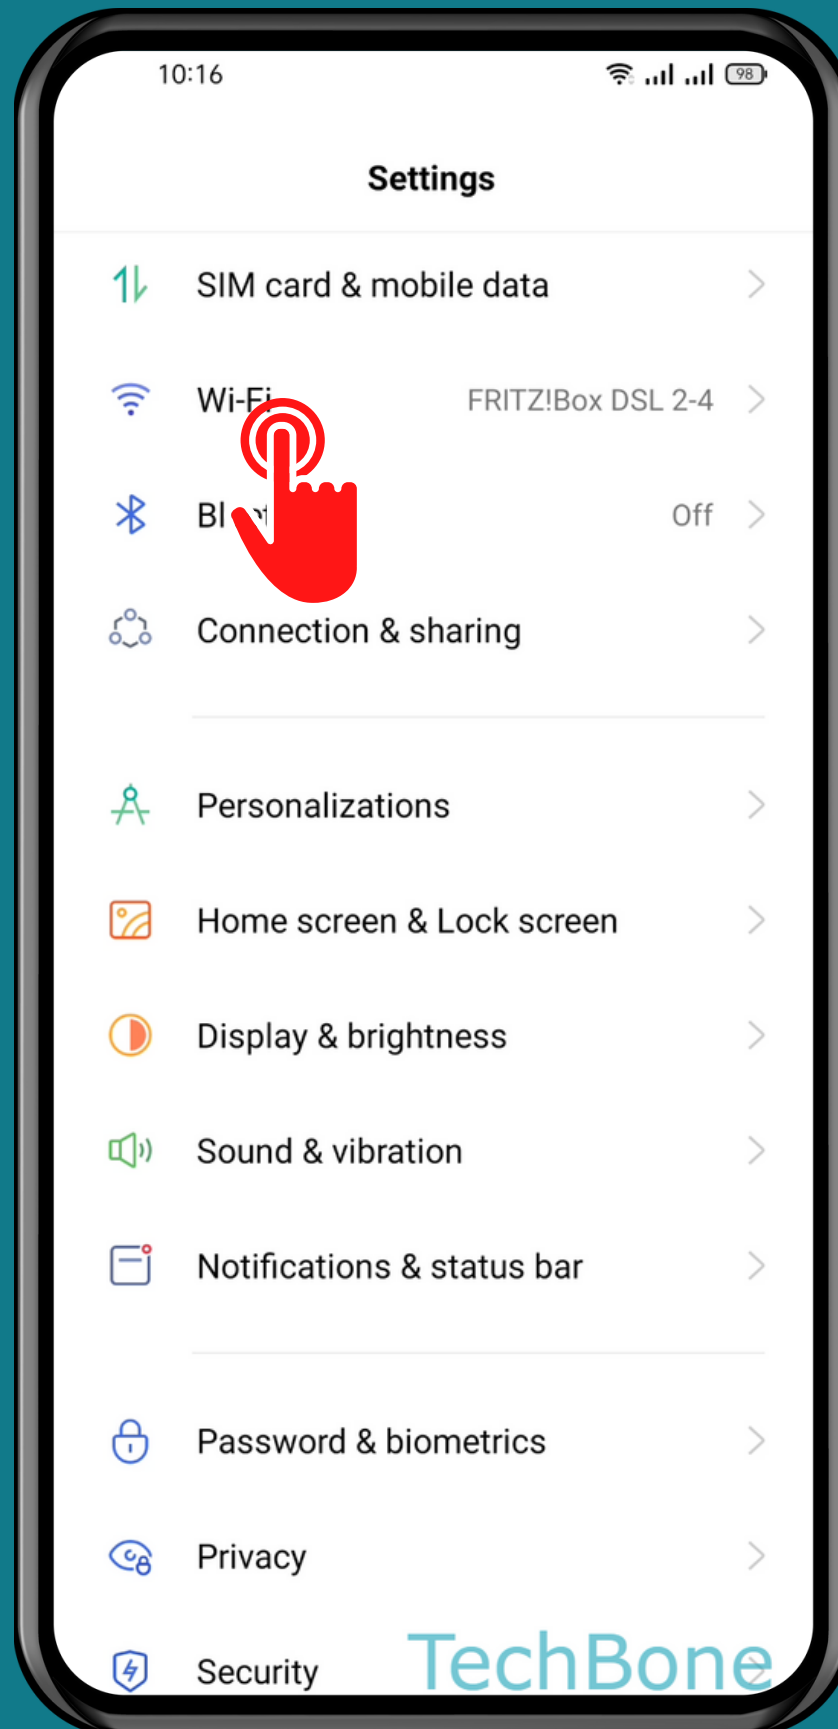


Tap on
Wi-Fi

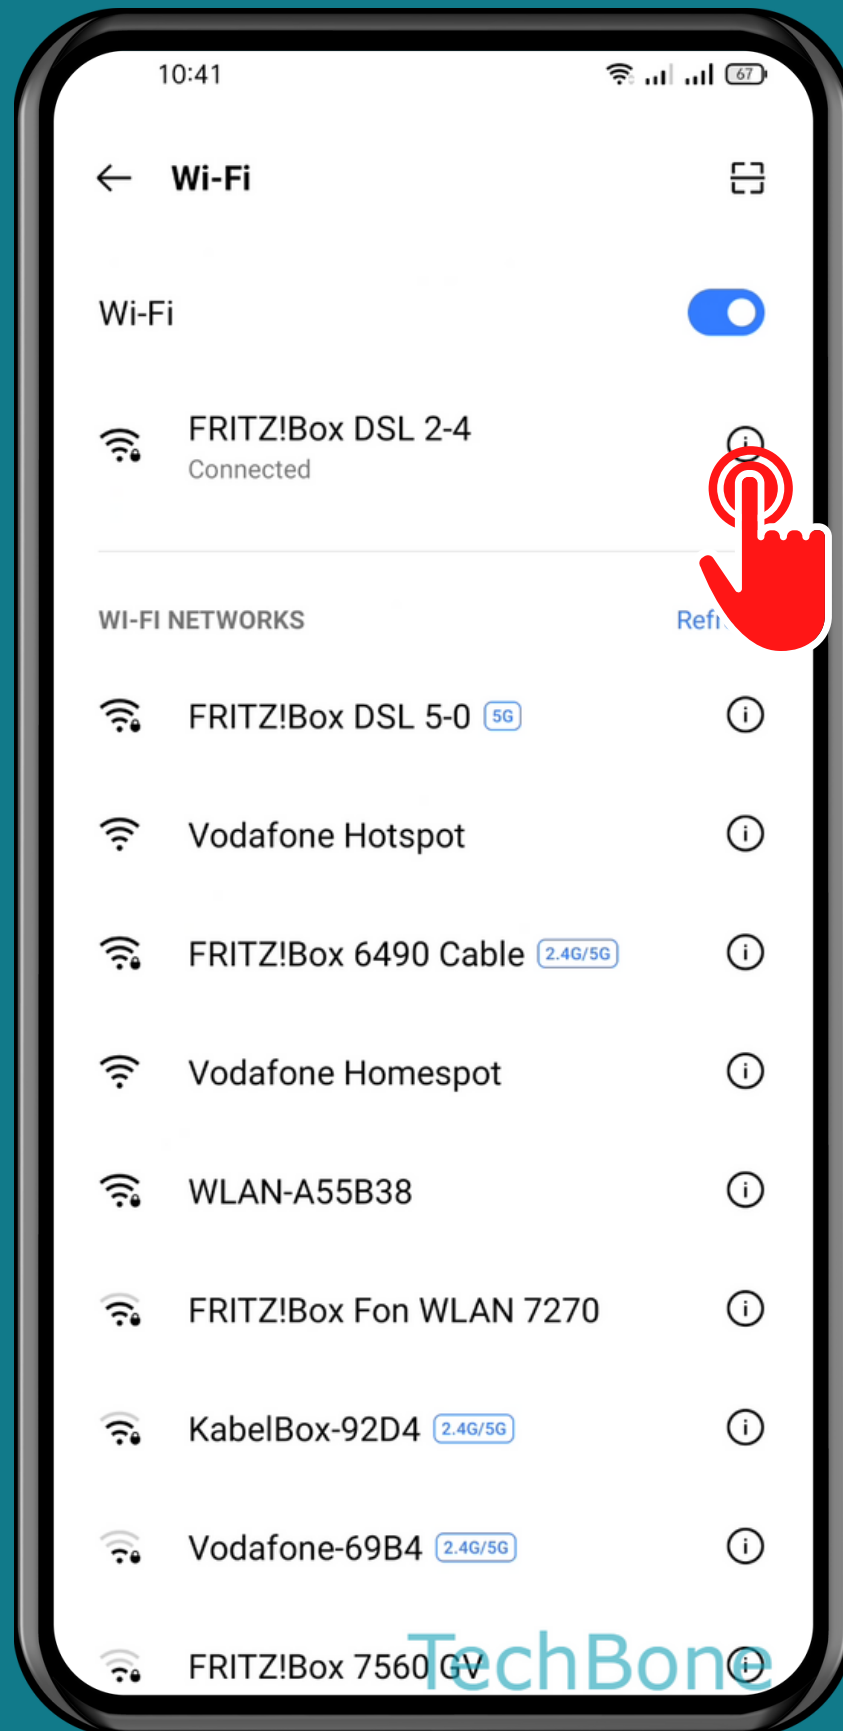


Open the Menu

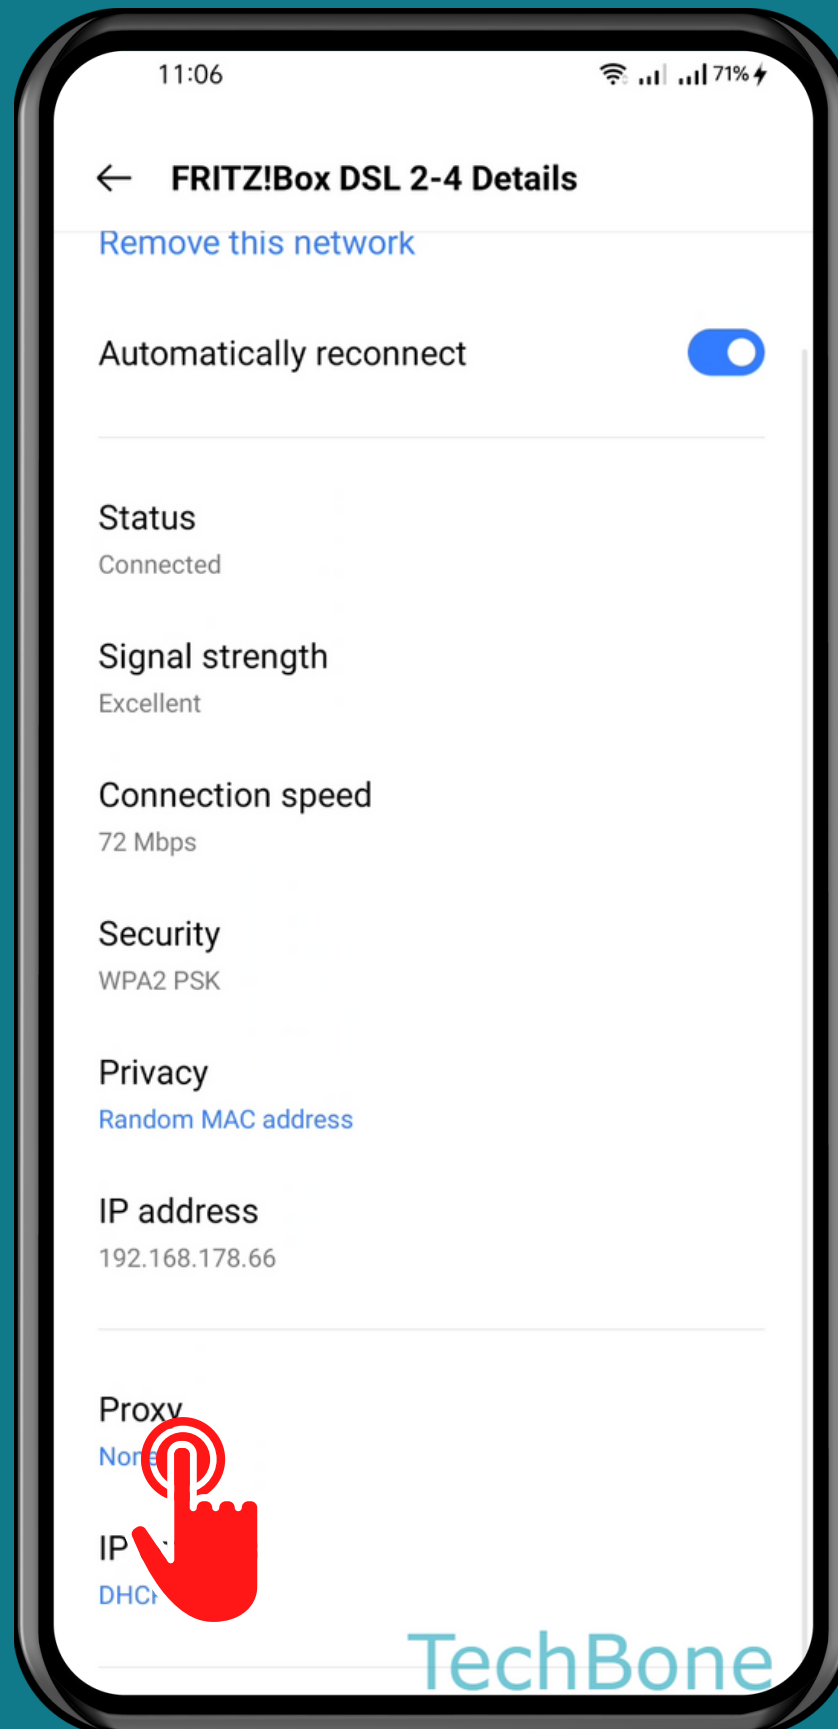

Tap on
Proxy

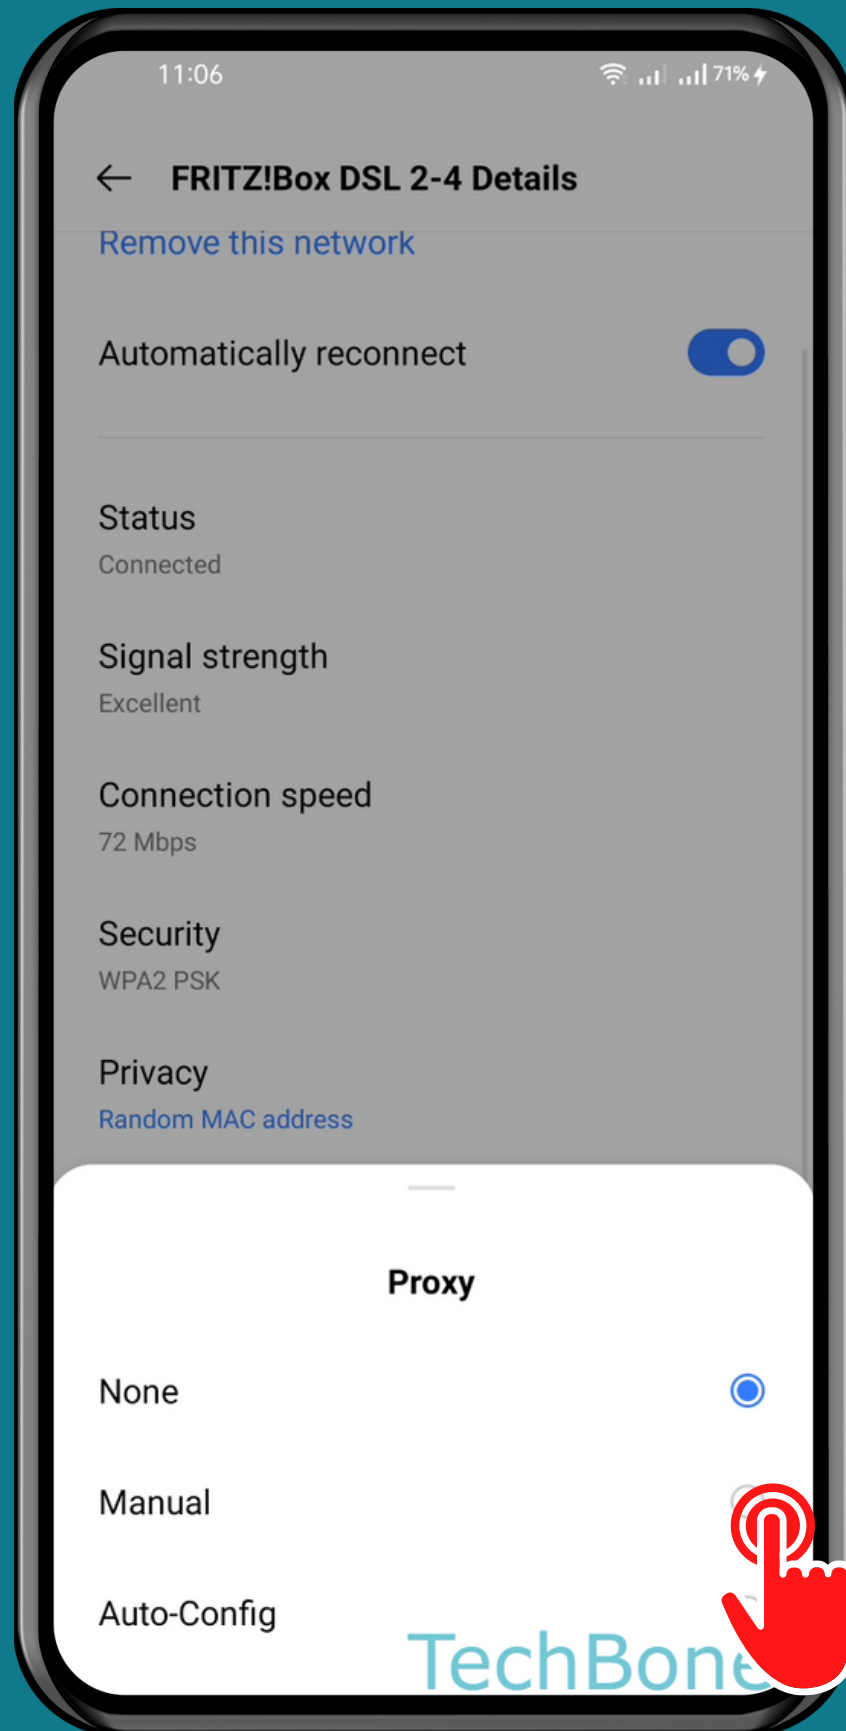

Choose Manual or Auto-Config

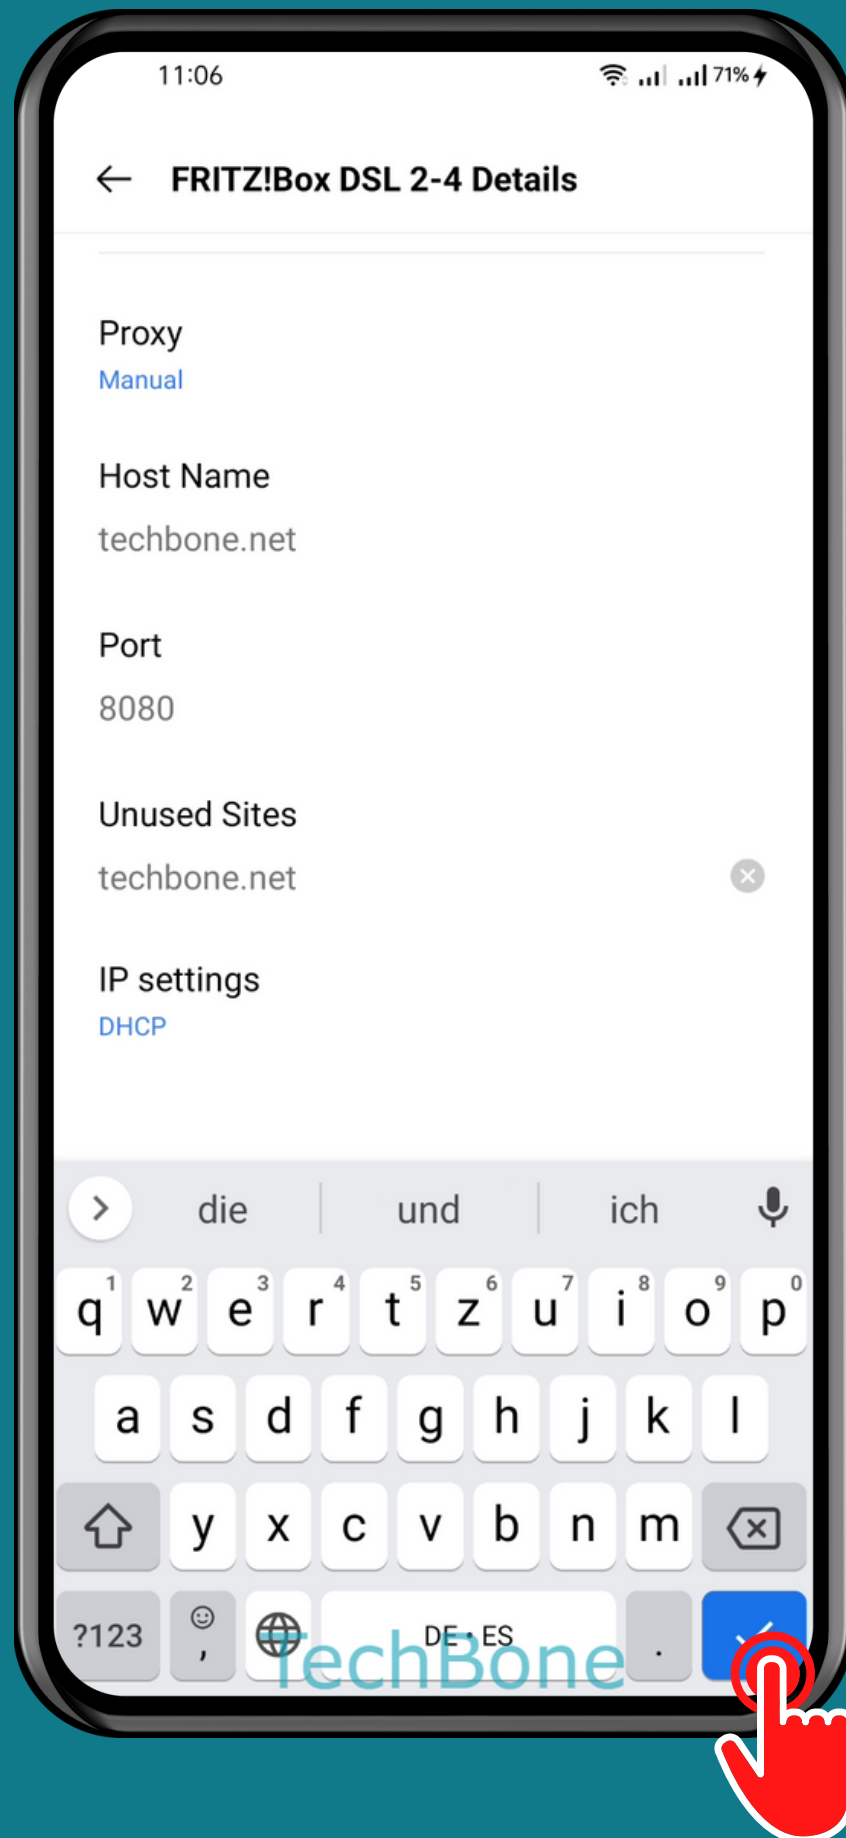

Enter the
Corresponding data
and tap on **Save**

Done!