



REALME

Android 11 - realme UI 2


HOW TO SHOW/HIDE BATTERY PERCENTAGE IN STATUS BAR

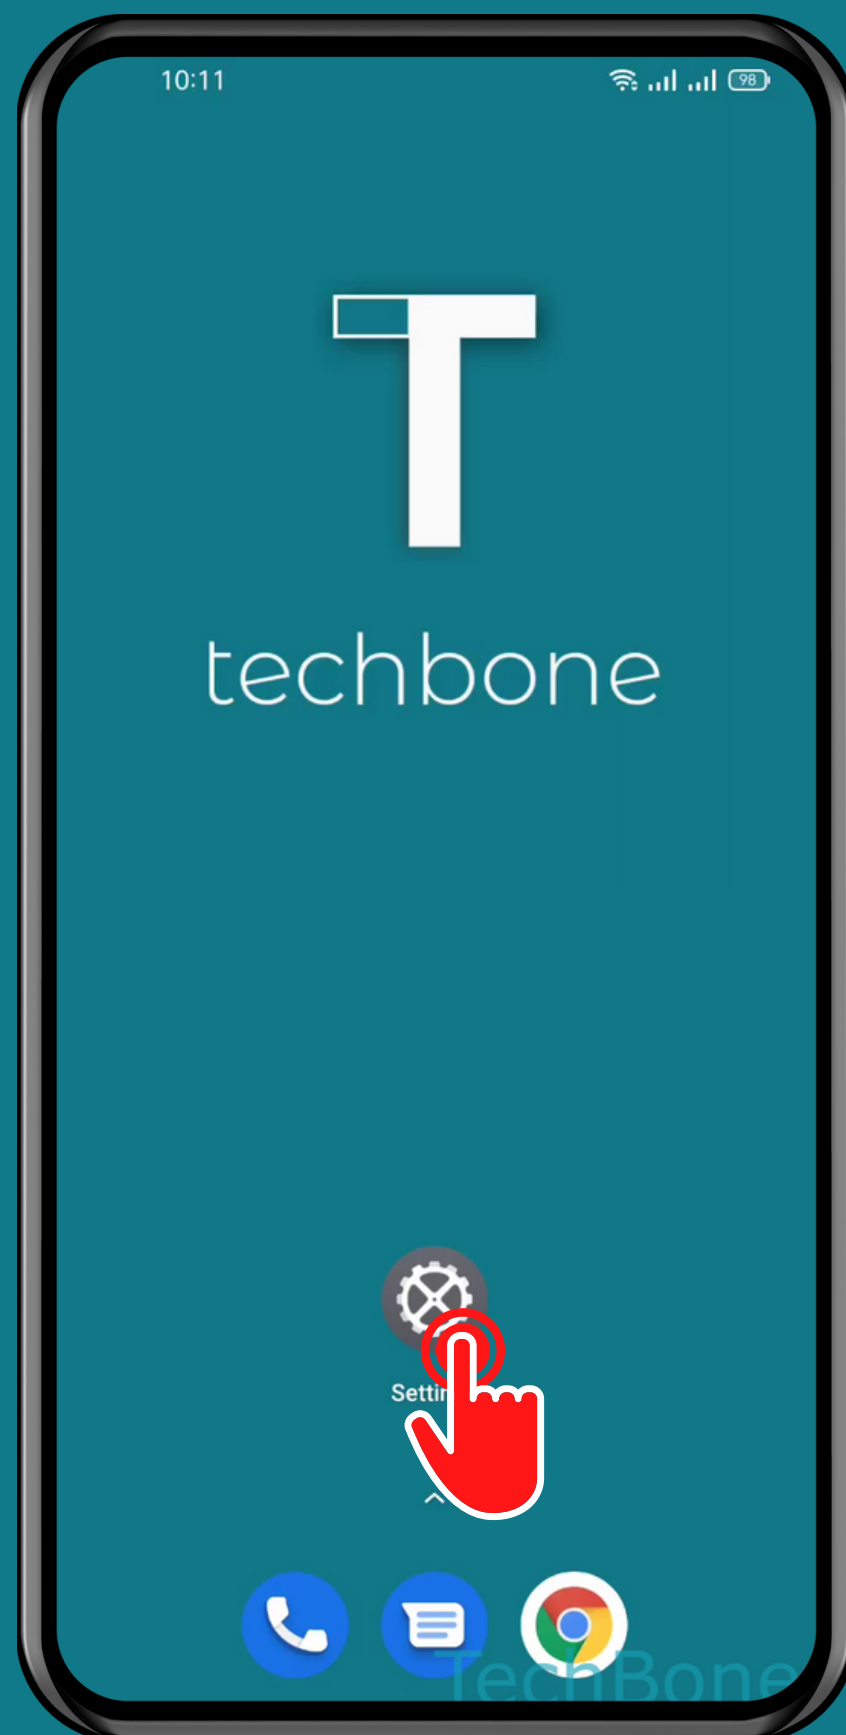


Tap on
Settings

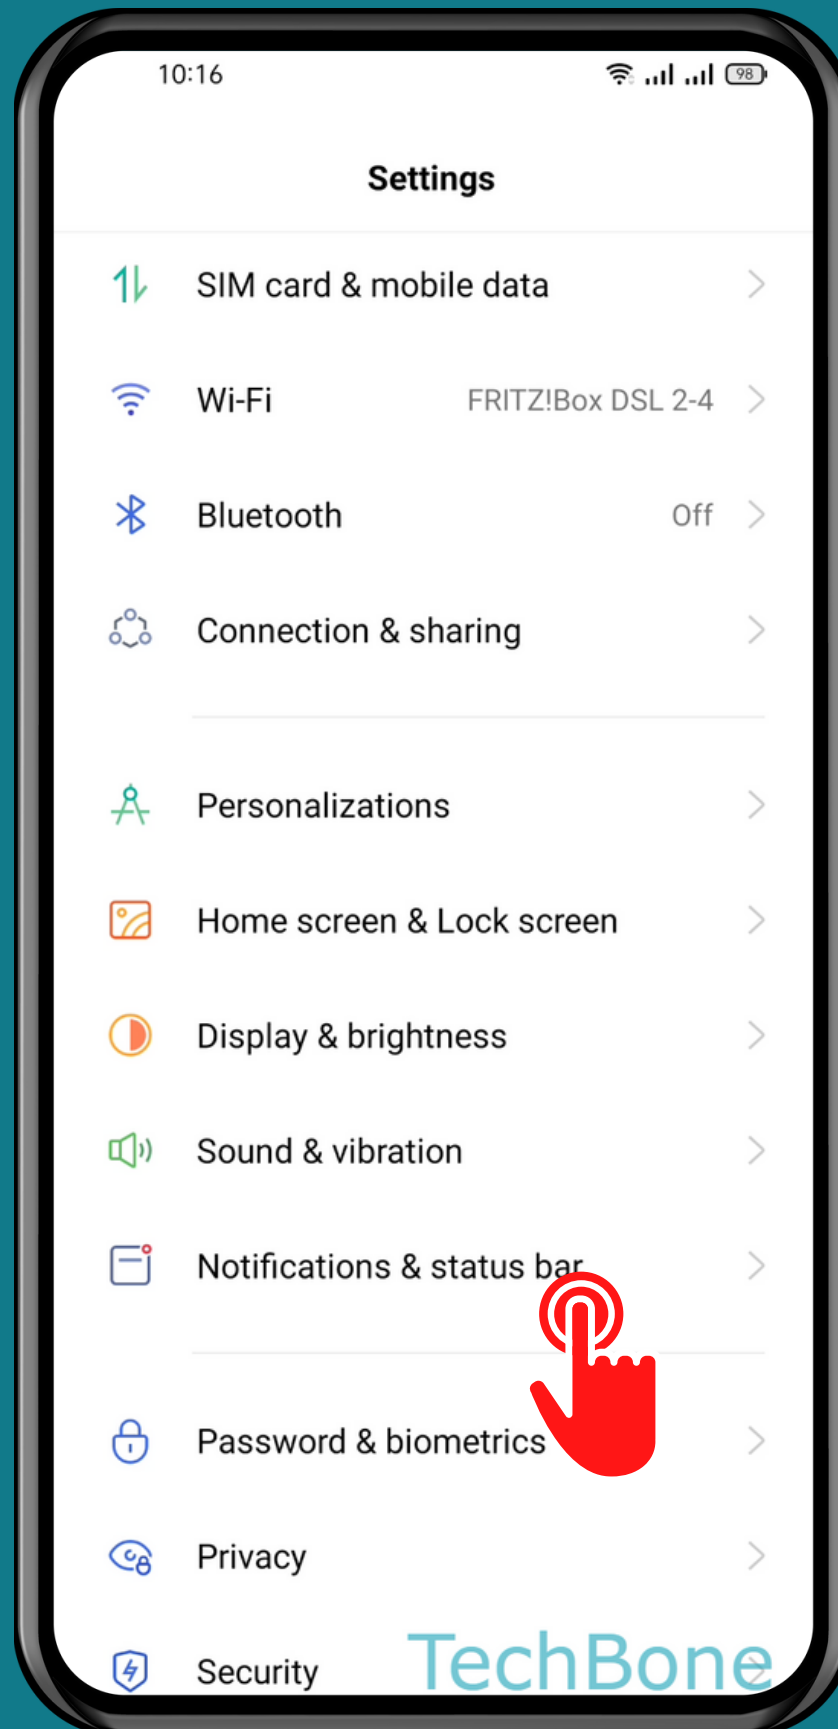

Tap on
Notifications &
status bar

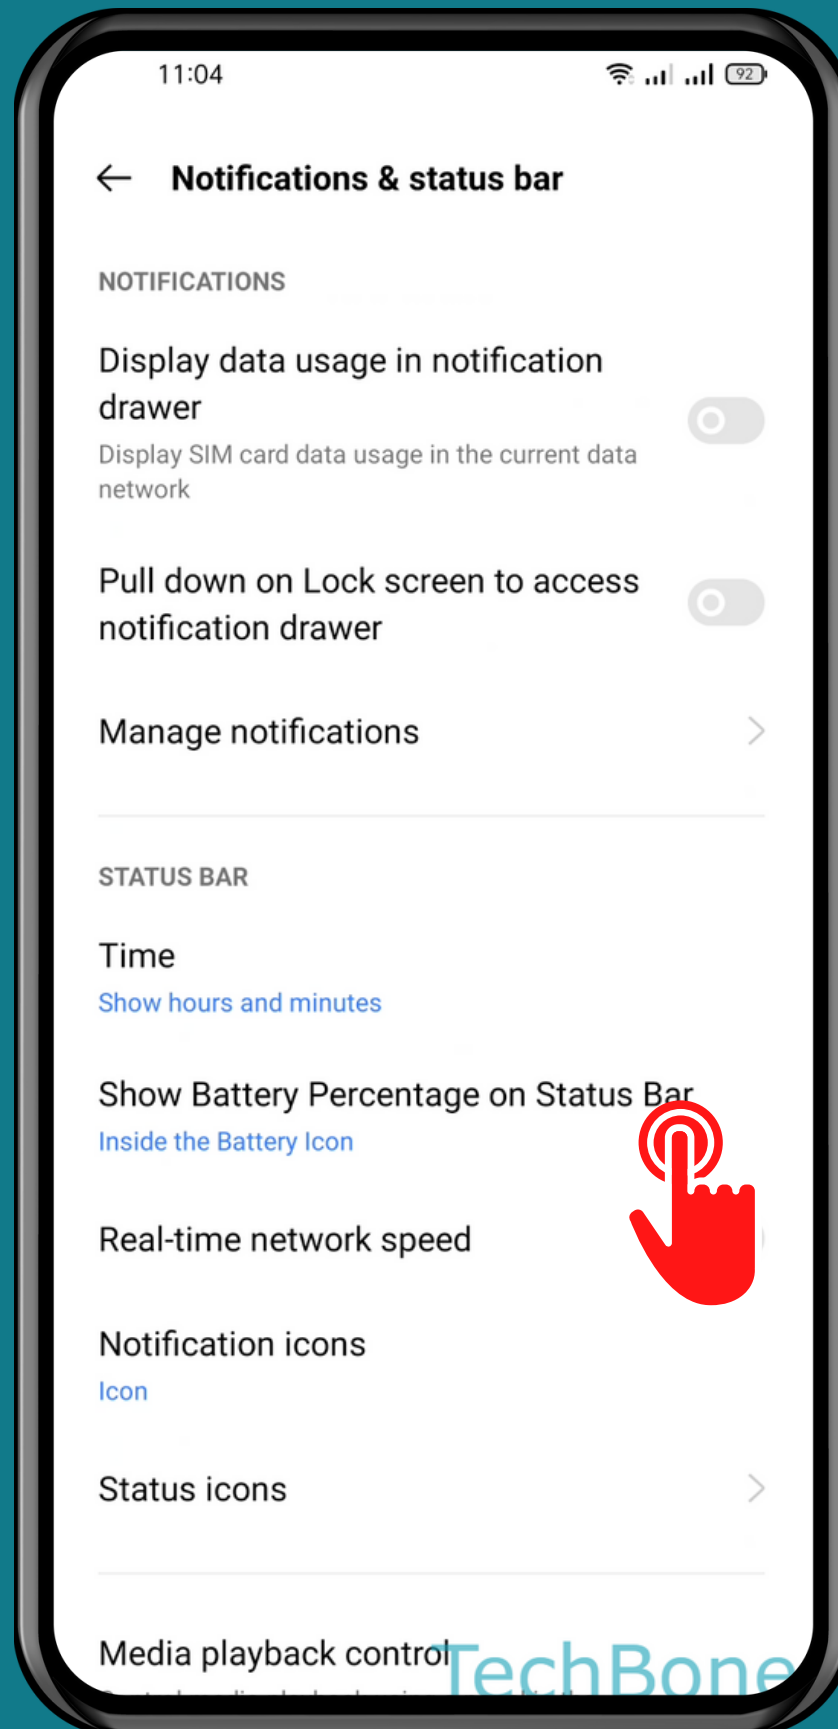

Tap on
Show Battery
Percentage on...

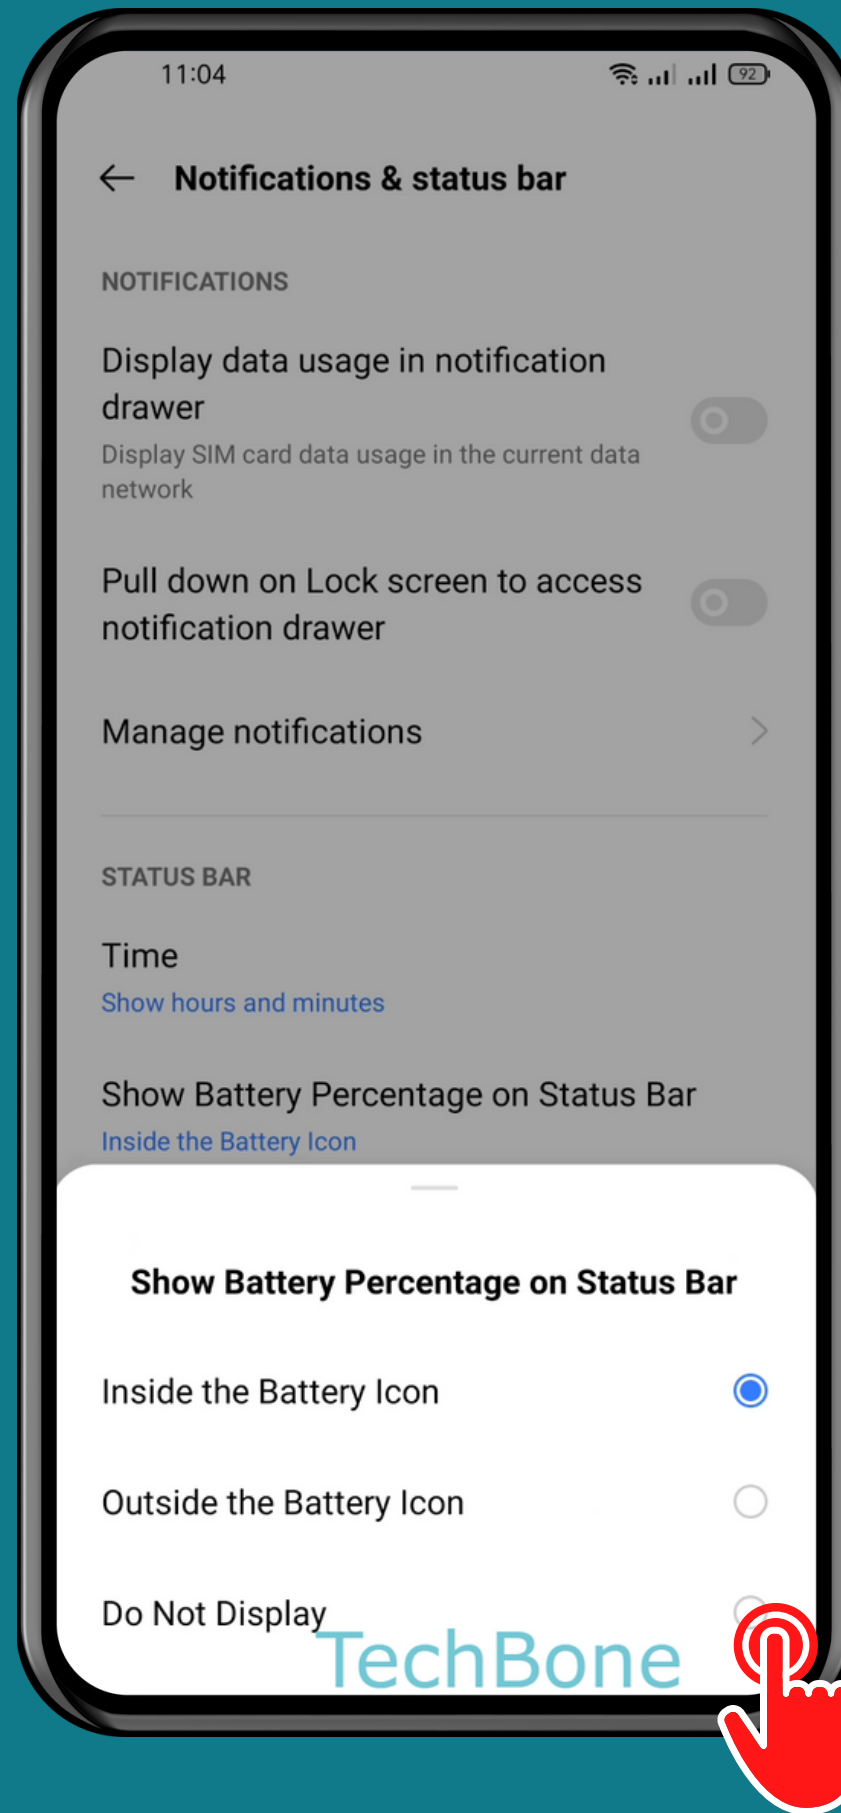

Choose an Option

Done!