


REALME

Android 11 - realme UI 2


# HOW TO SHOW/HIDE LOCK SCREEN NOTIFICATIONS




Tap on  
Settings

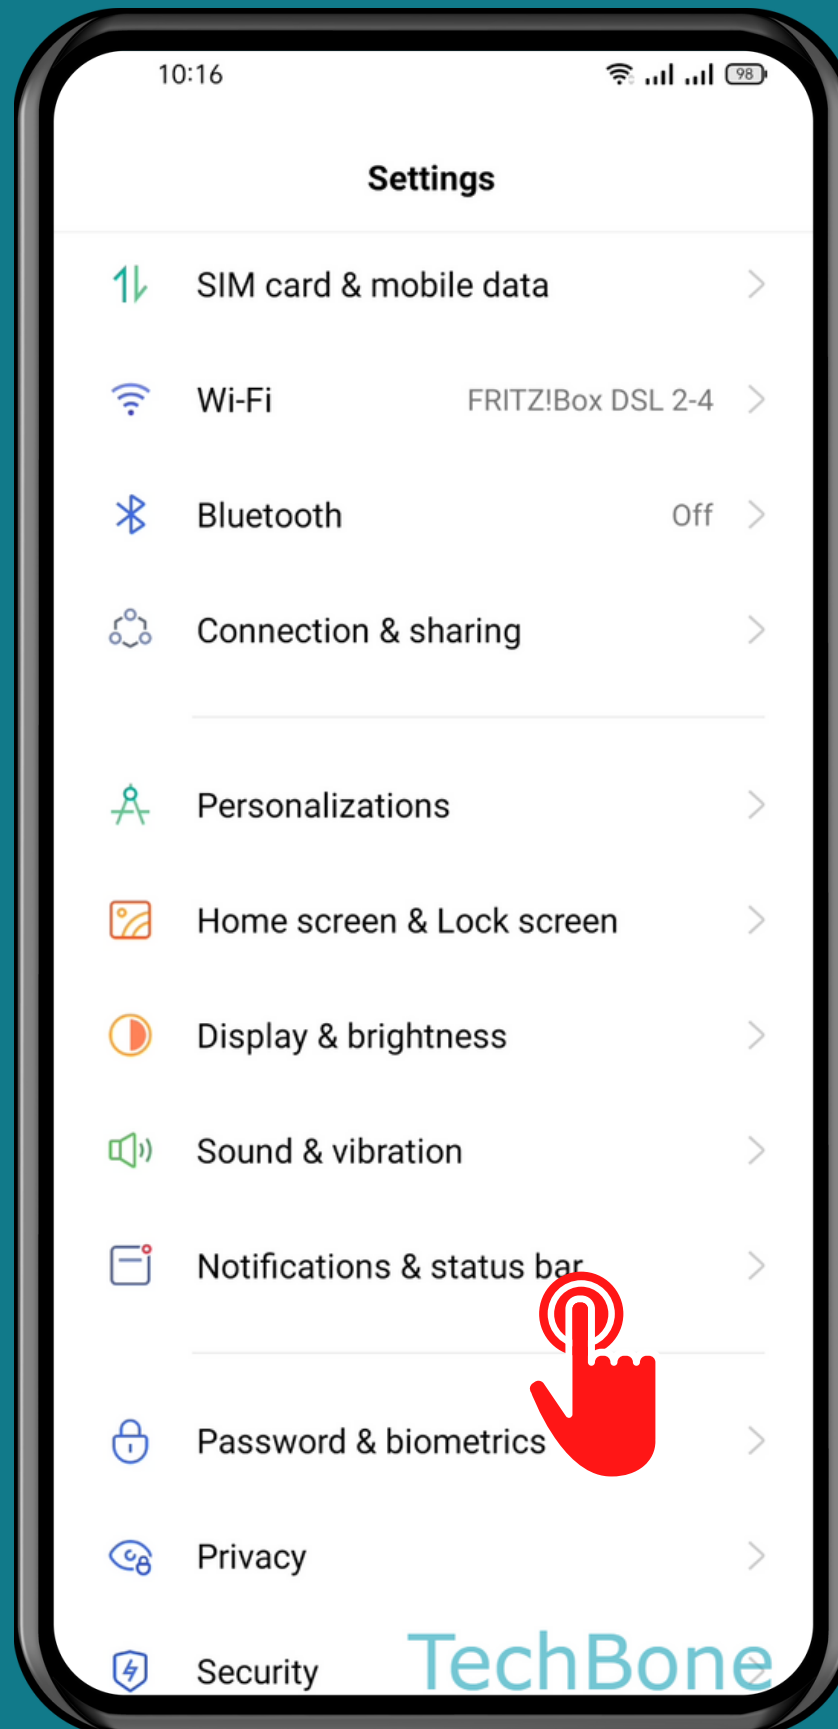


# Tap on Notifications & status bar

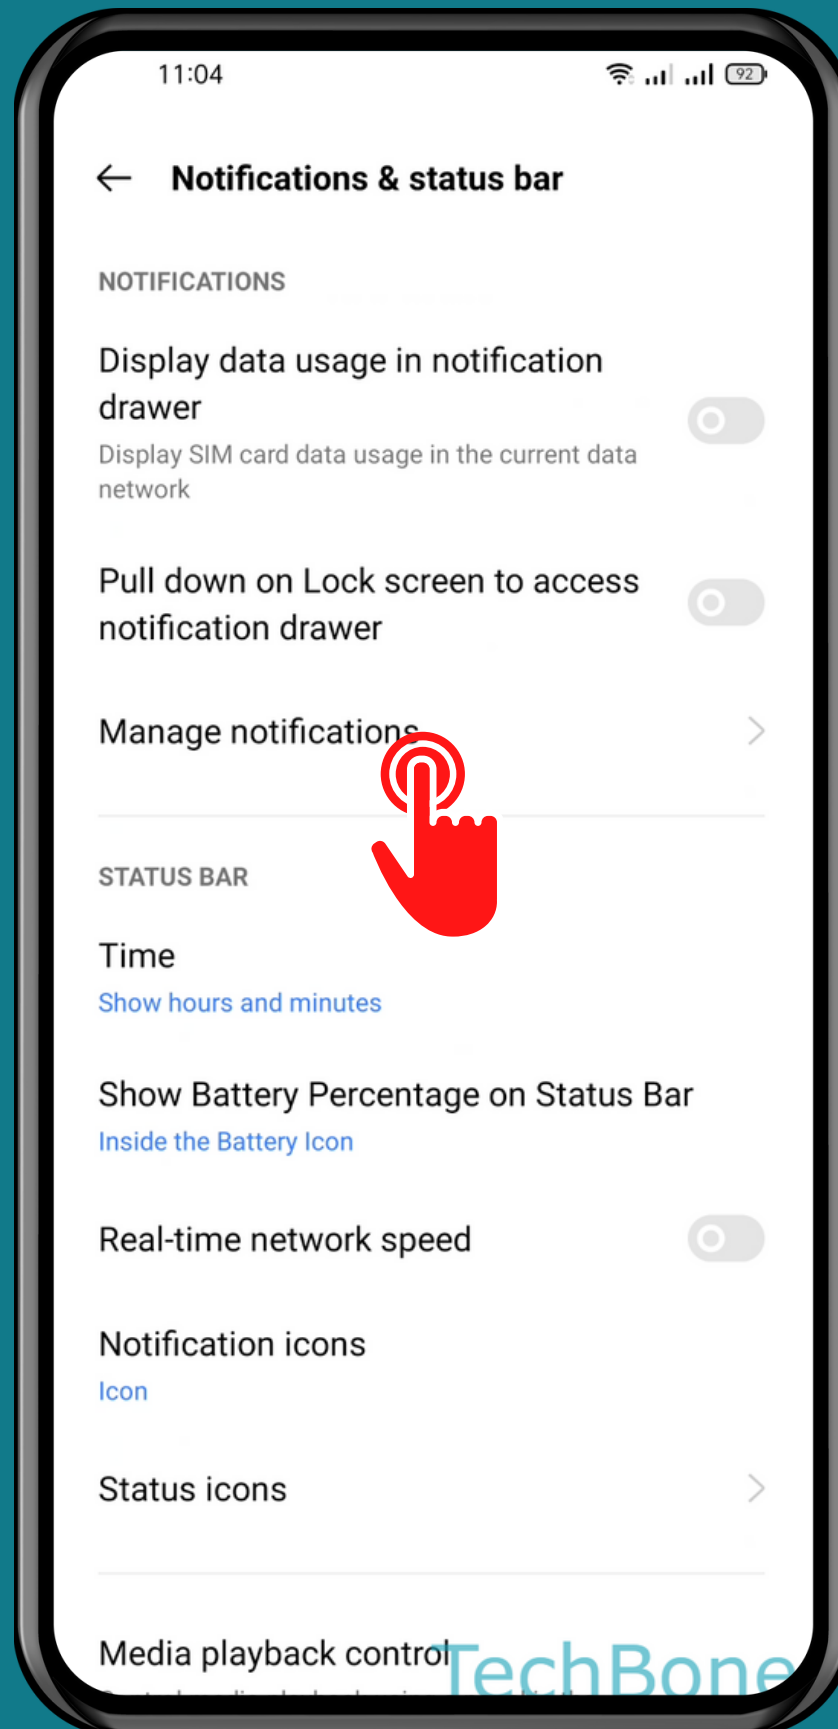

# Tap on Manage notifications

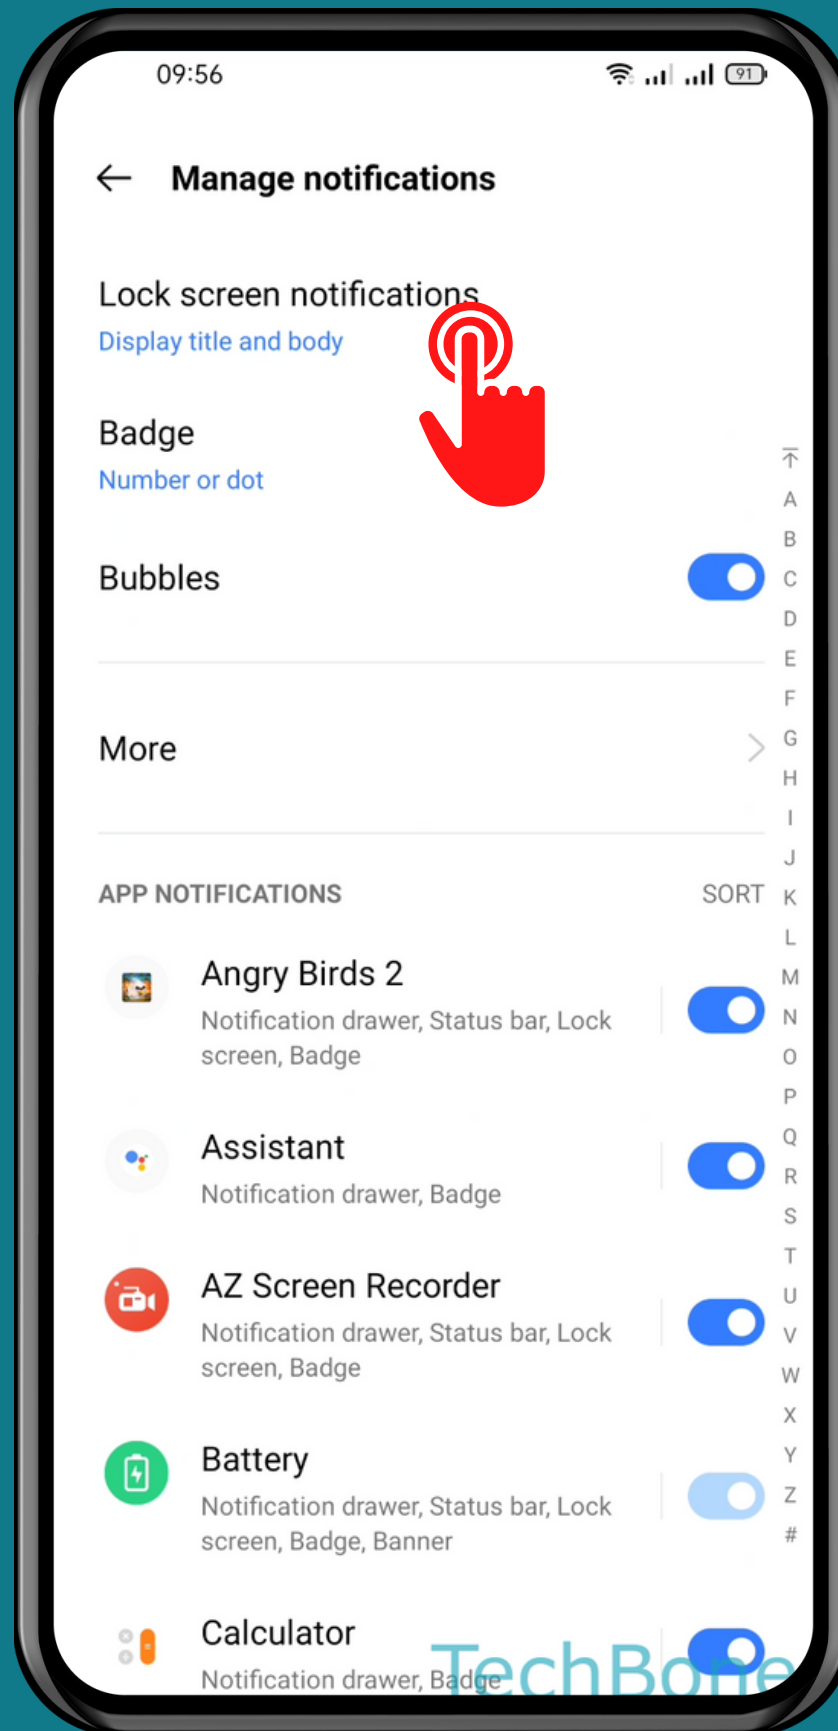

# Tap on Lock screen notifications

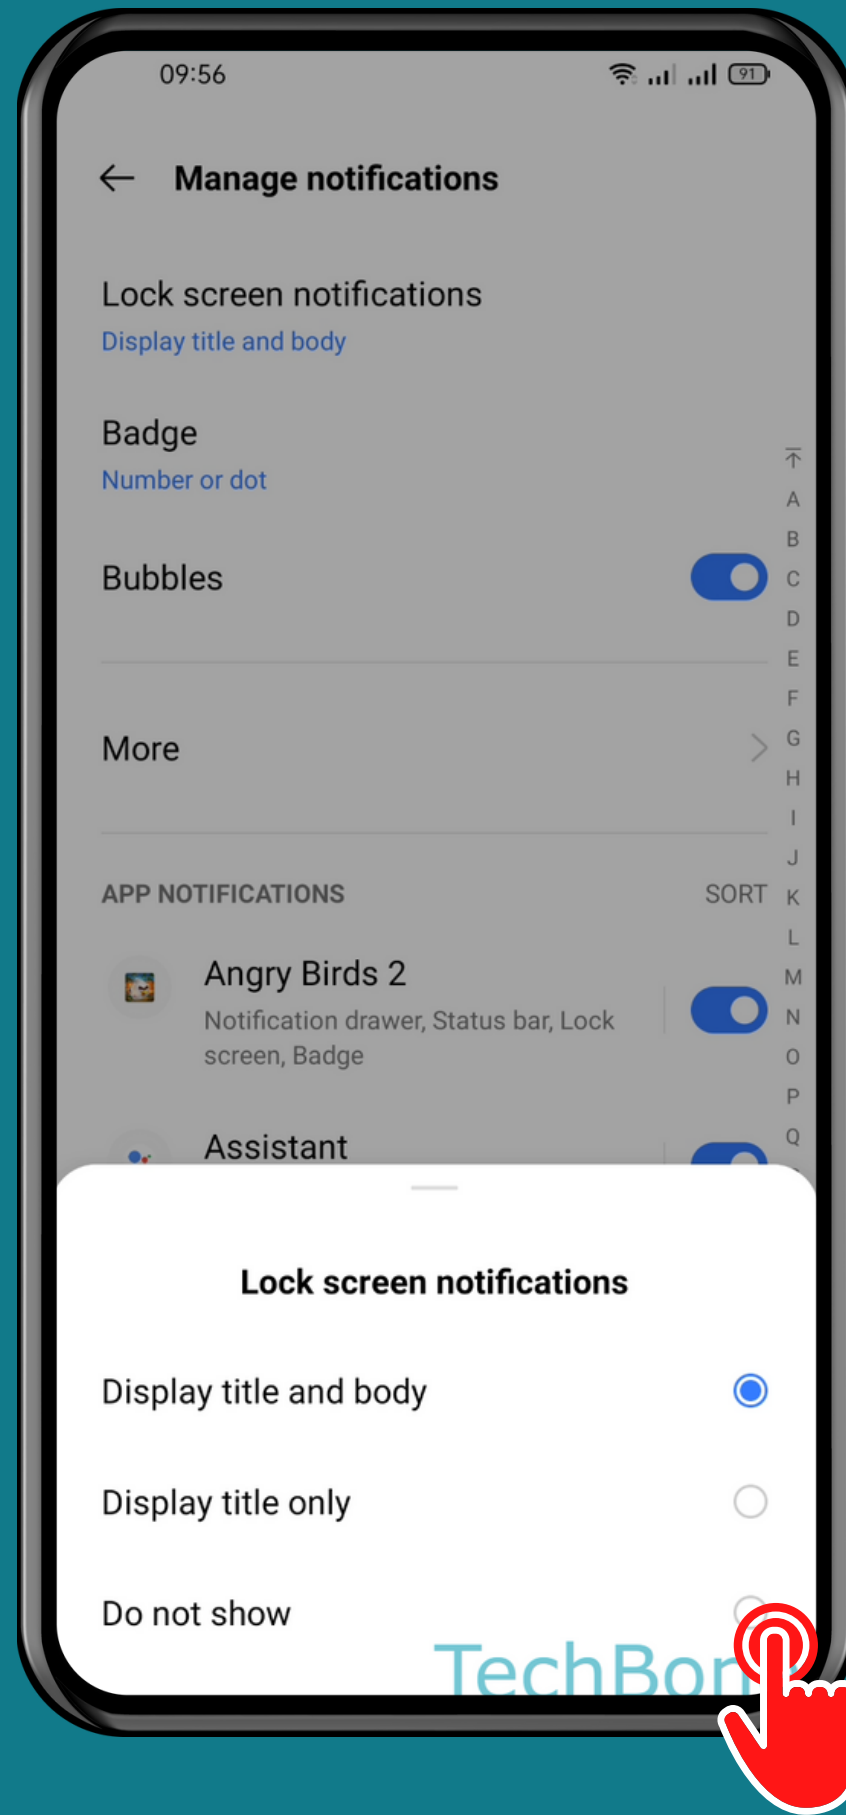

# Choose an Option

Done!