


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF AUTO CLICK AFTER POINTER STOP




Tap on
Settings

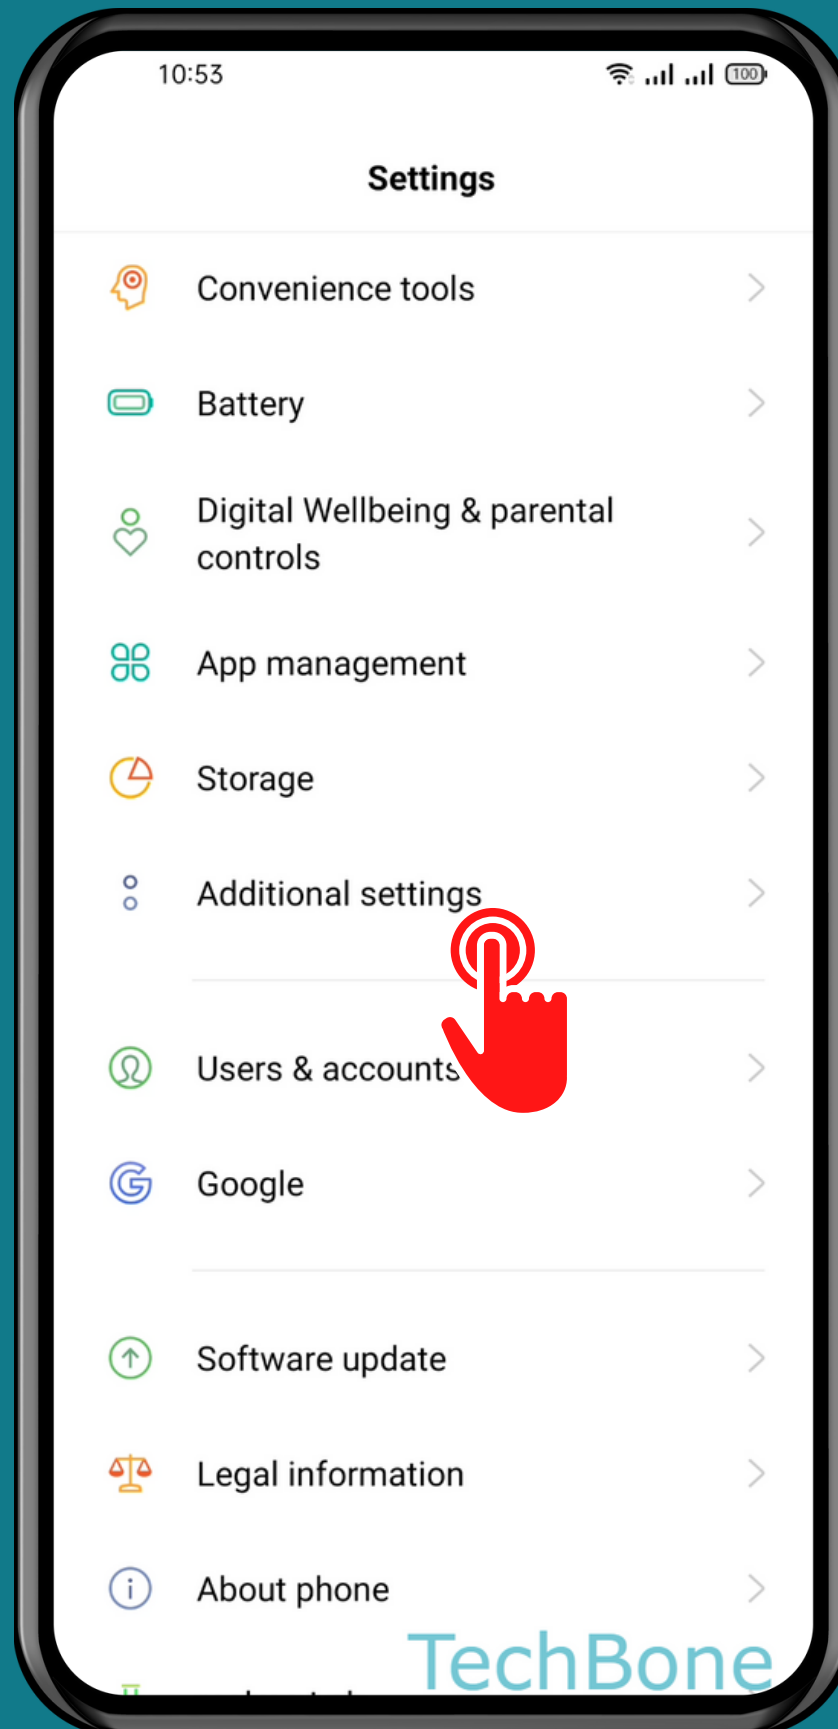


Tap on Additional settings

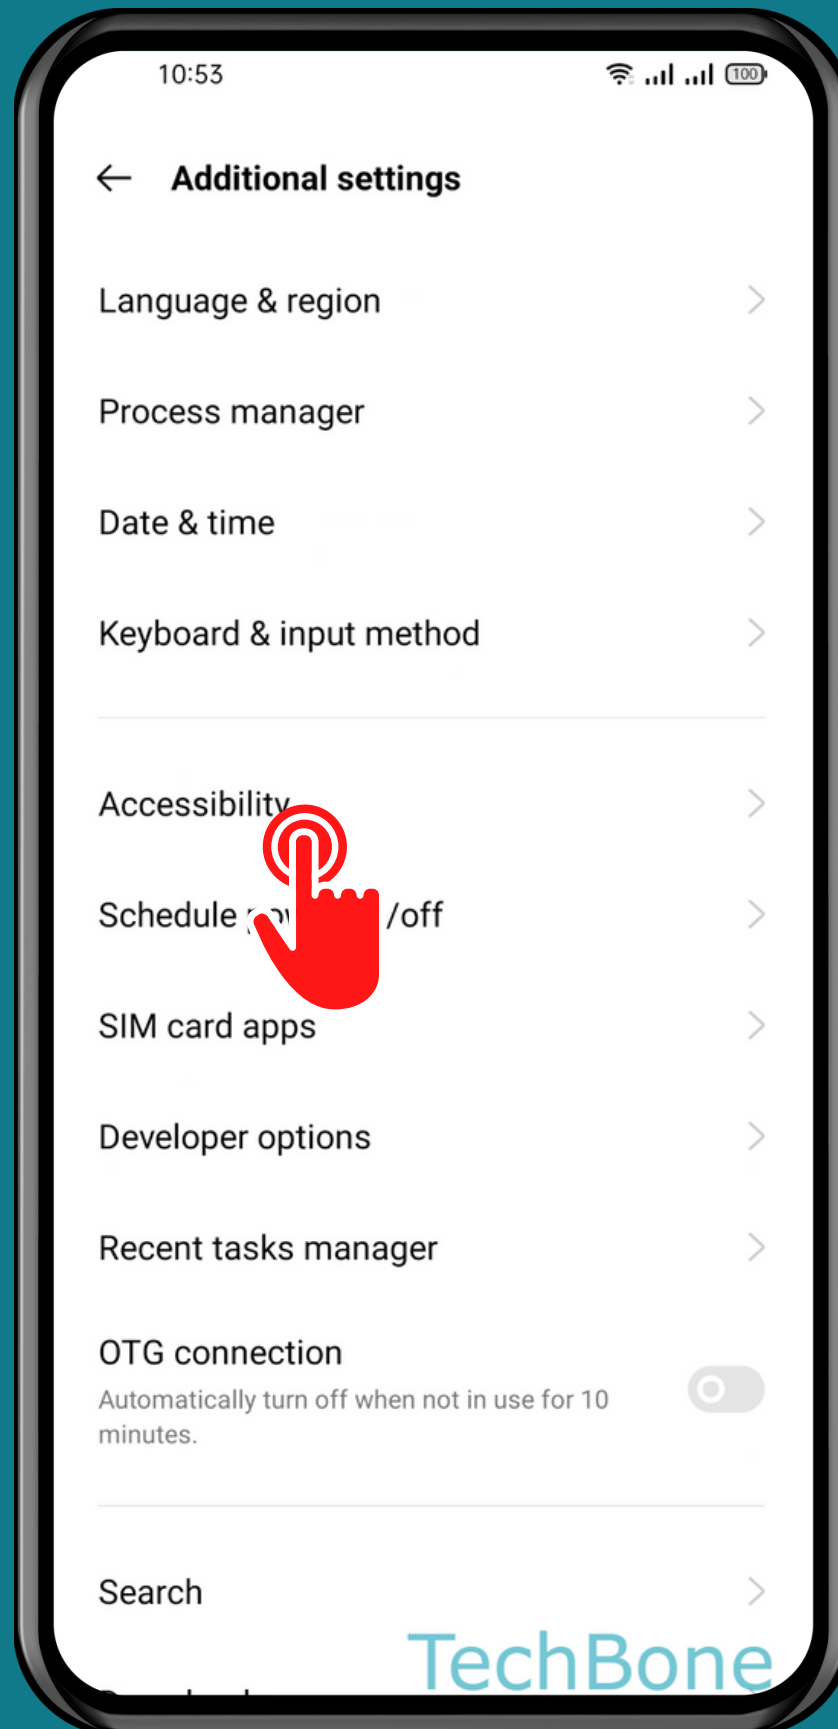


Tap on Accessibility

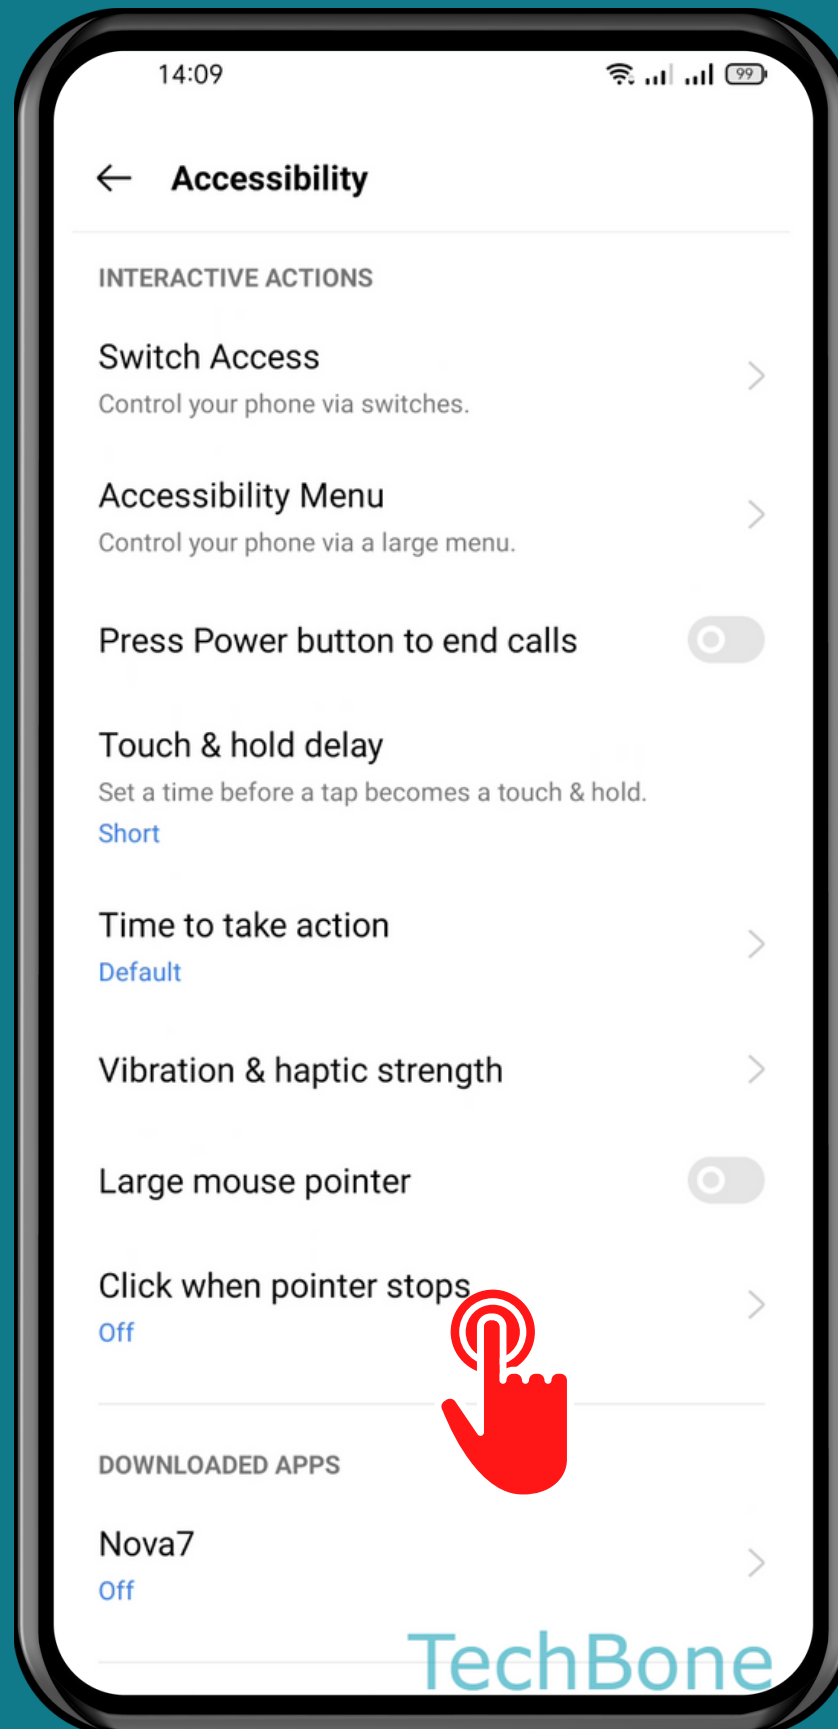

Tap on
Click when
pointer stops

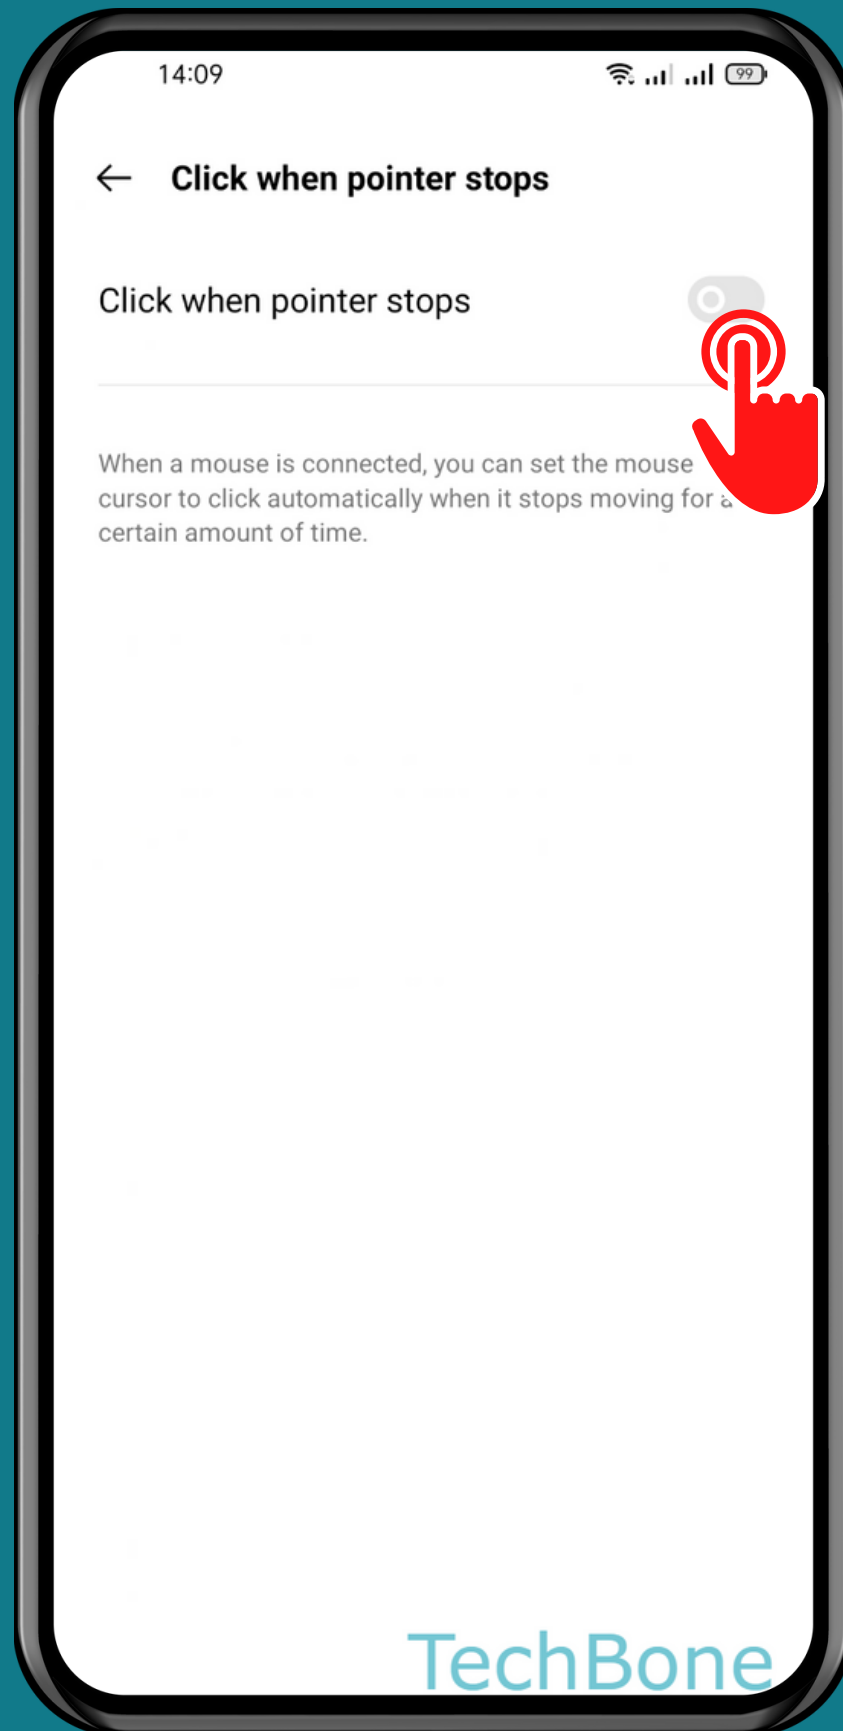

Turn On/Off Click when pointer stops

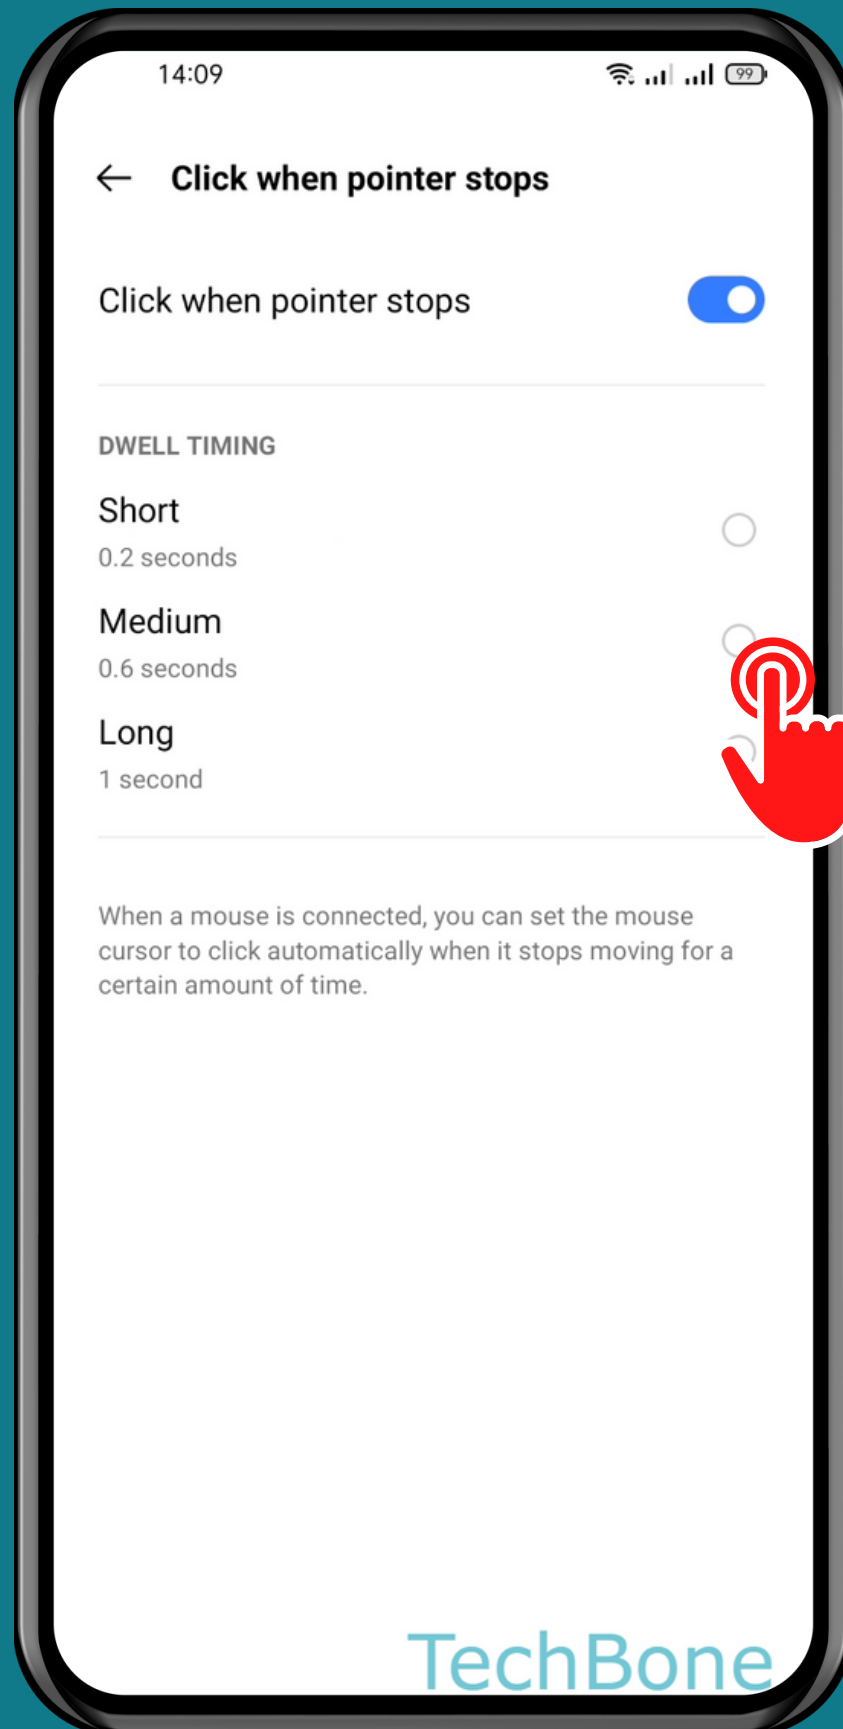

Set the Dwell timing

Done!