


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF AUTO-ROTATE SCREEN



Tap on
Settings

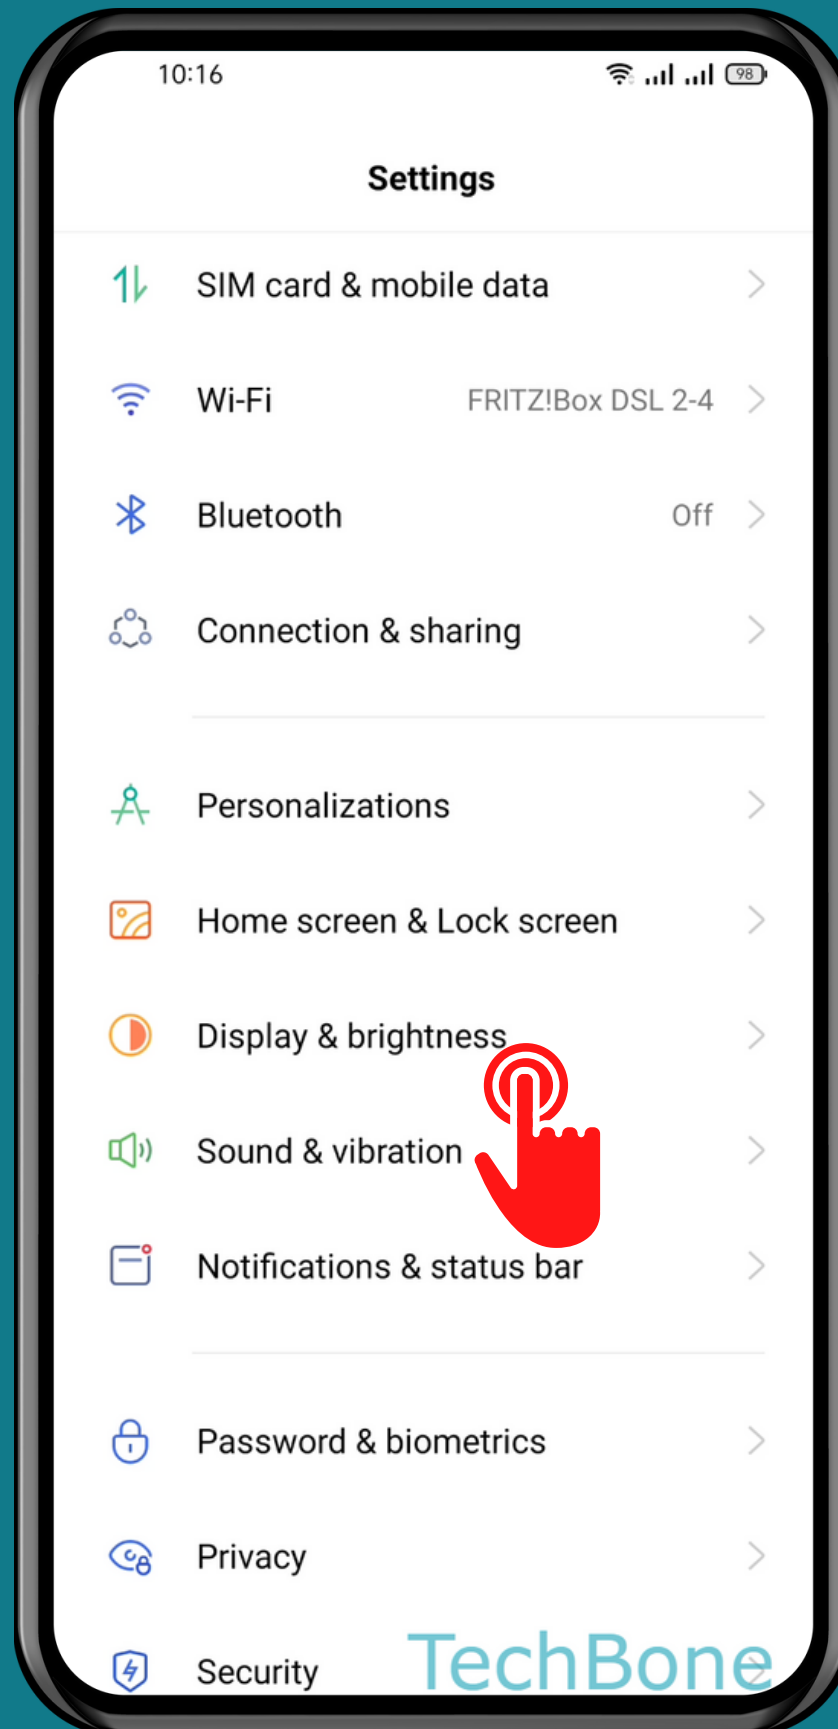

Tap on Display & brightness

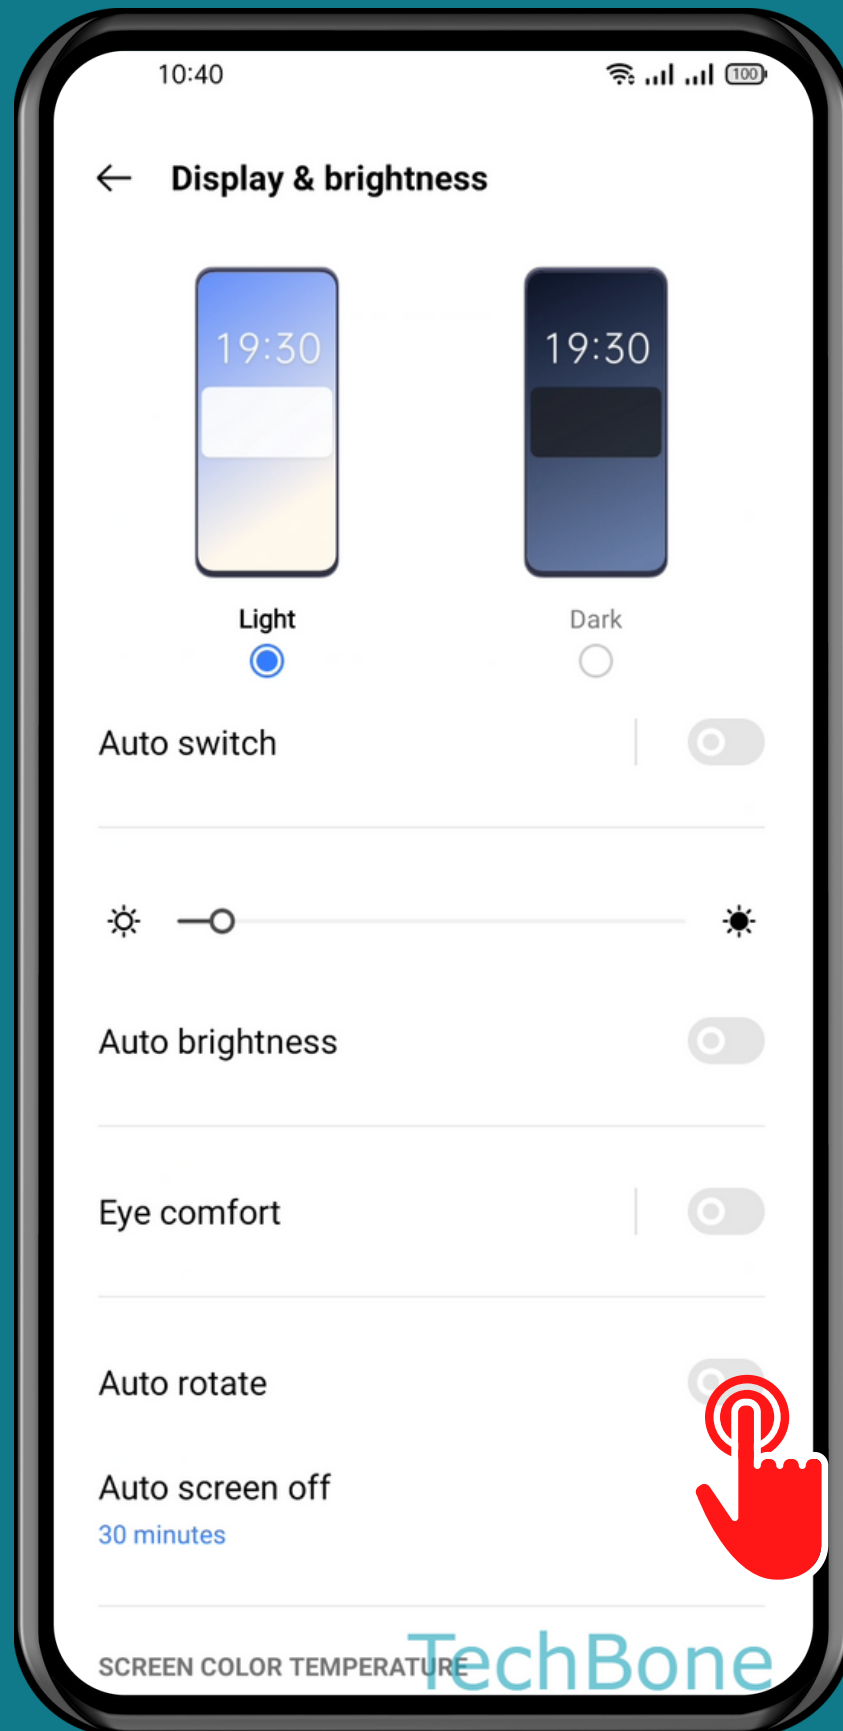

Turn On/Off Auto rotate

Done!