


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF AUTOFILL SERVICE




Tap on
Settings

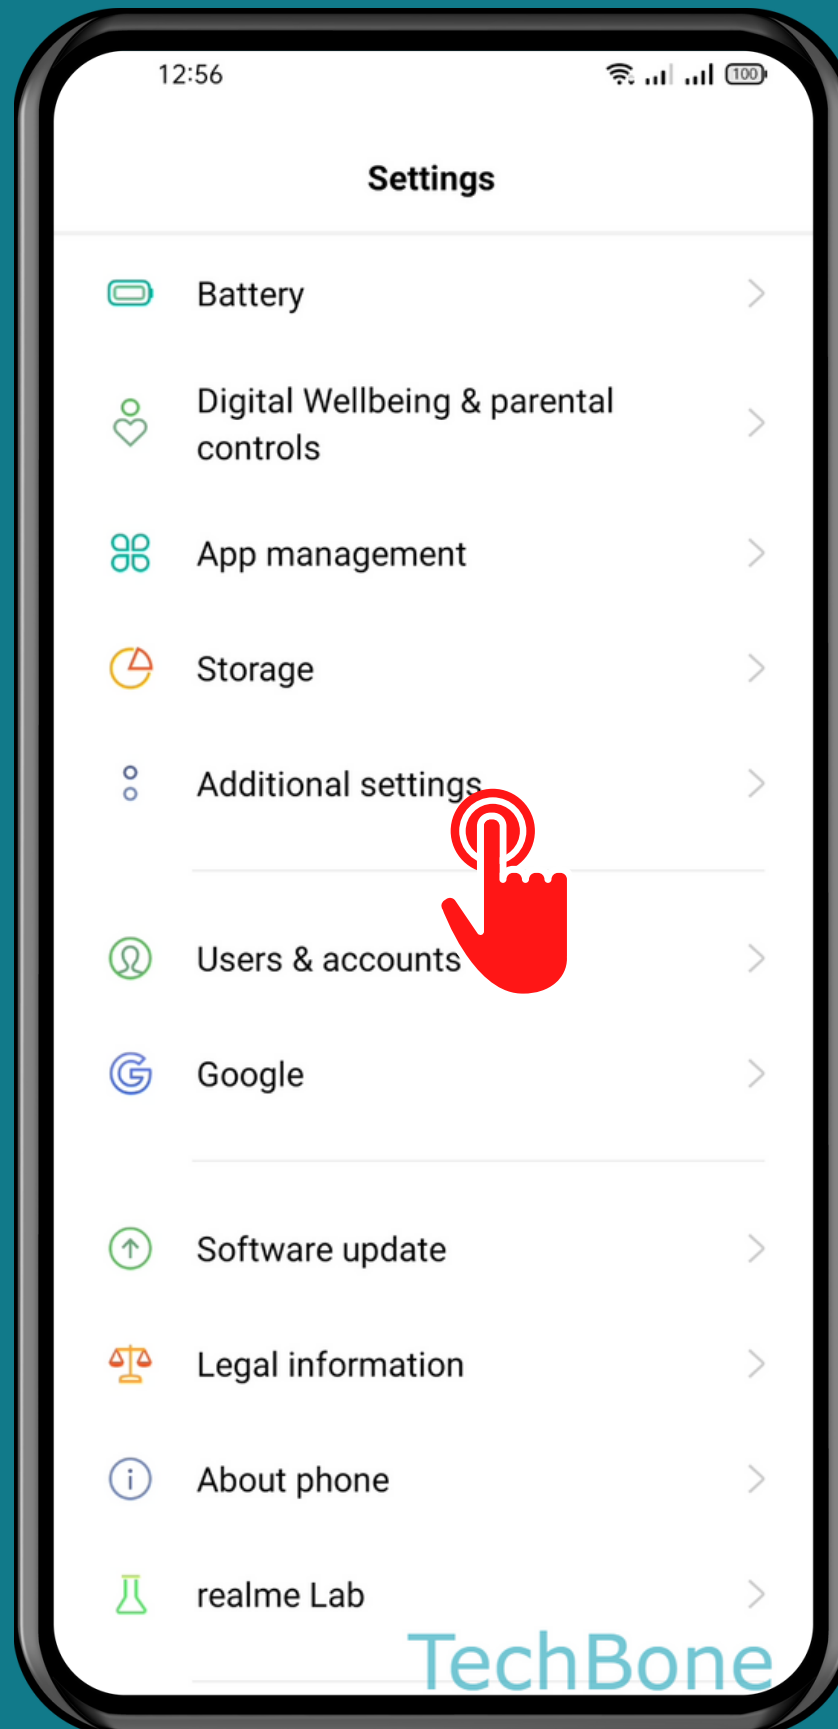


Tap on Additional settings

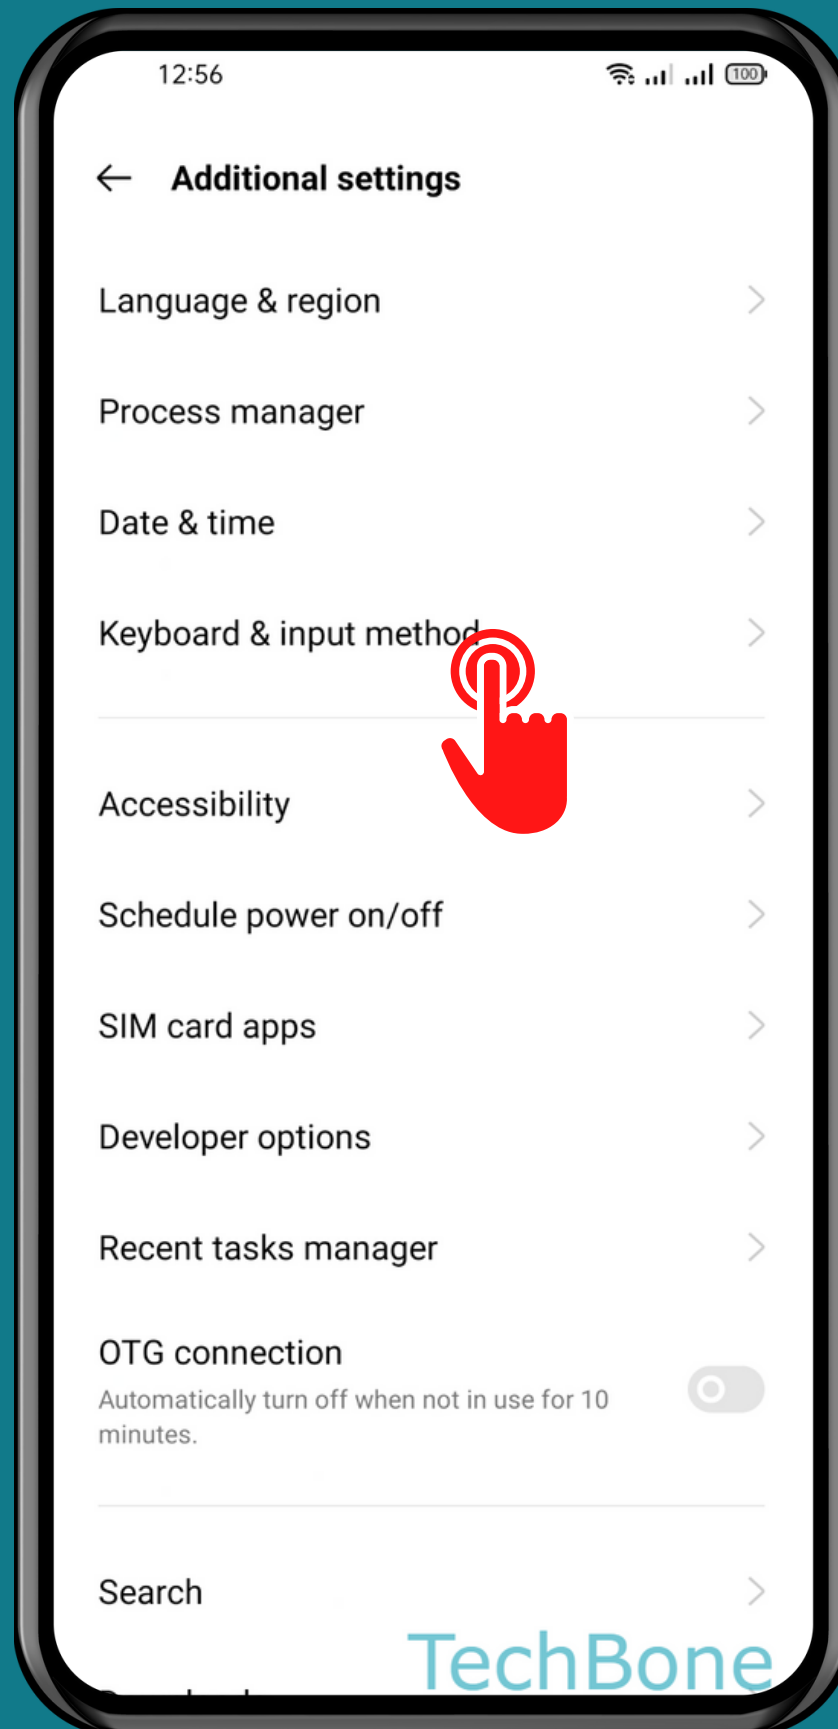

Tap on Keyboard & input method

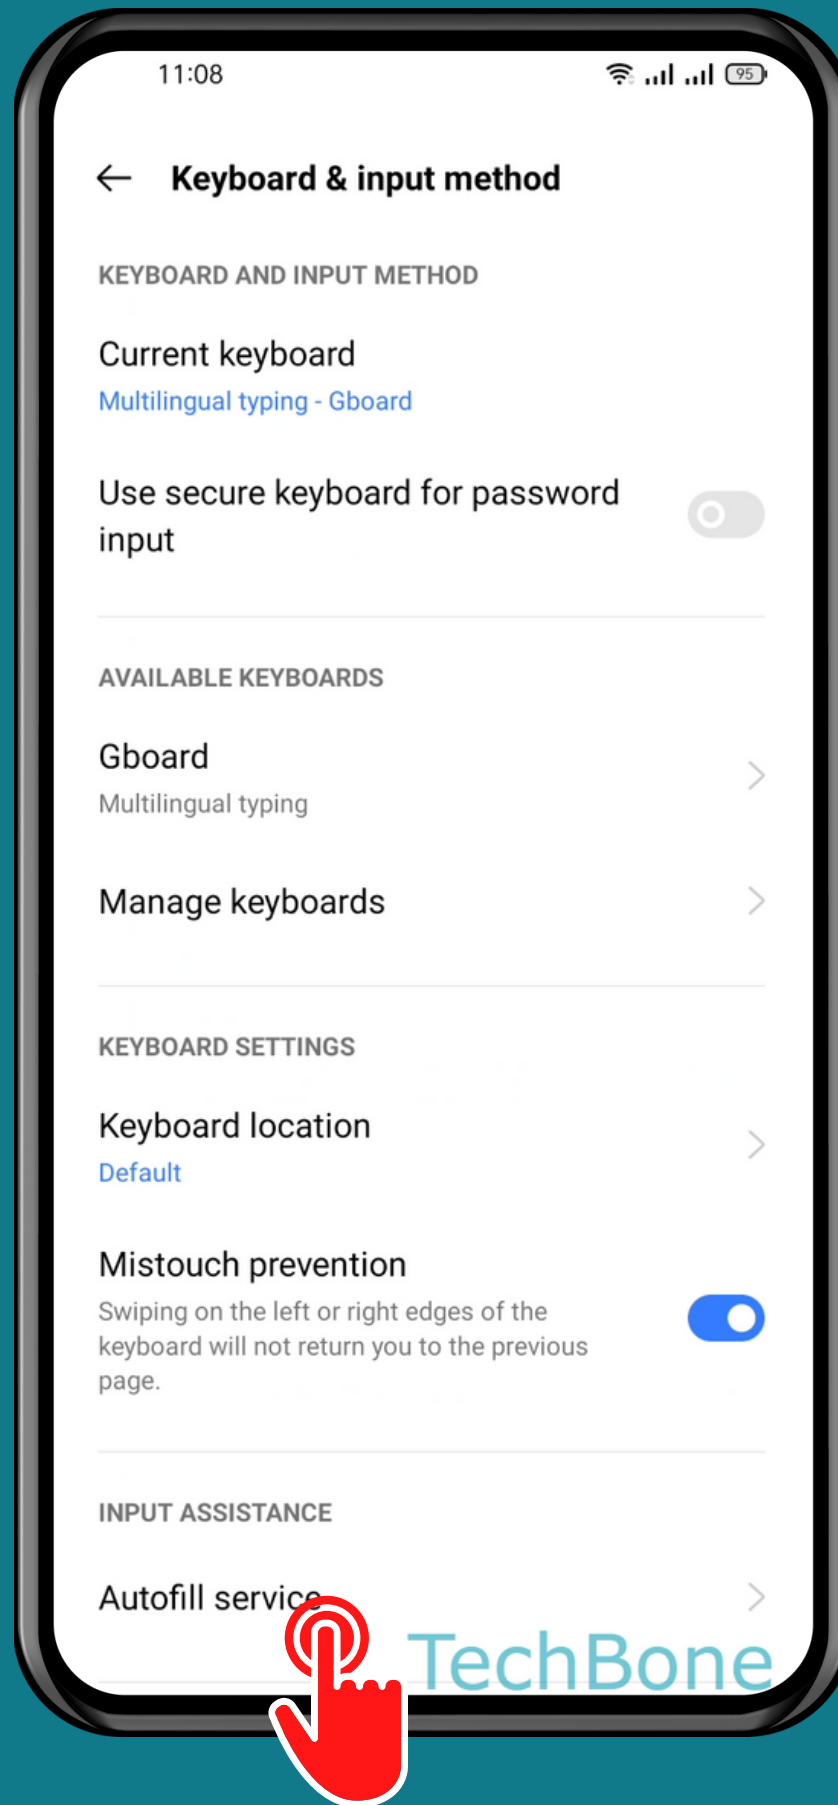

Tap on
Autofill service

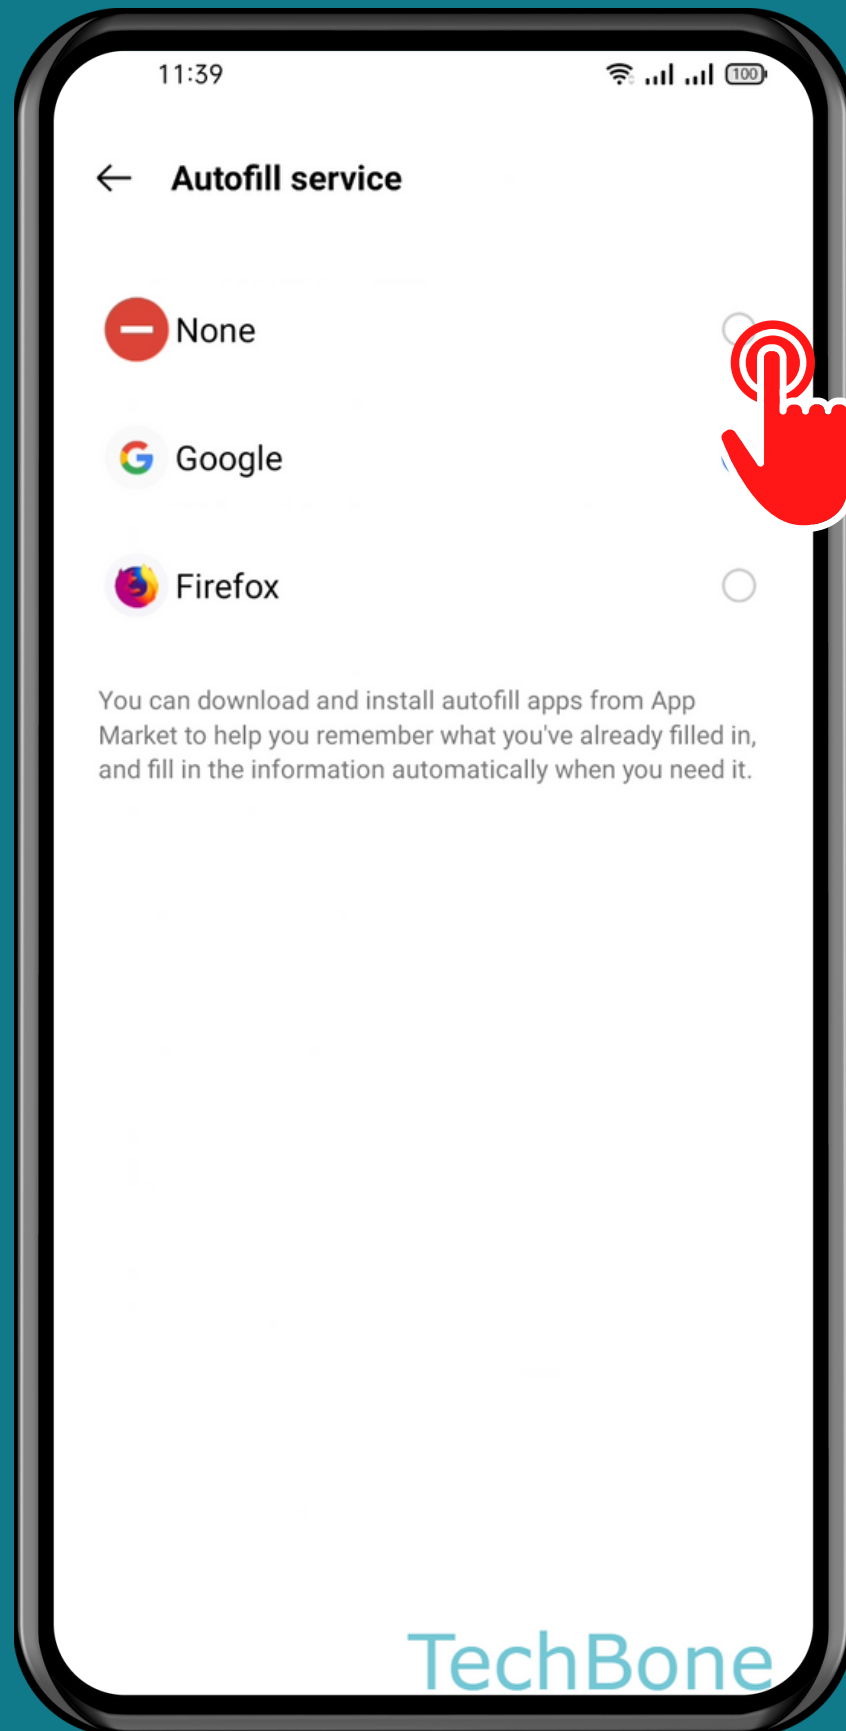

Choose an Autofill service or None

Done!