


REALME

Android 11 - realme UI 2


# HOW TO TURN ON/OFF CONTACT SHARING VIA BLUETOOTH




Tap on  
Settings

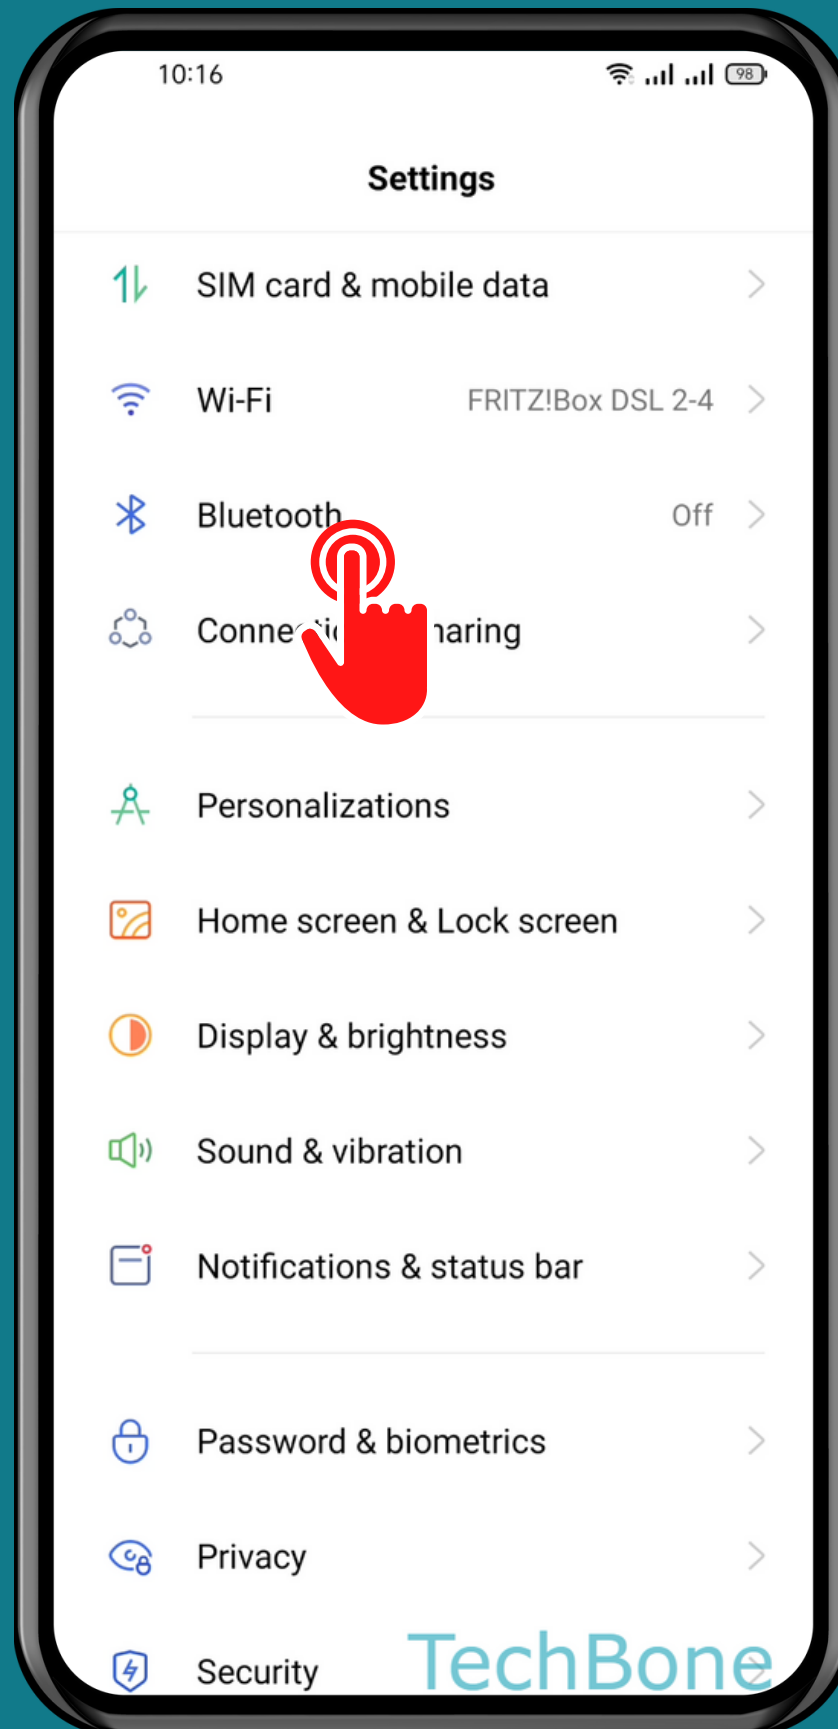

# Tap on Bluetooth

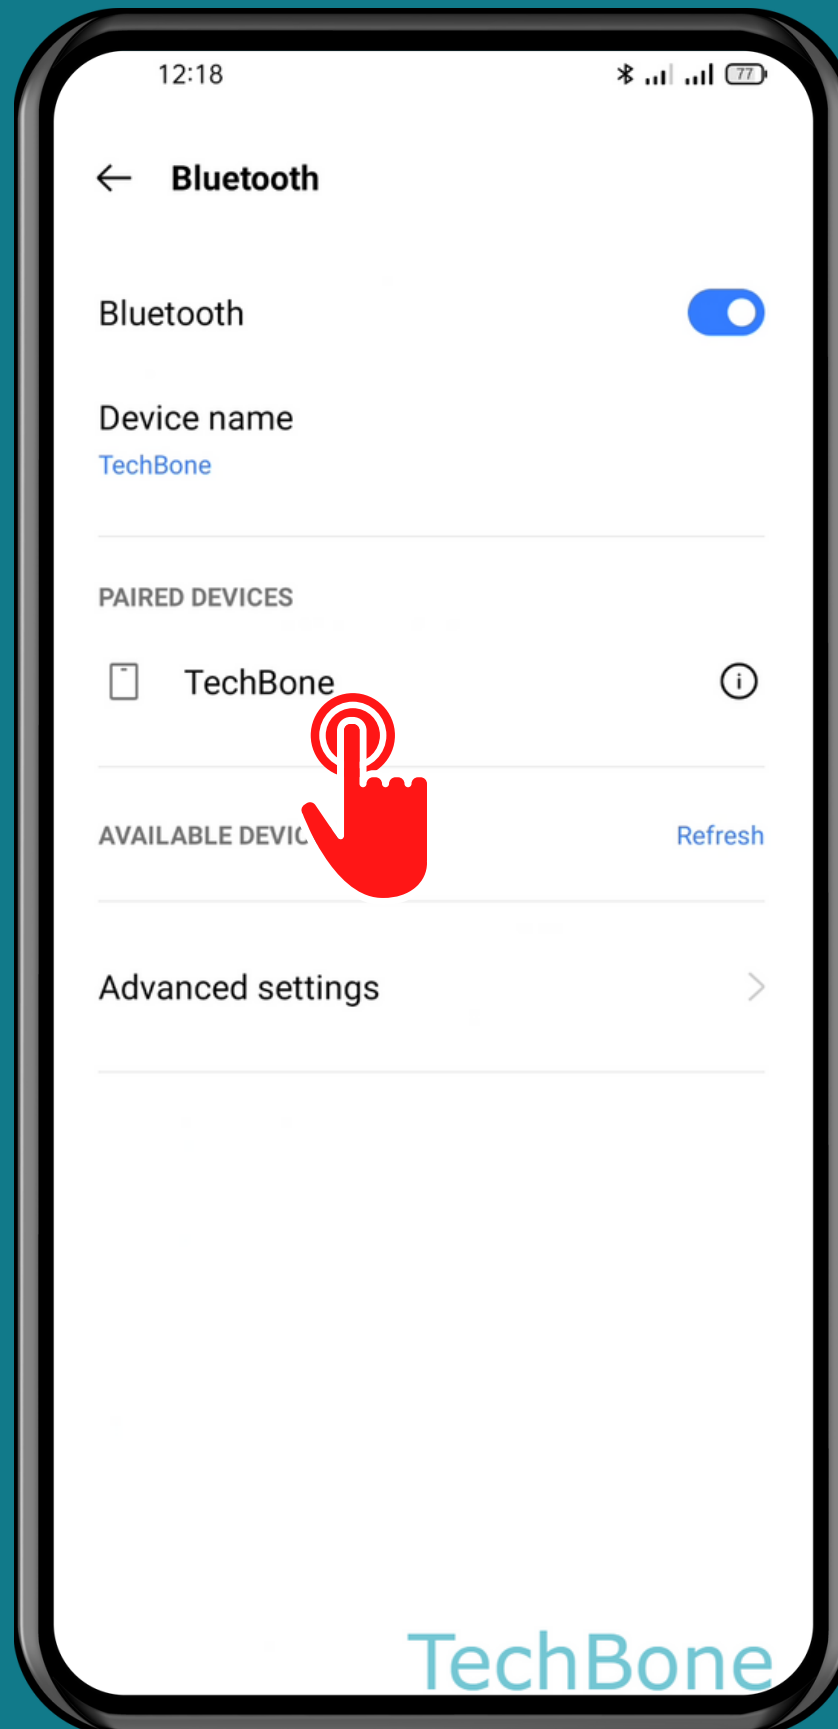

Select a  
Paired device

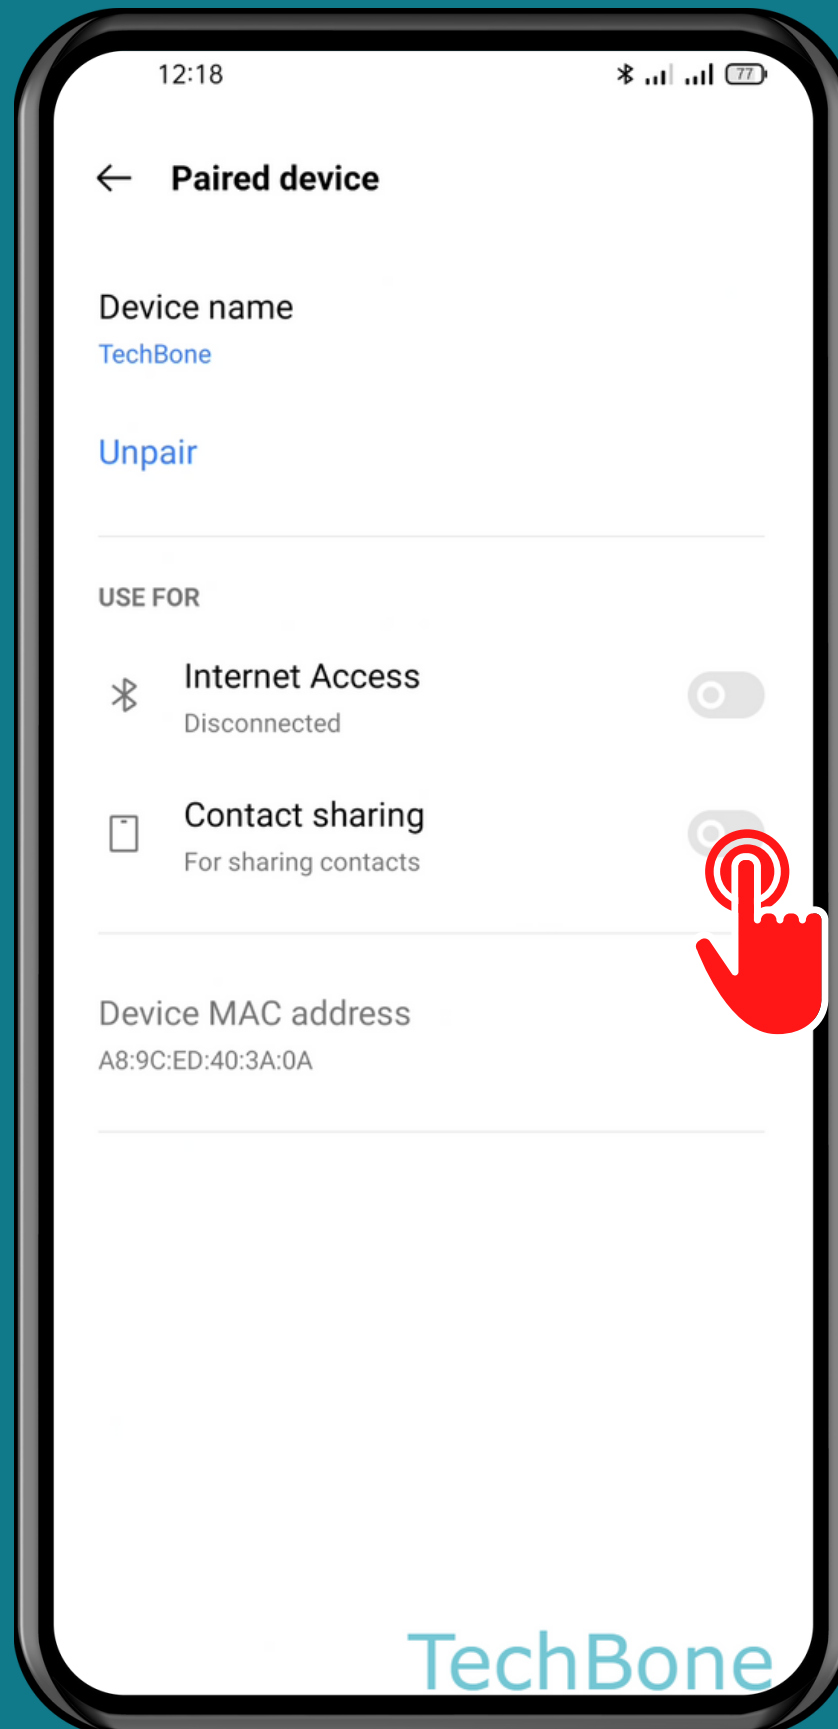

# Turn On/Off Contact sharing

Done!