


REALME

Android 11 - realme UI 2


# HOW TO TURN ON/OFF DATA ROAMING




Tap on  
Settings

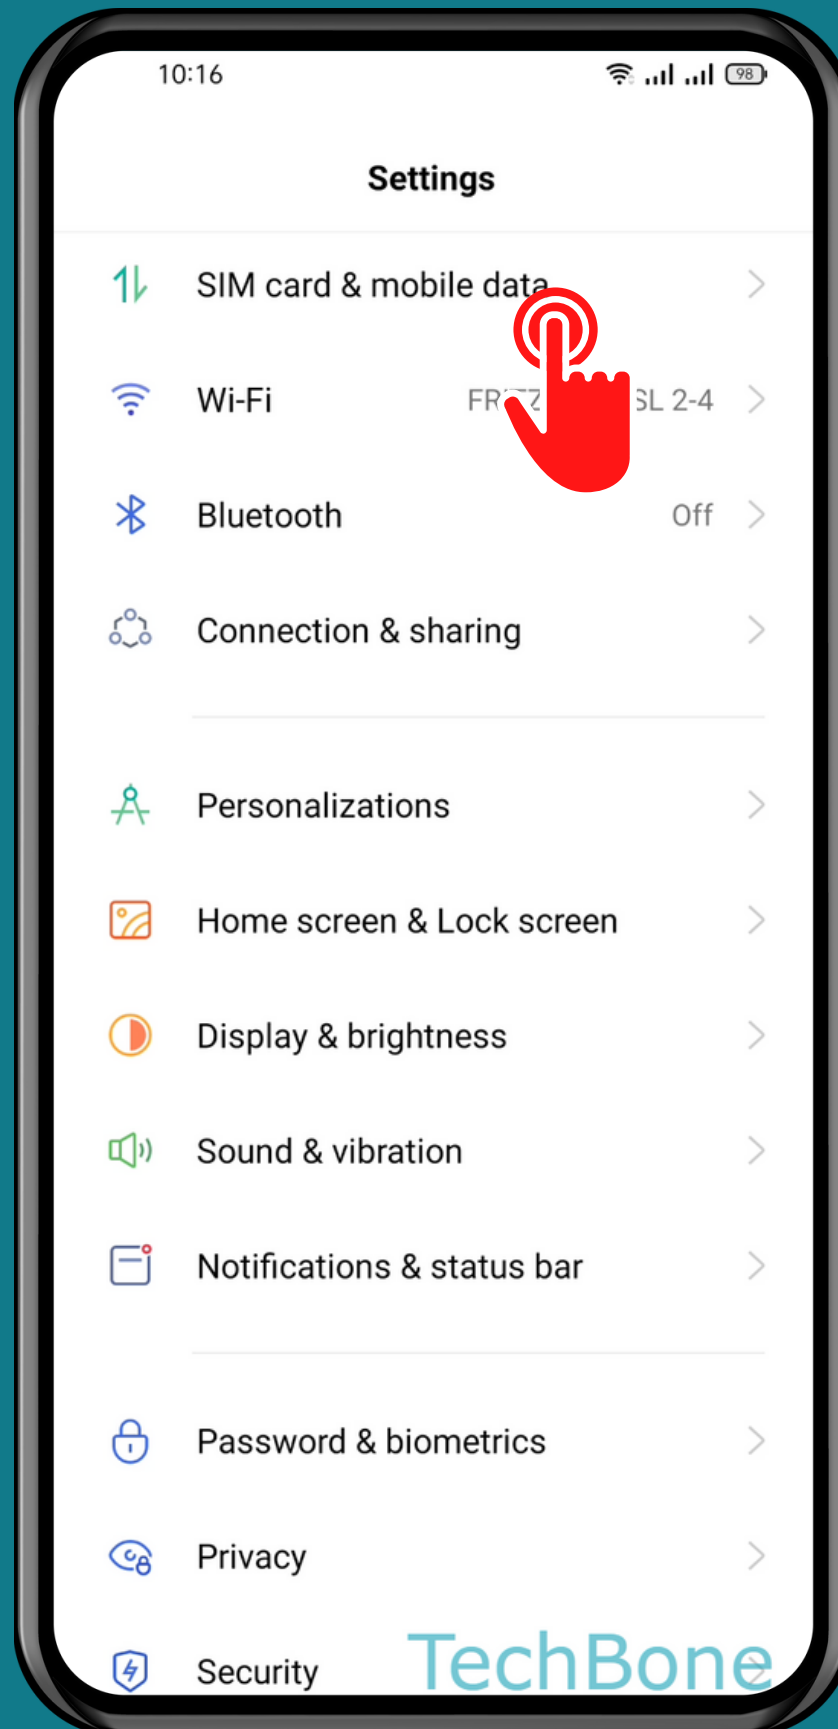


Tap on  
SIM card &  
mobile data

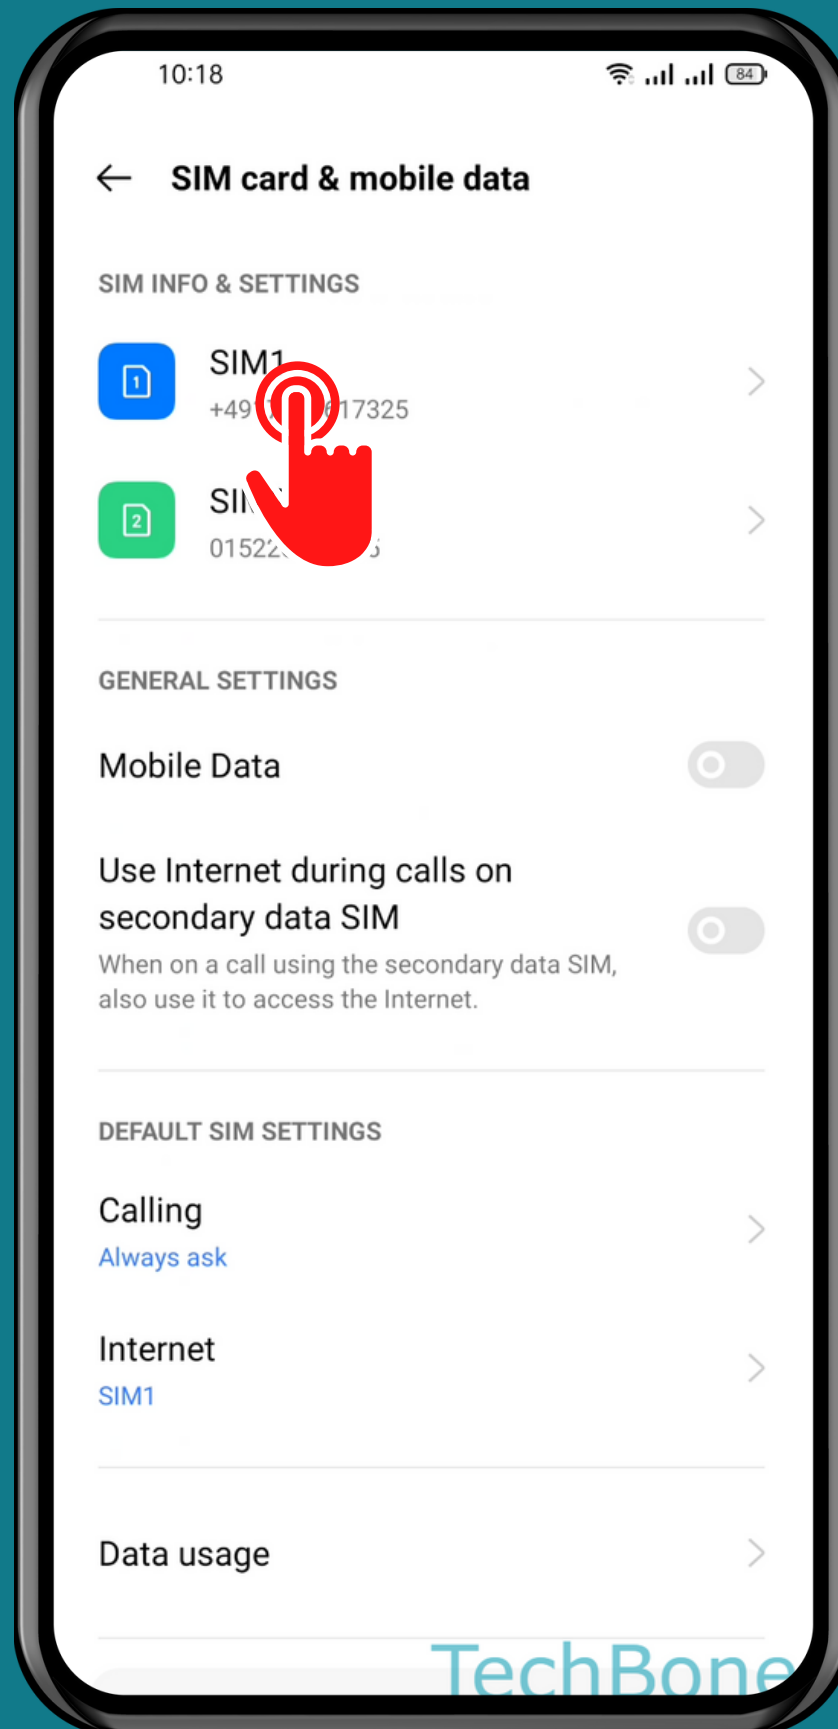

# Choose a SIM card (Dual SIM)

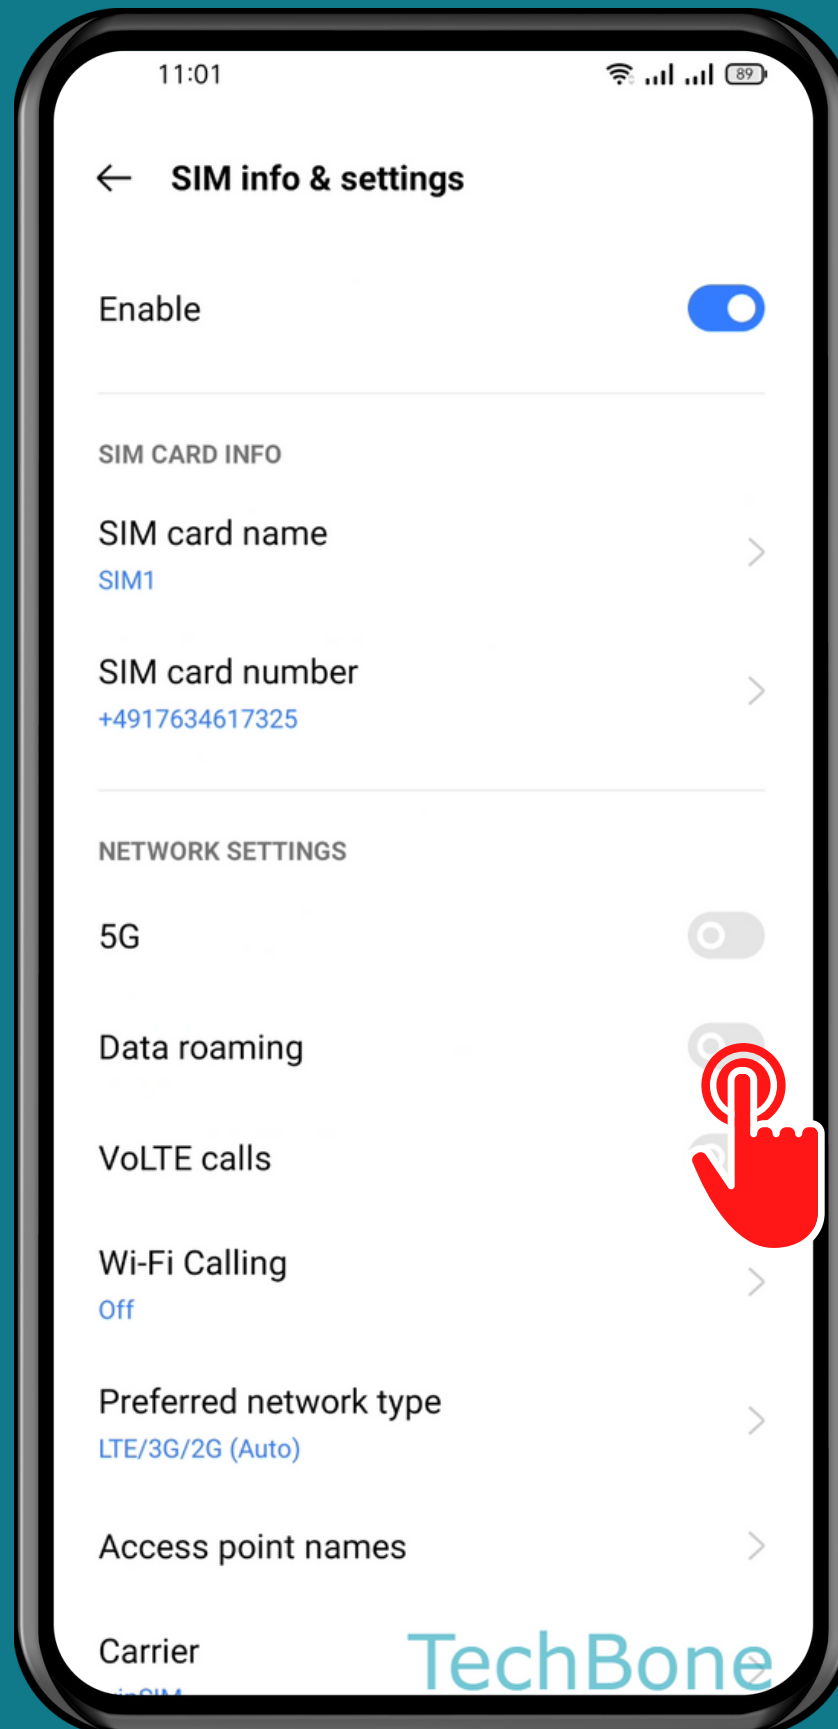

# Turn On/Off Data roaming

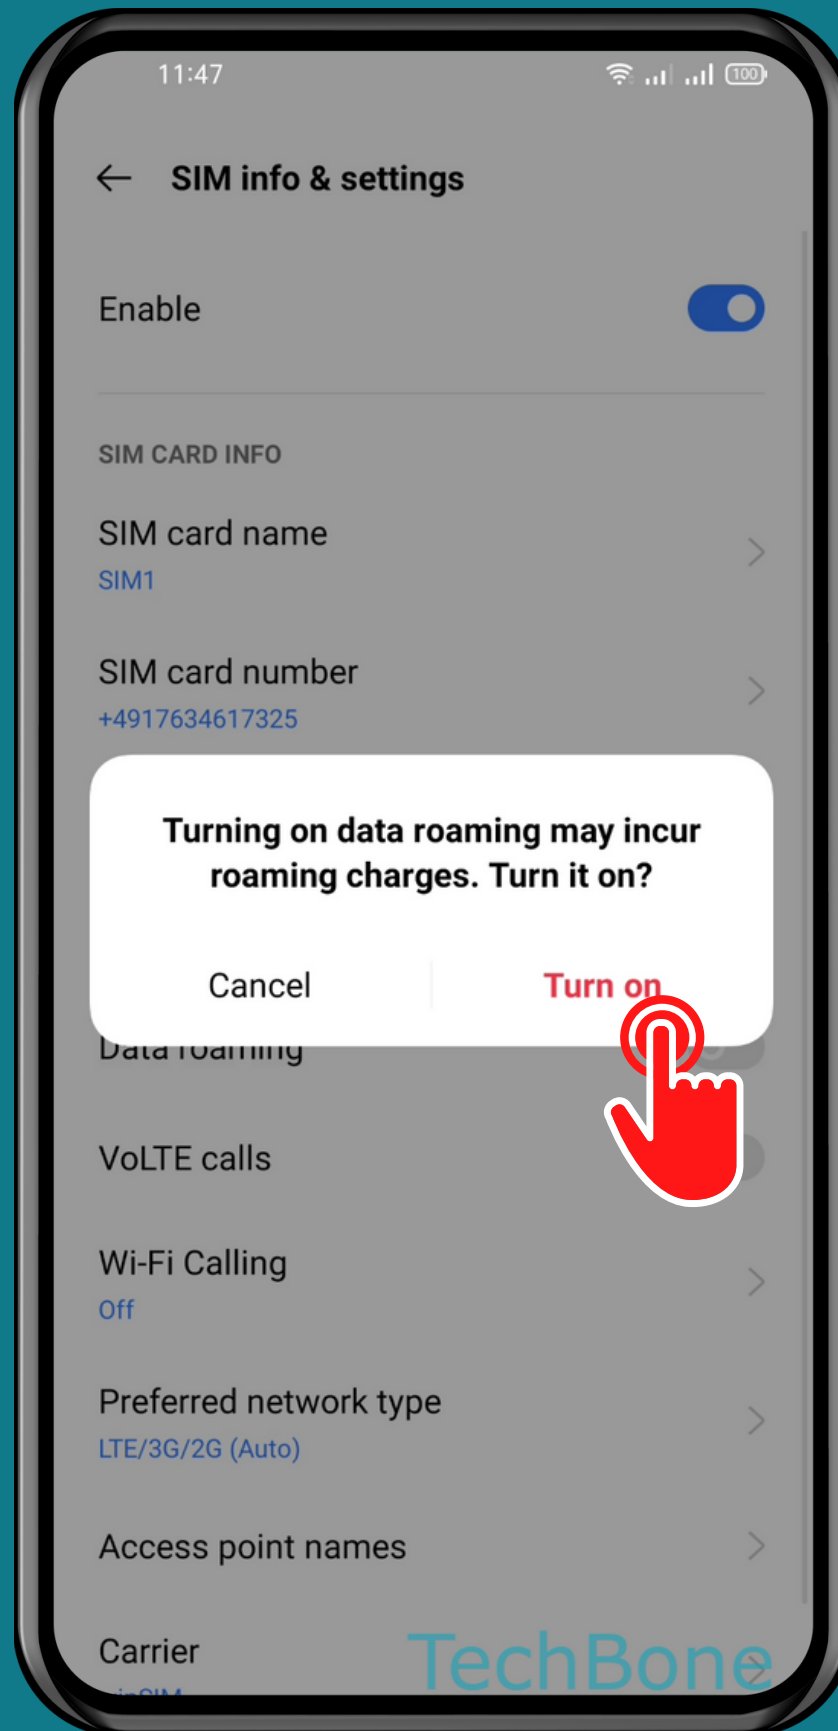

Tap on  
Turn on

Done!