


REALME

Android 11 - realme UI 2


# HOW TO TURN ON/OFF EMERGENCY LOCATION SERVICE




Tap on  
Settings

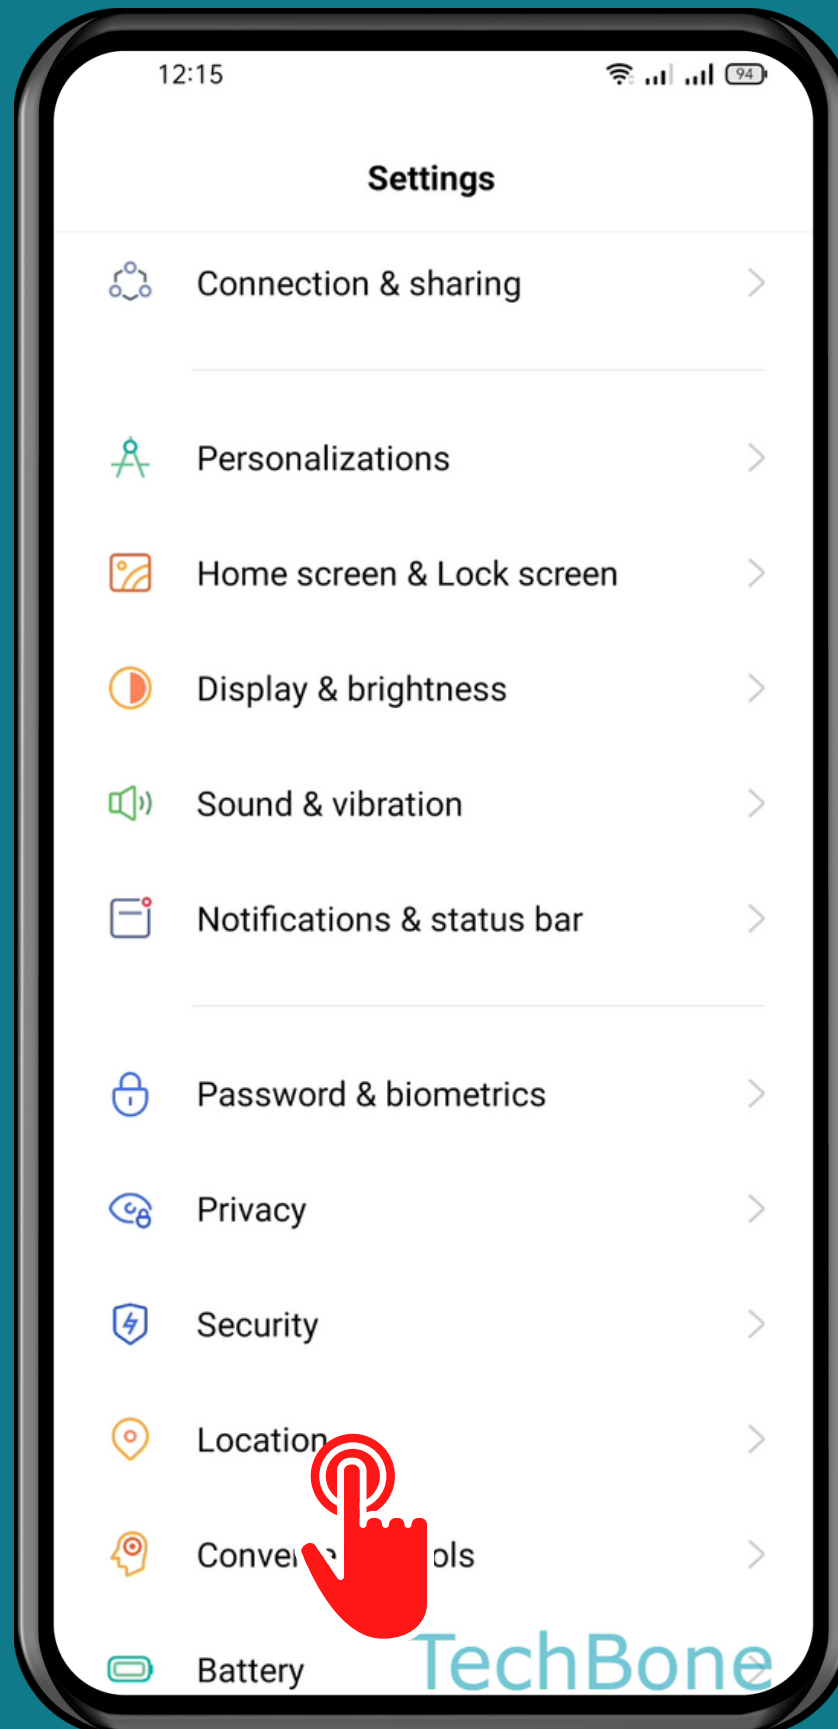

# Tap on Location

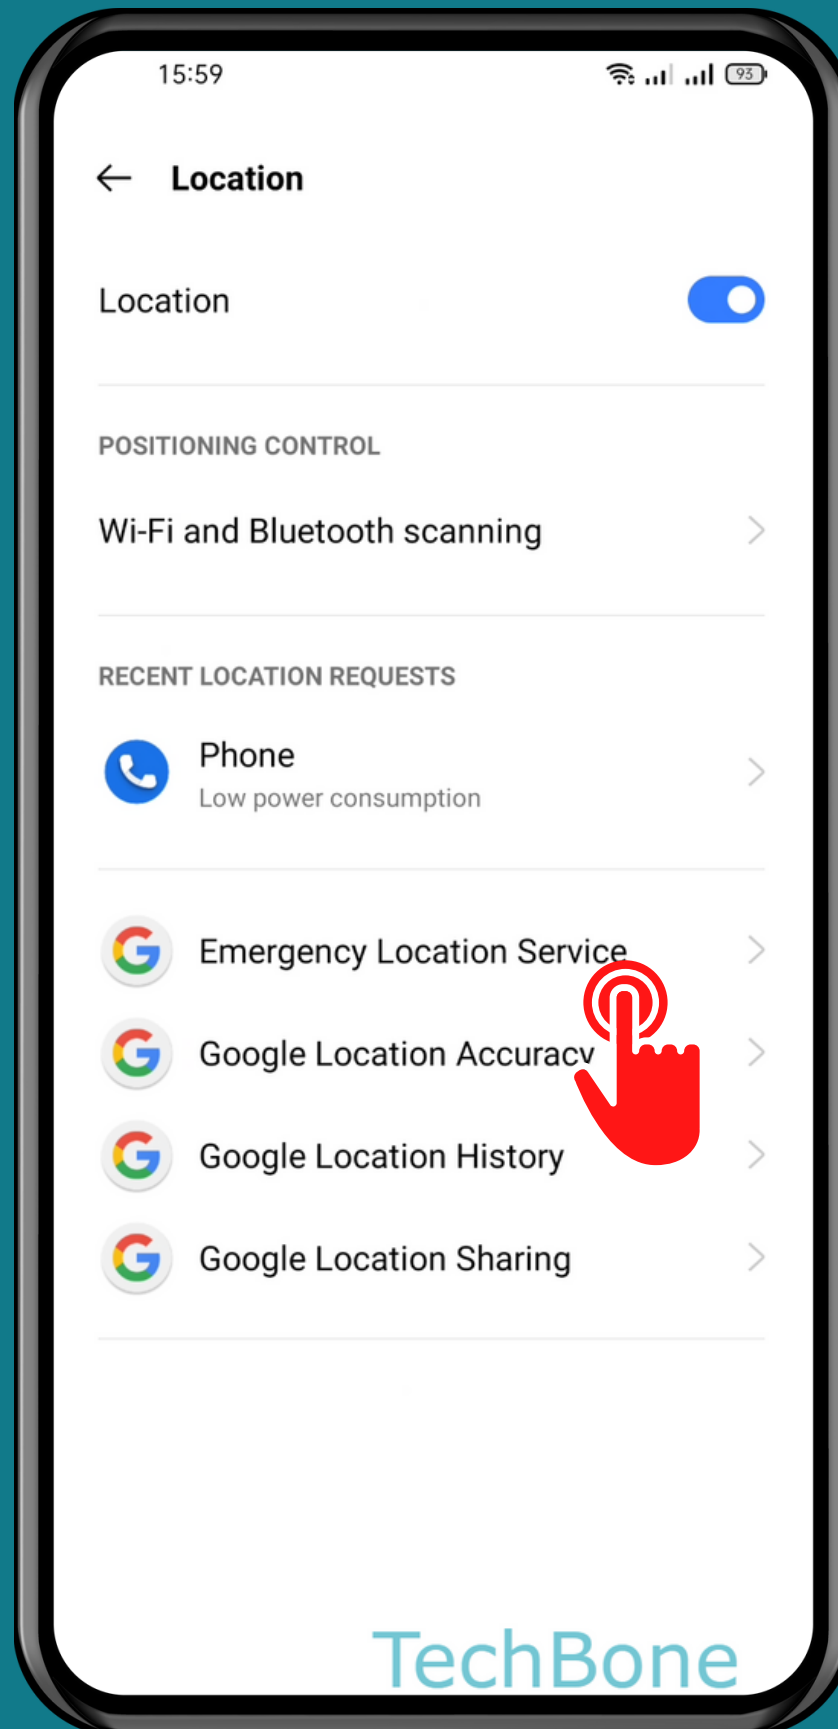

# Tap on Emergency Location Service

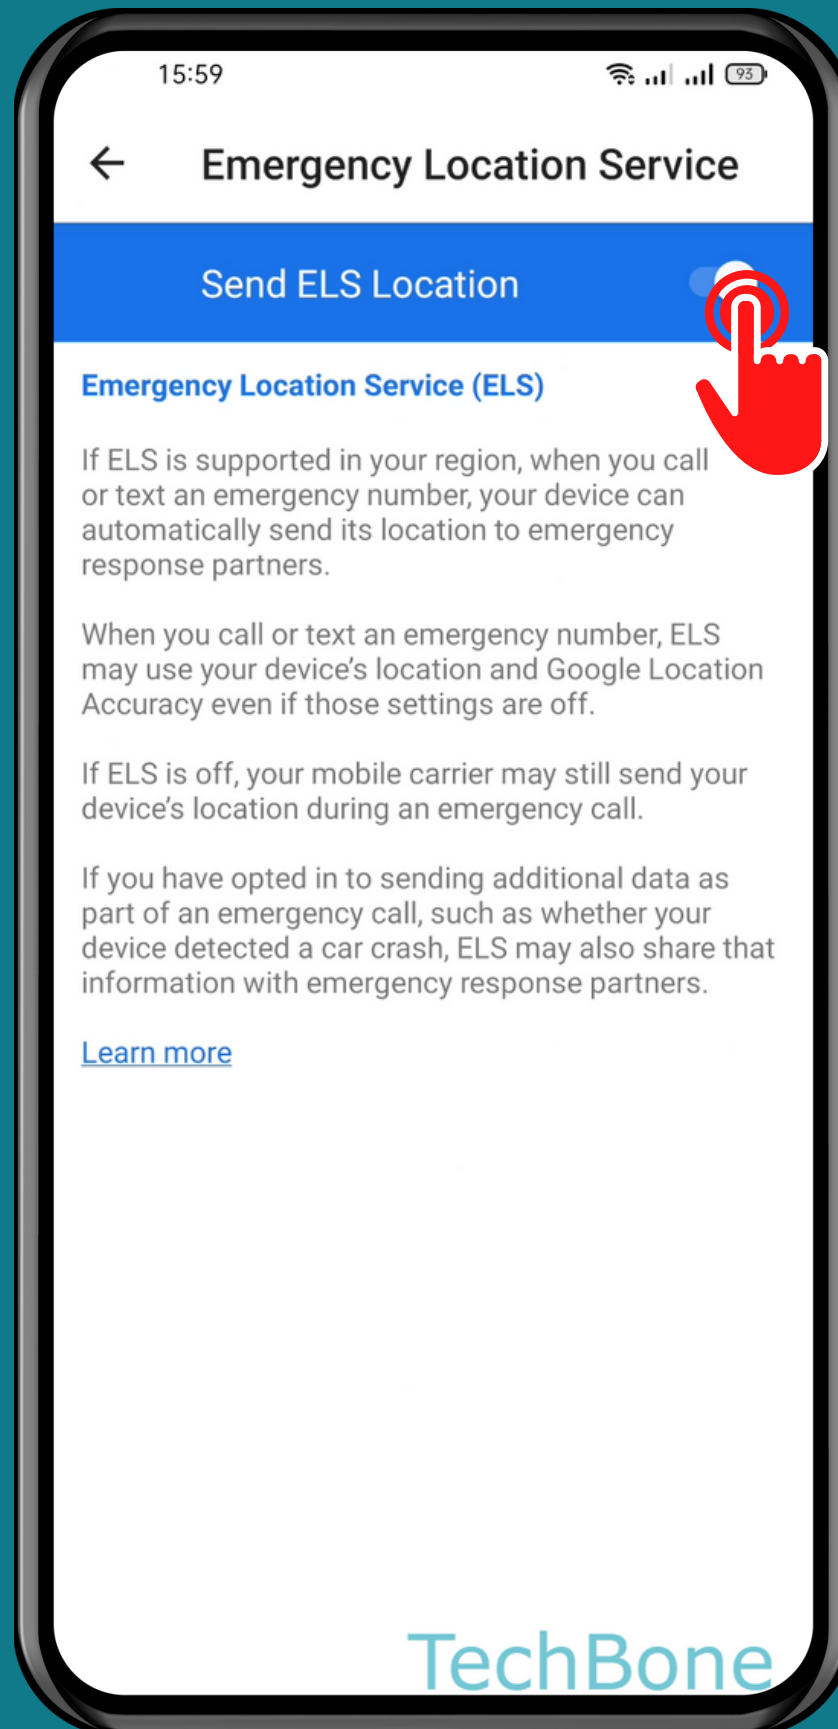

# Turn On/Off Send ELS Location

Done!