


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF HIGH PERFORMANCE MODE




Tap on
Settings

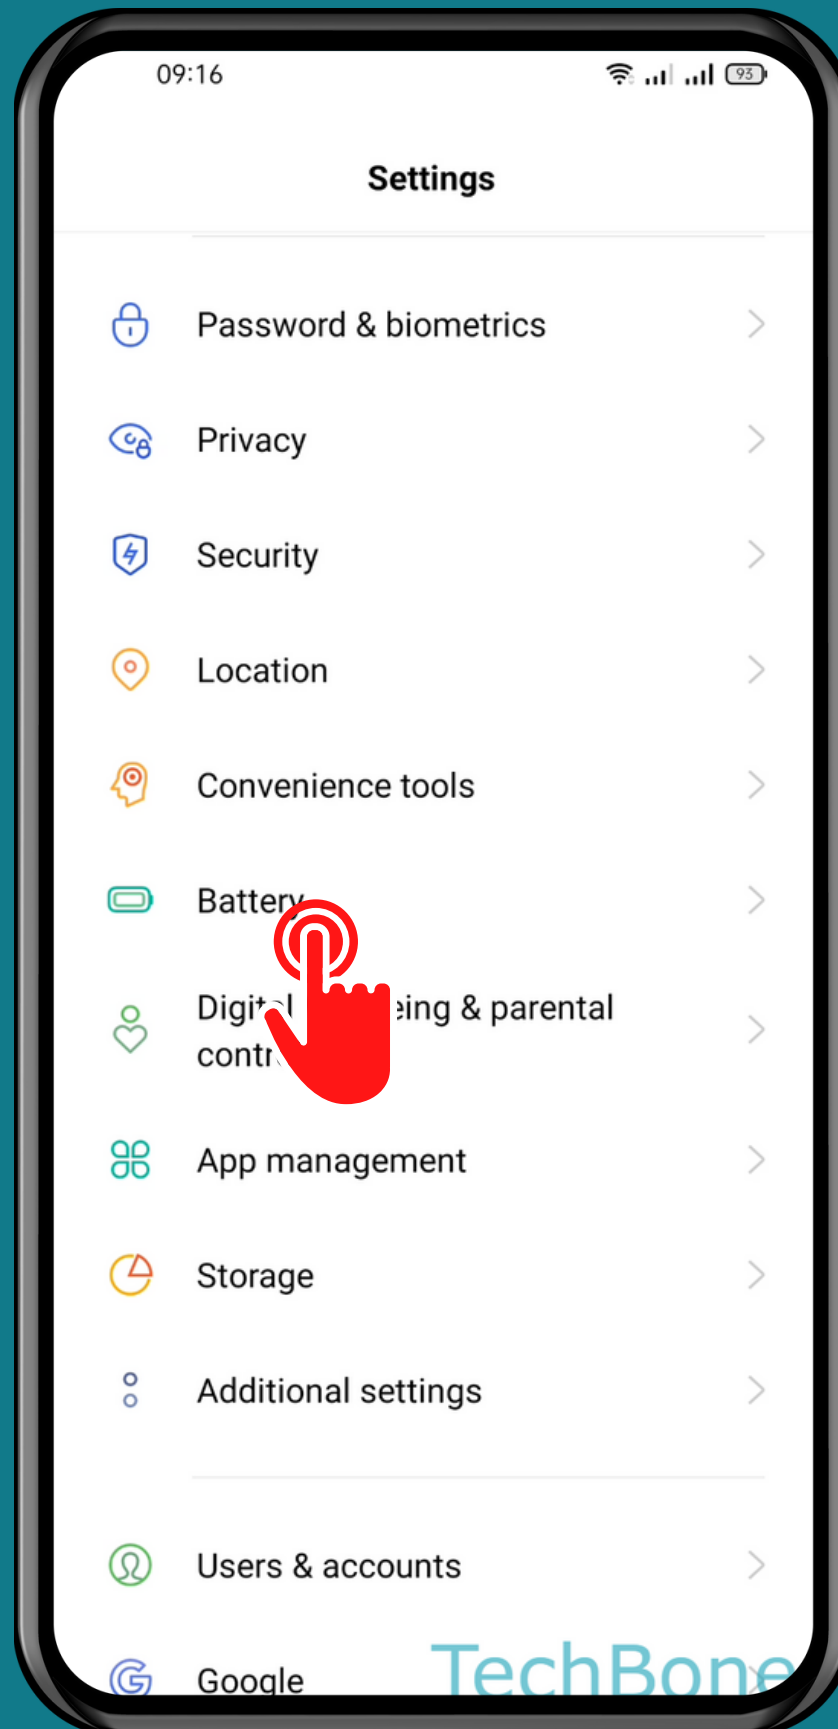


Tap on
Battery

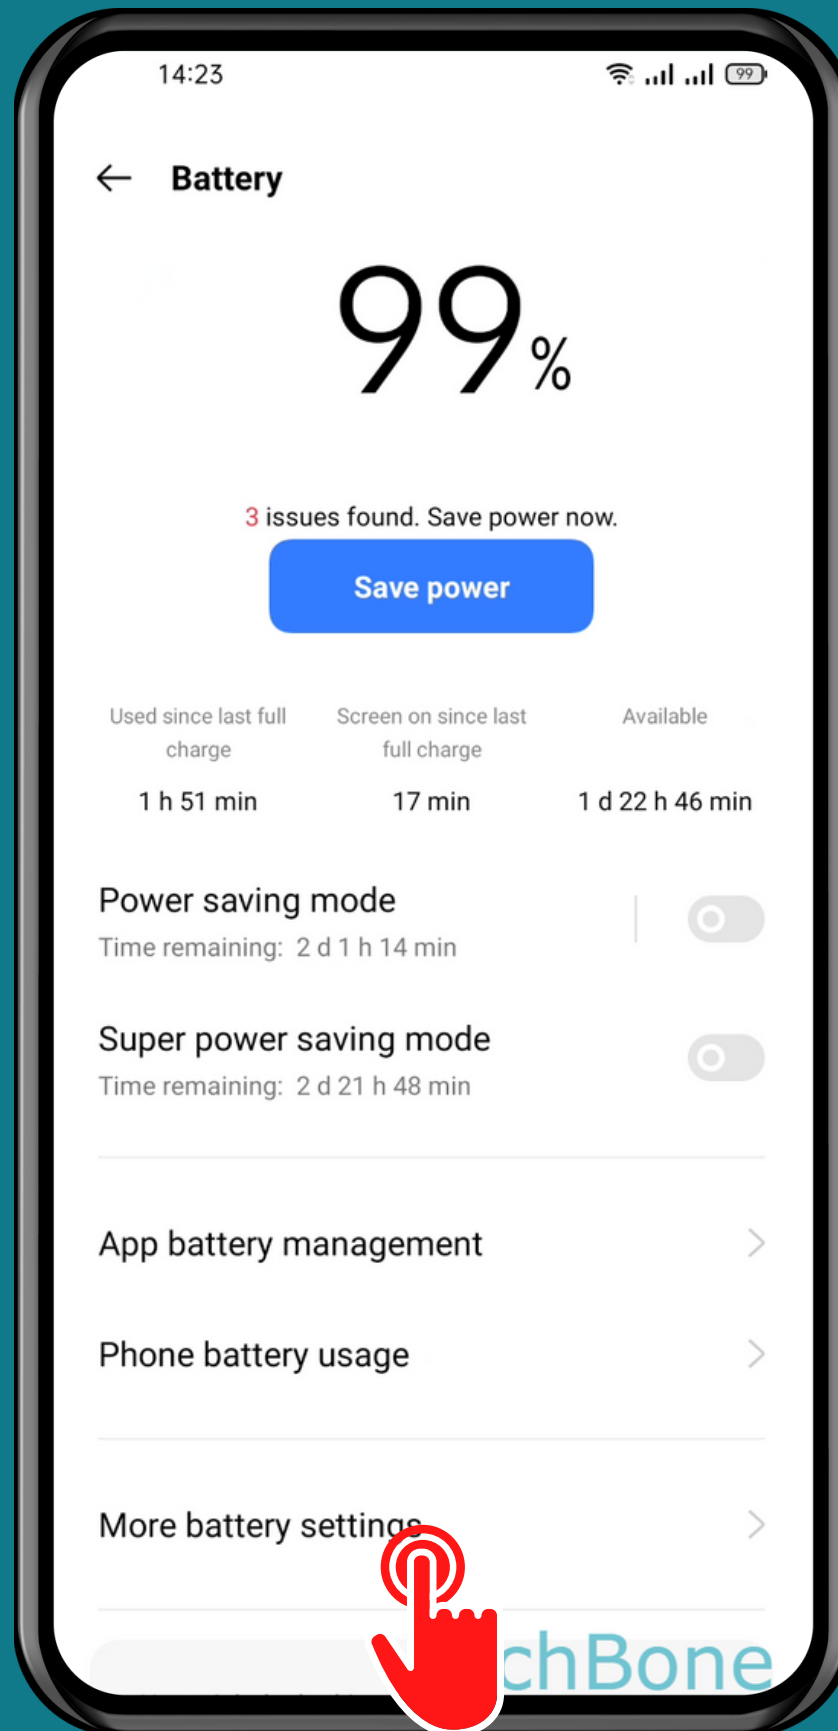

Tap on
More battery settings

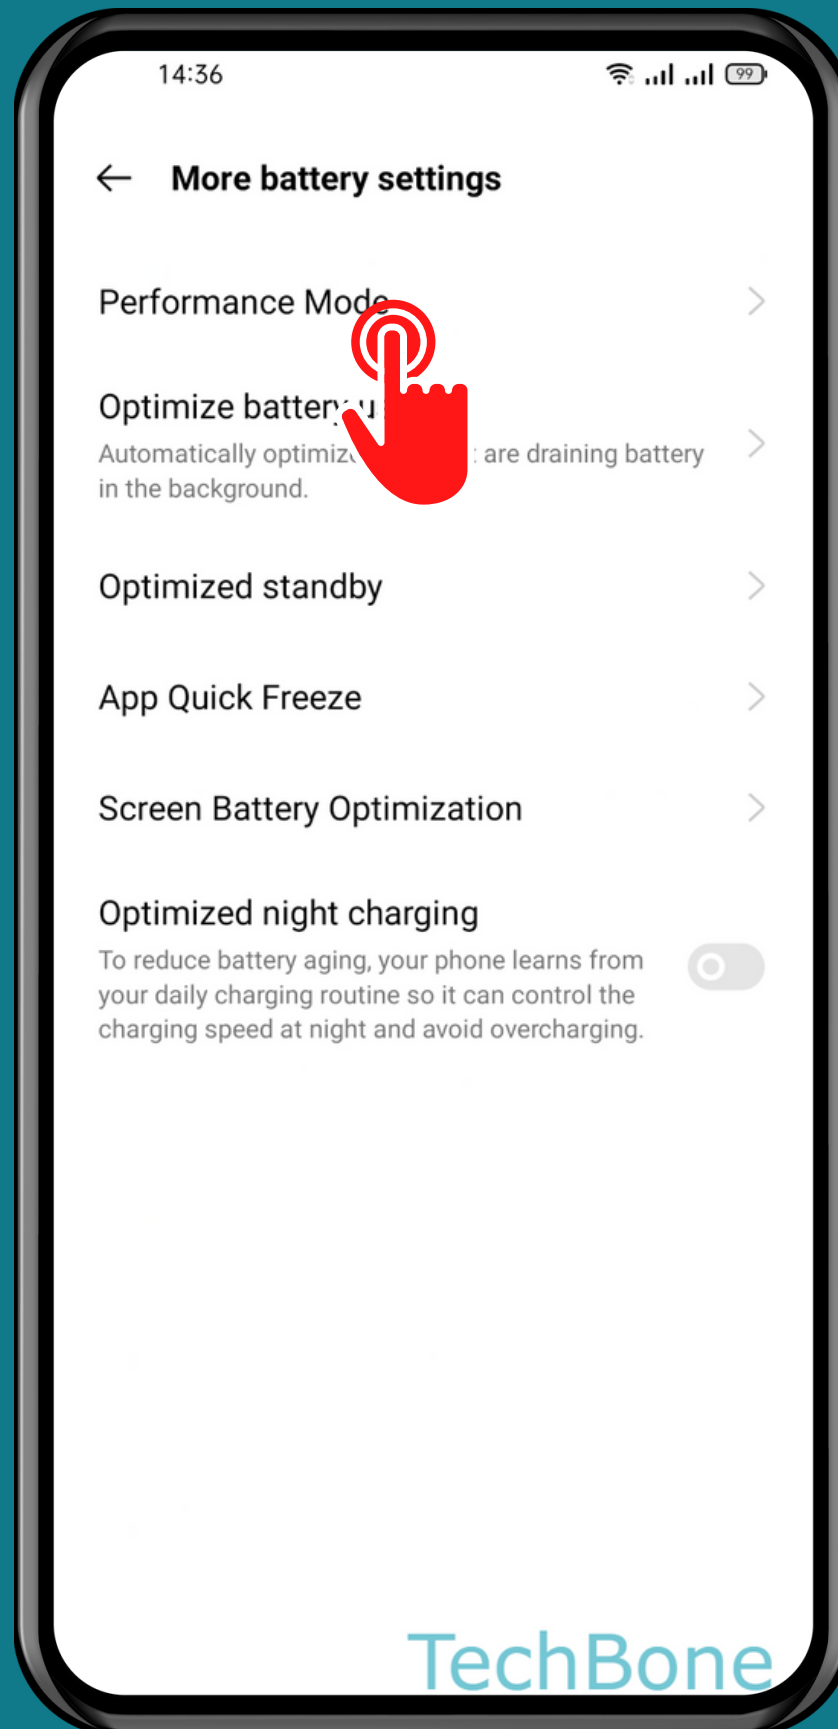


Tap on Performance Mode

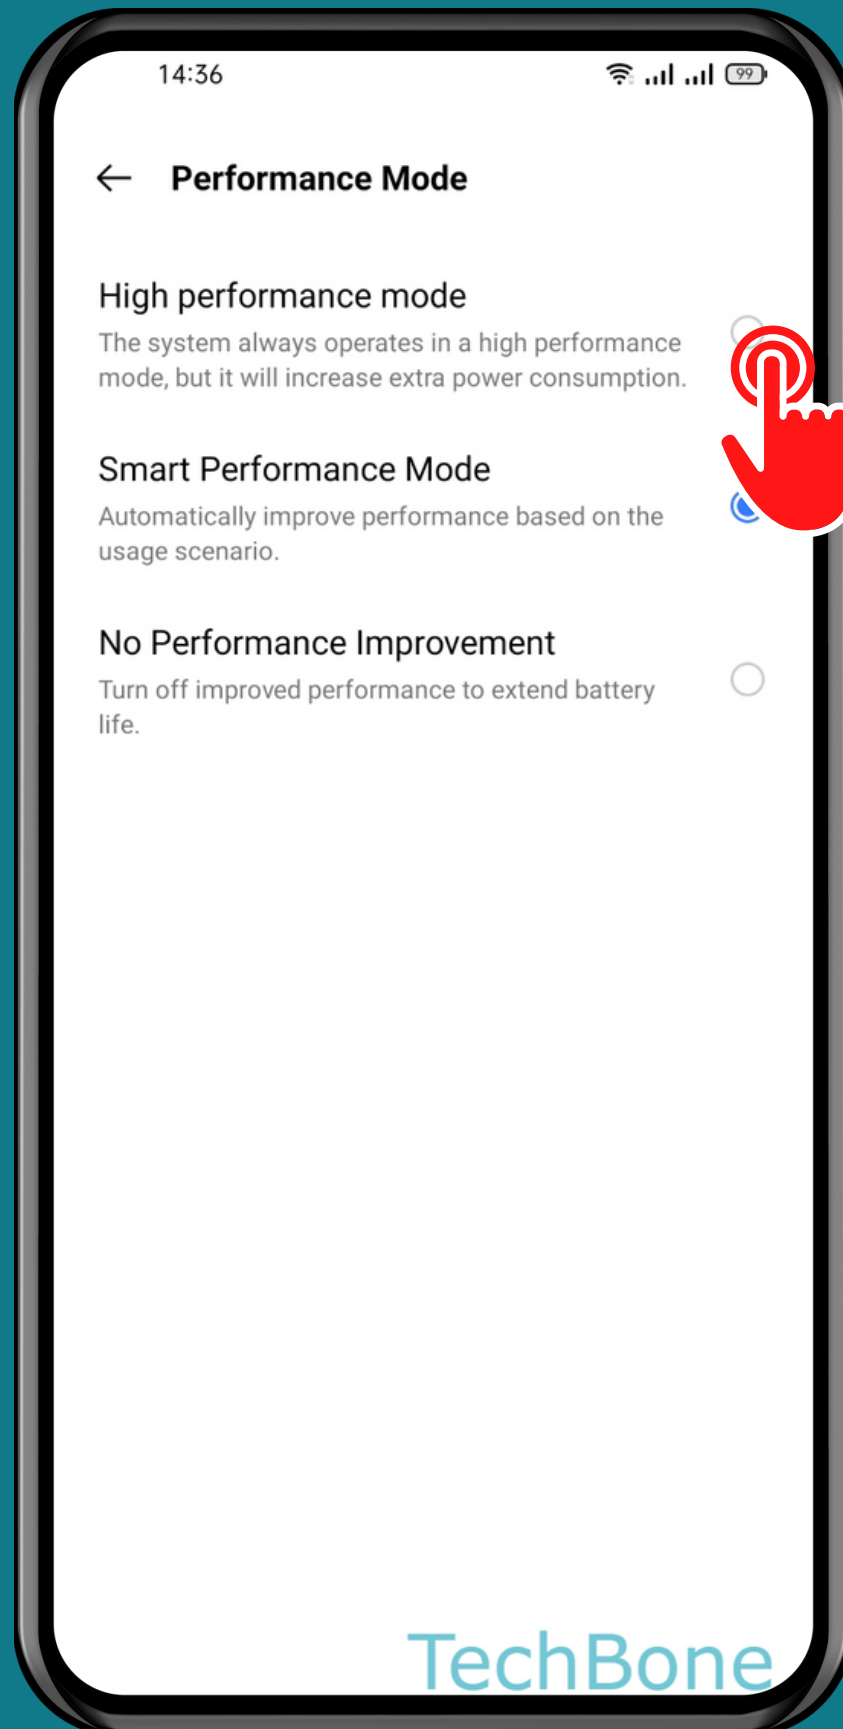

Choose

High performance mode

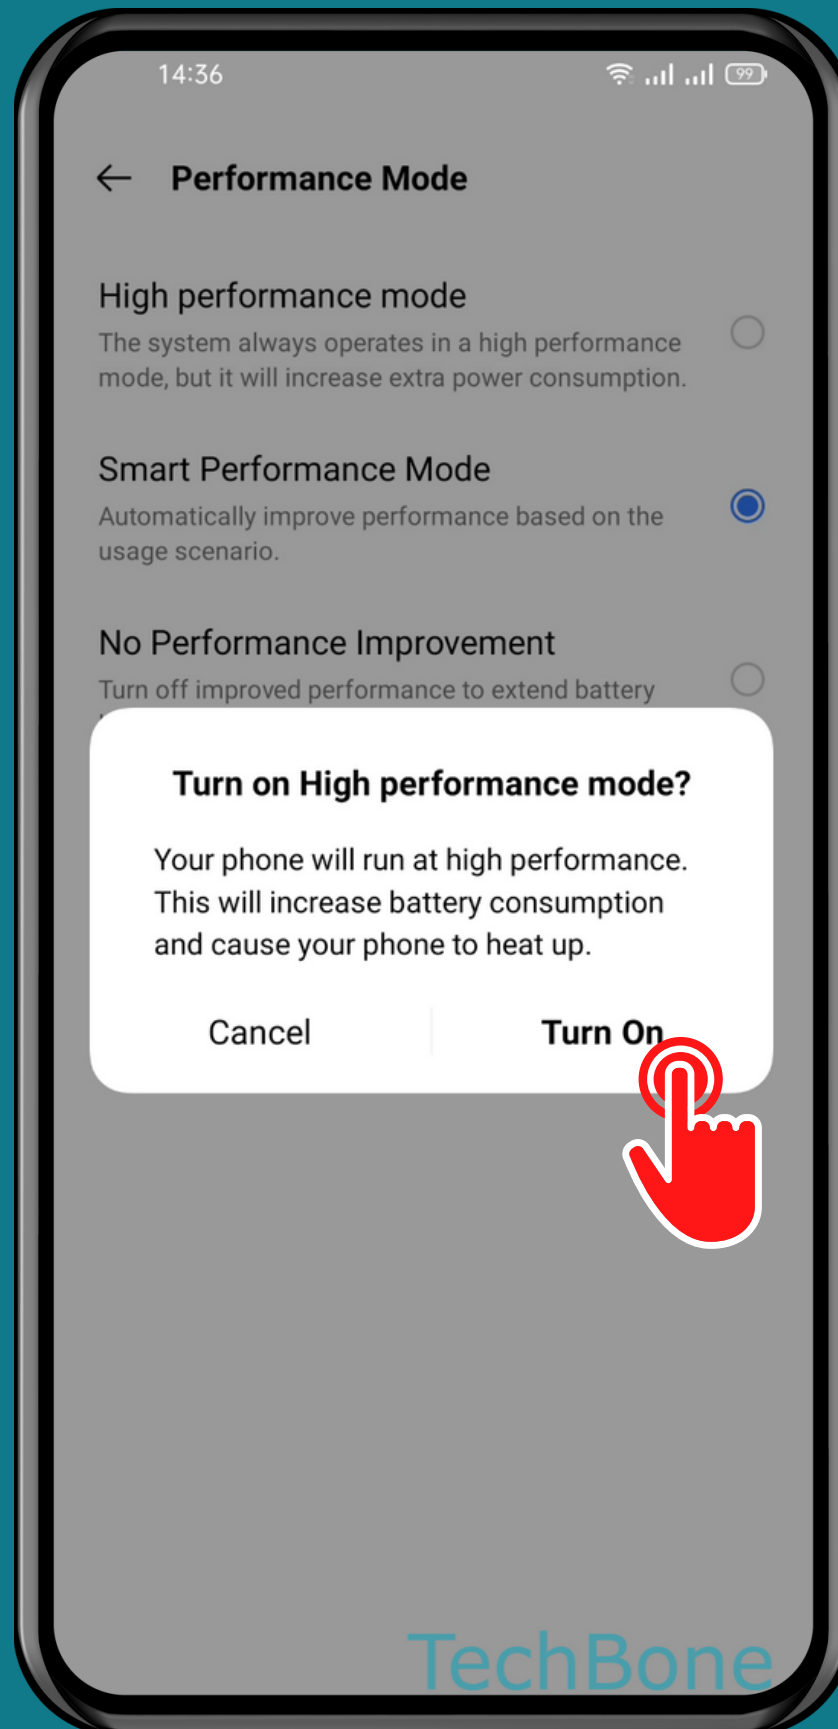

Tap on
Turn On

Done!