


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF PERSONAL HOTSPOT




Tap on
Settings

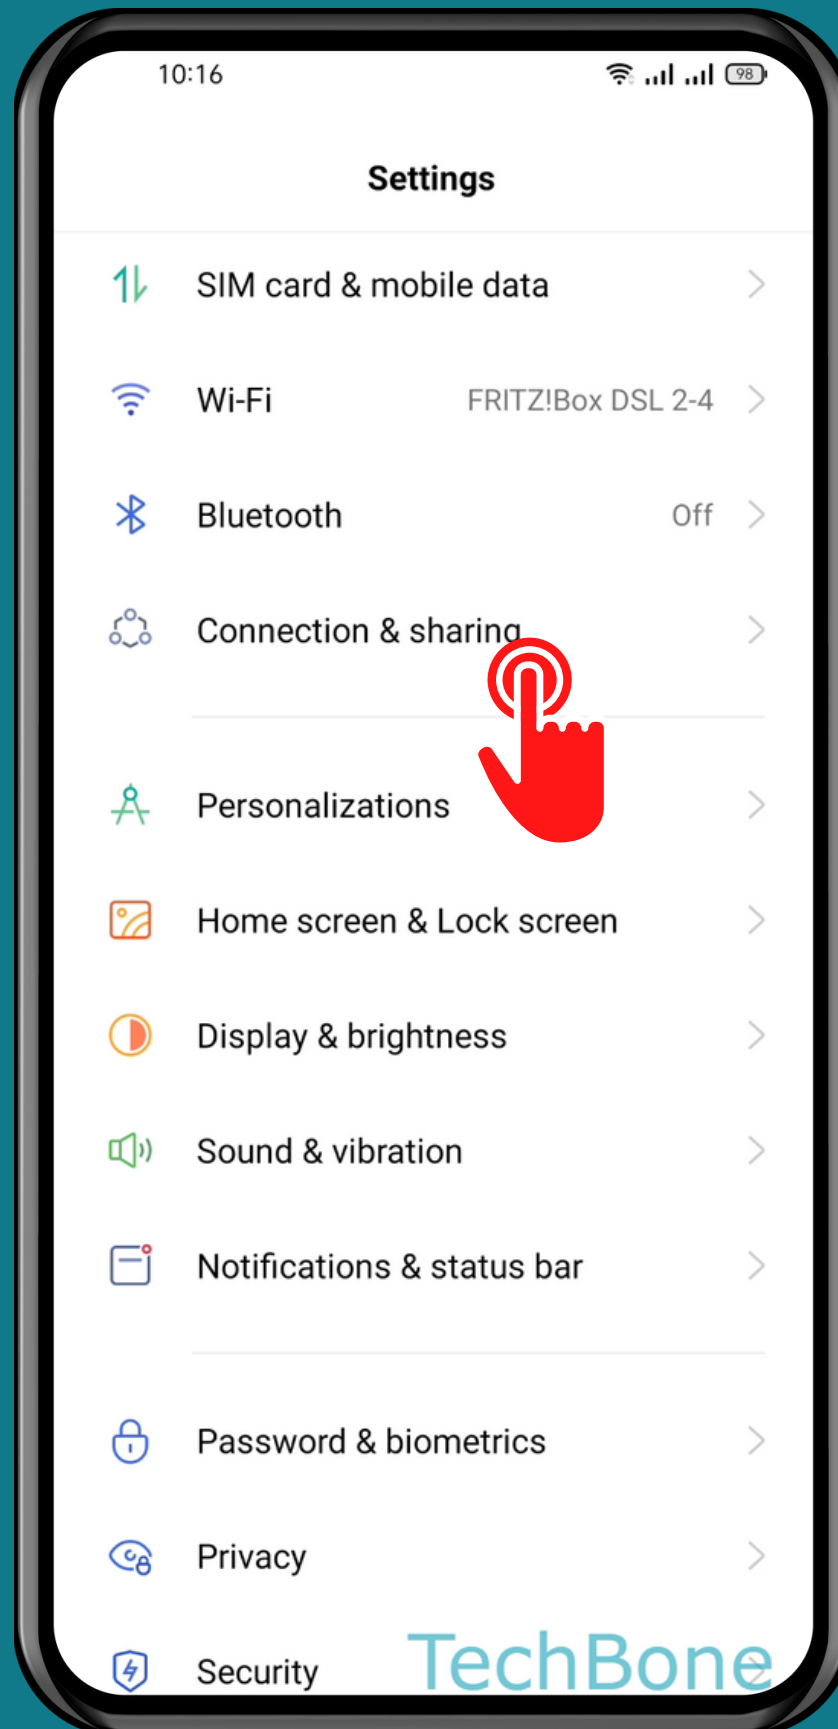

Tap on Connection & sharing

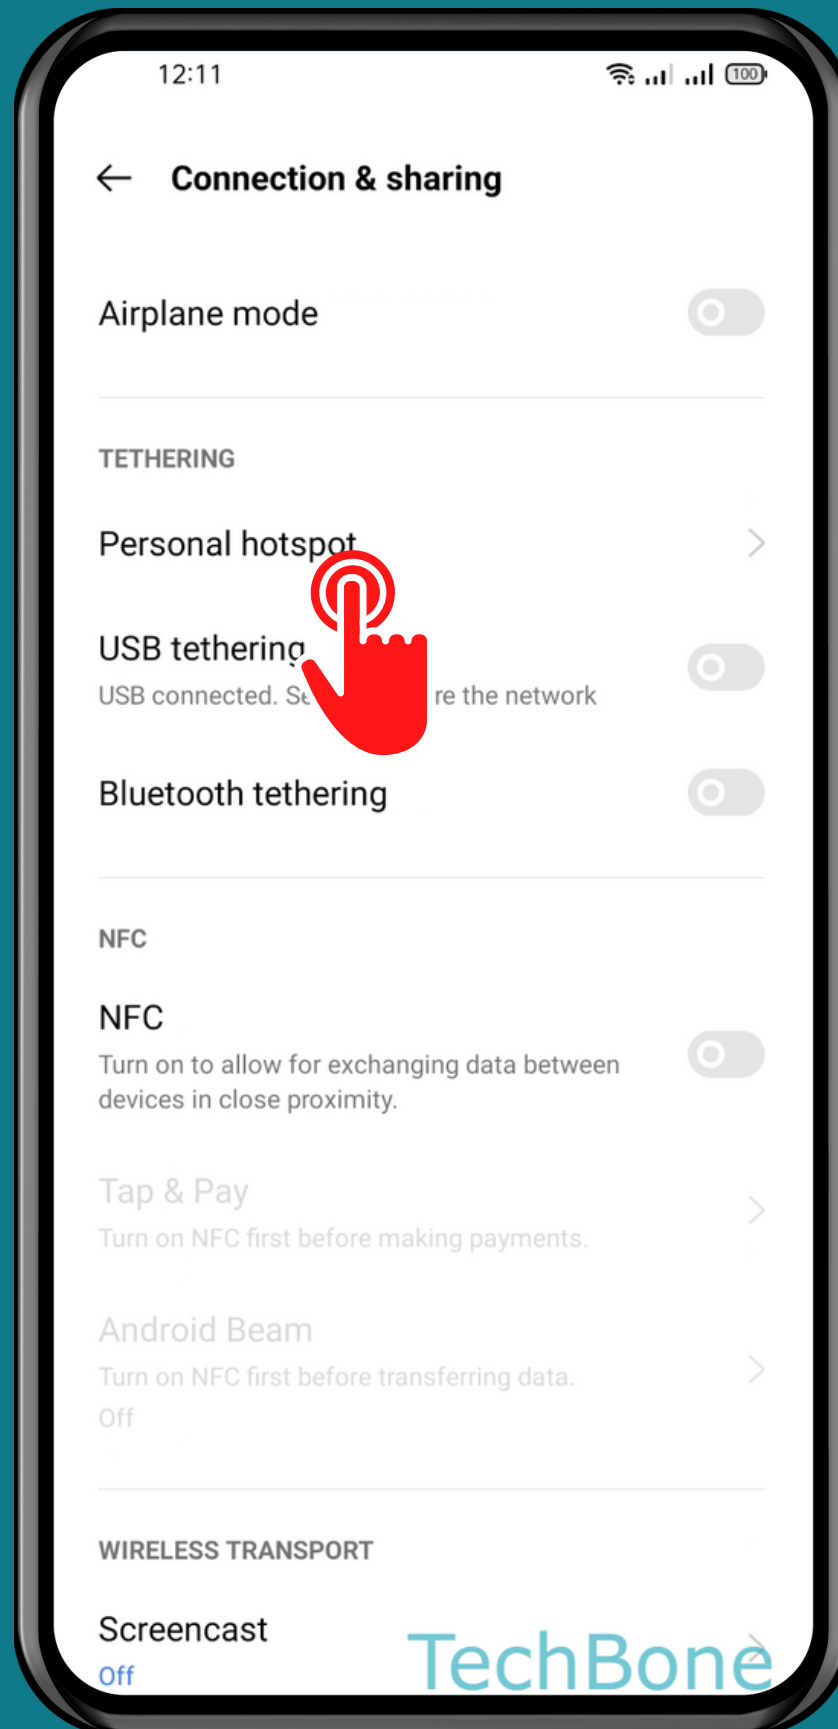

Tap on Personal hotspot

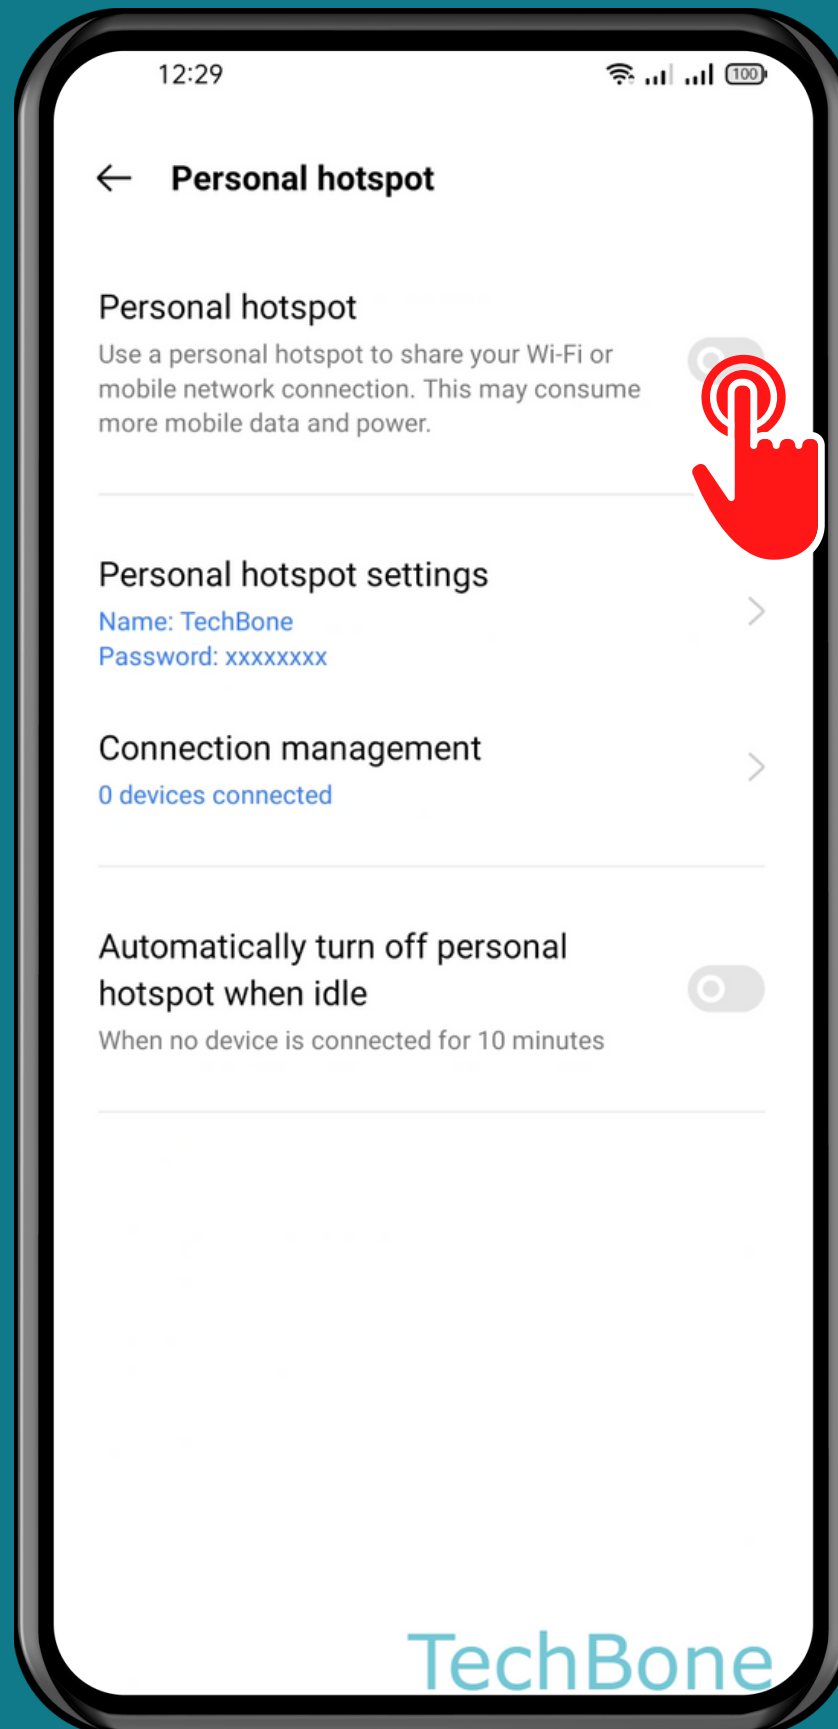

Turn On/Off Personal hotspot

Done!