


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF SCREEN BATTERY OPTIMIZATION




Tap on
Settings

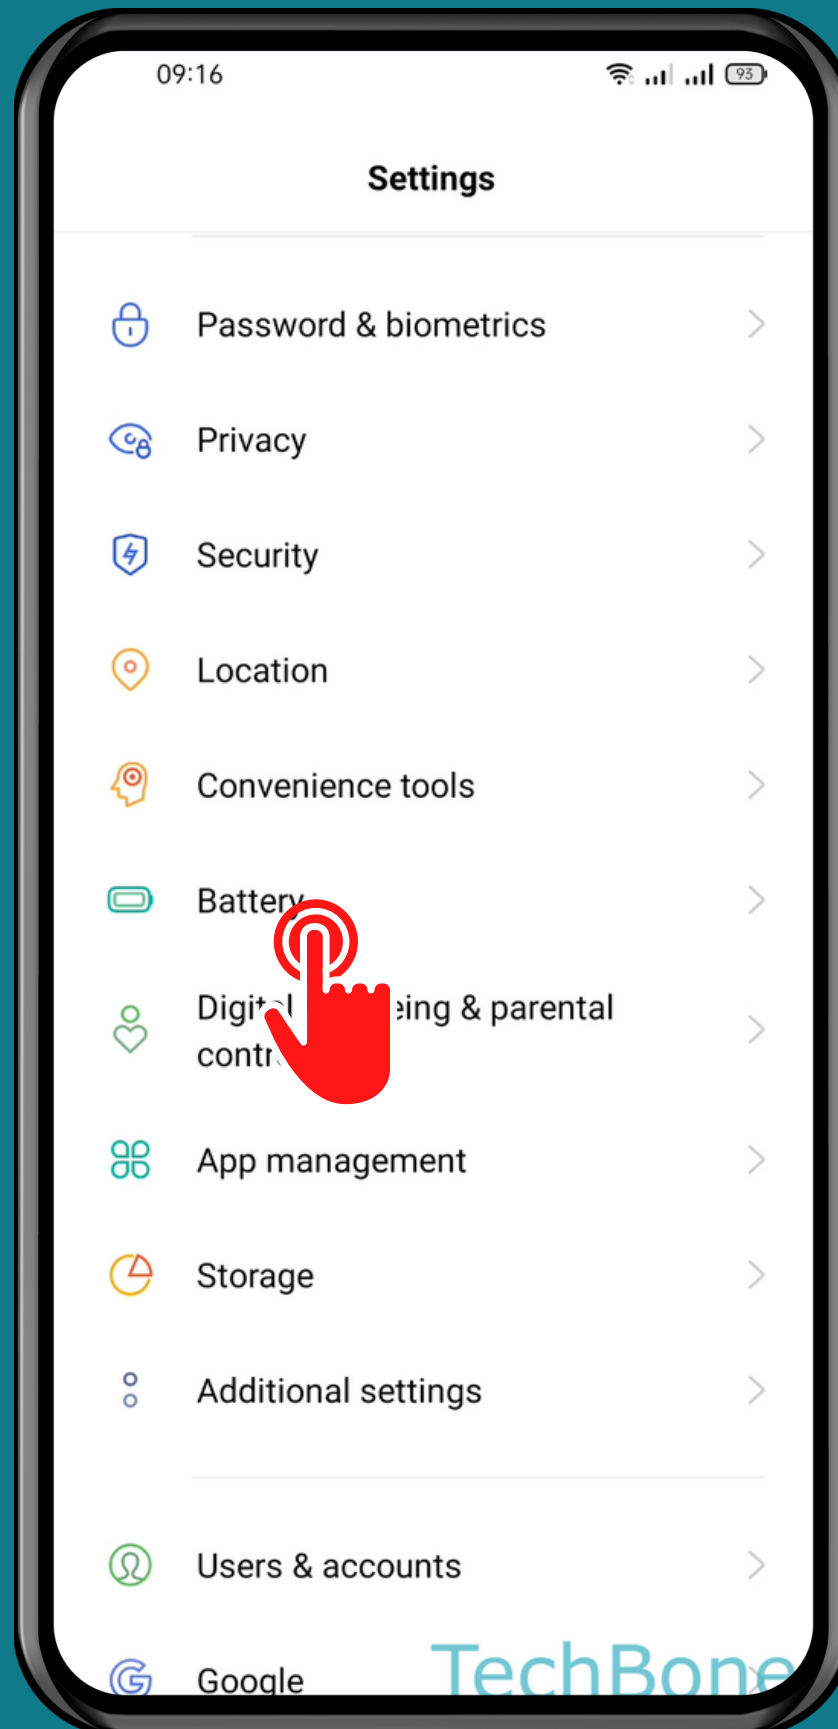


Tap on Battery

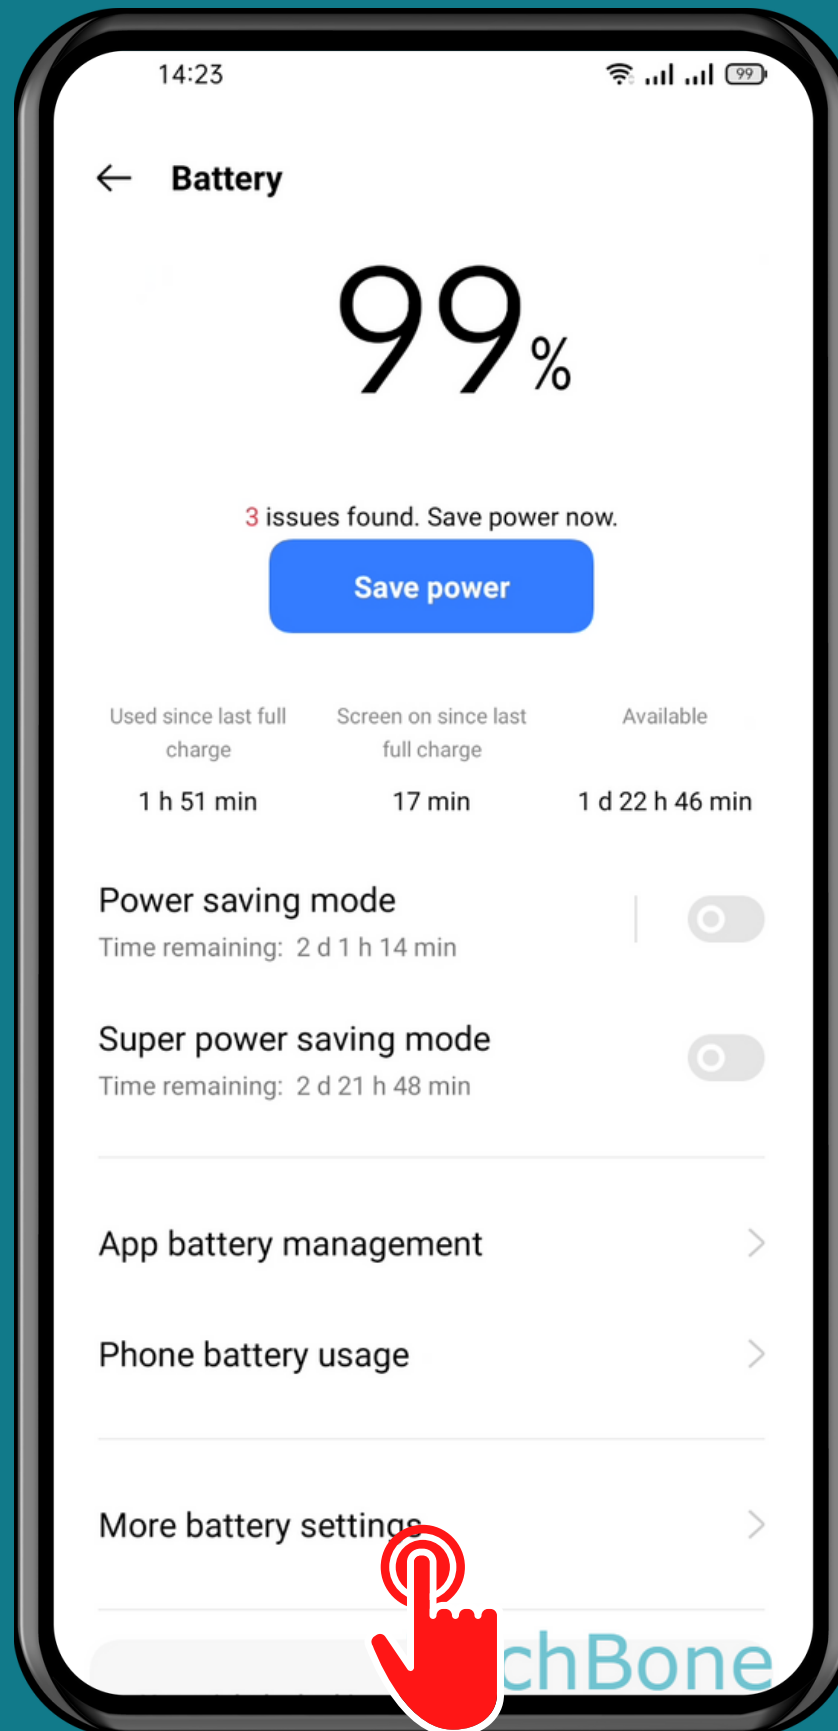

Tap on
More battery settings

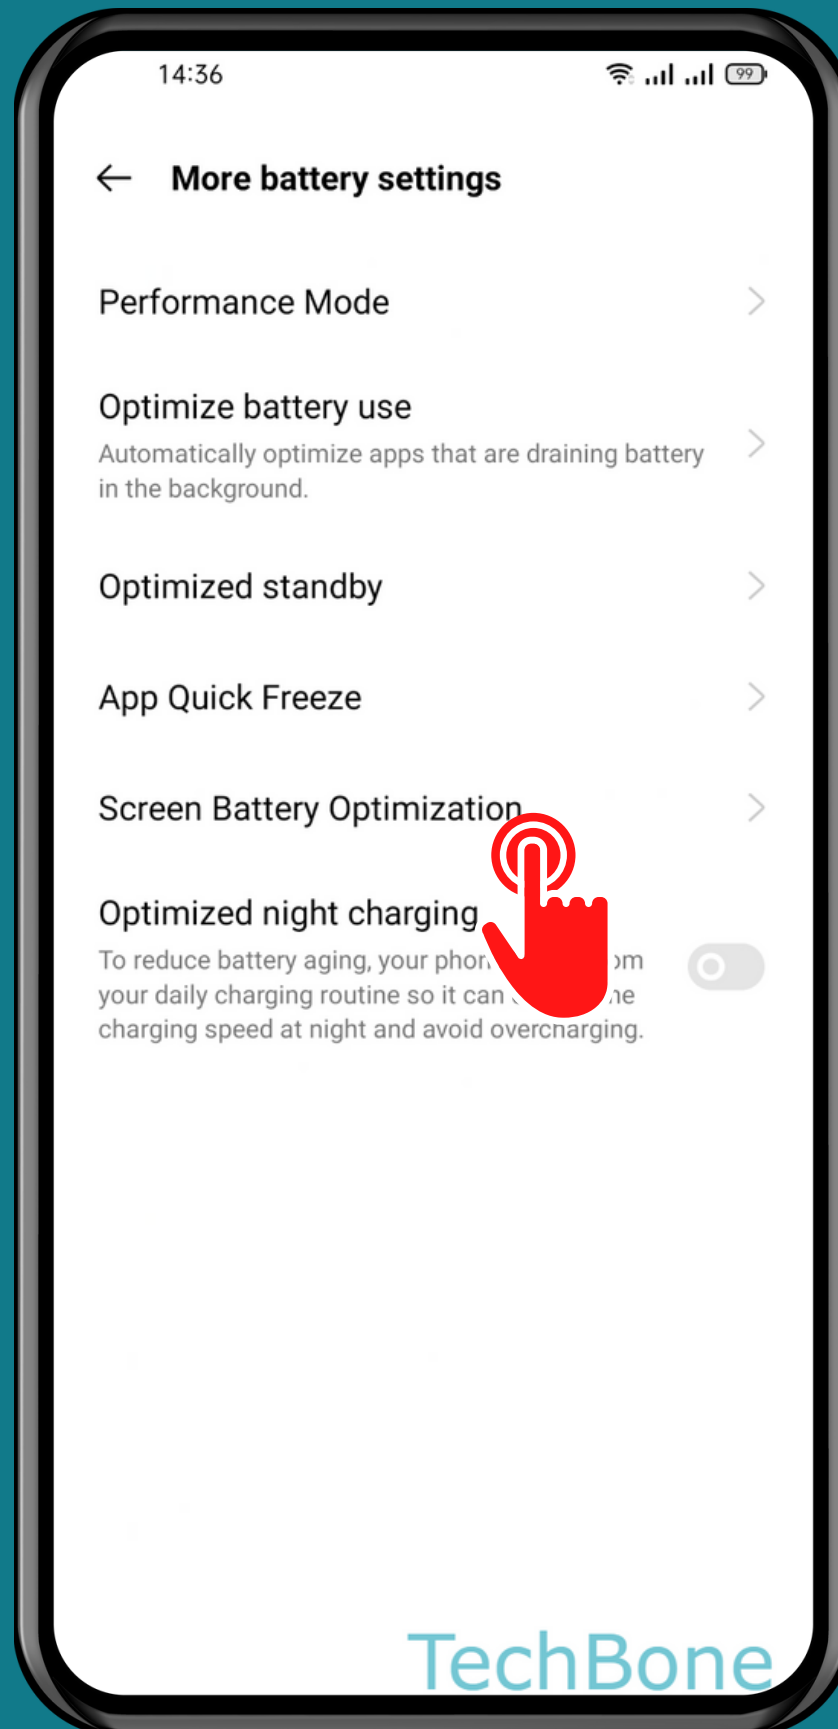

Tap on Screen Battery Optimization

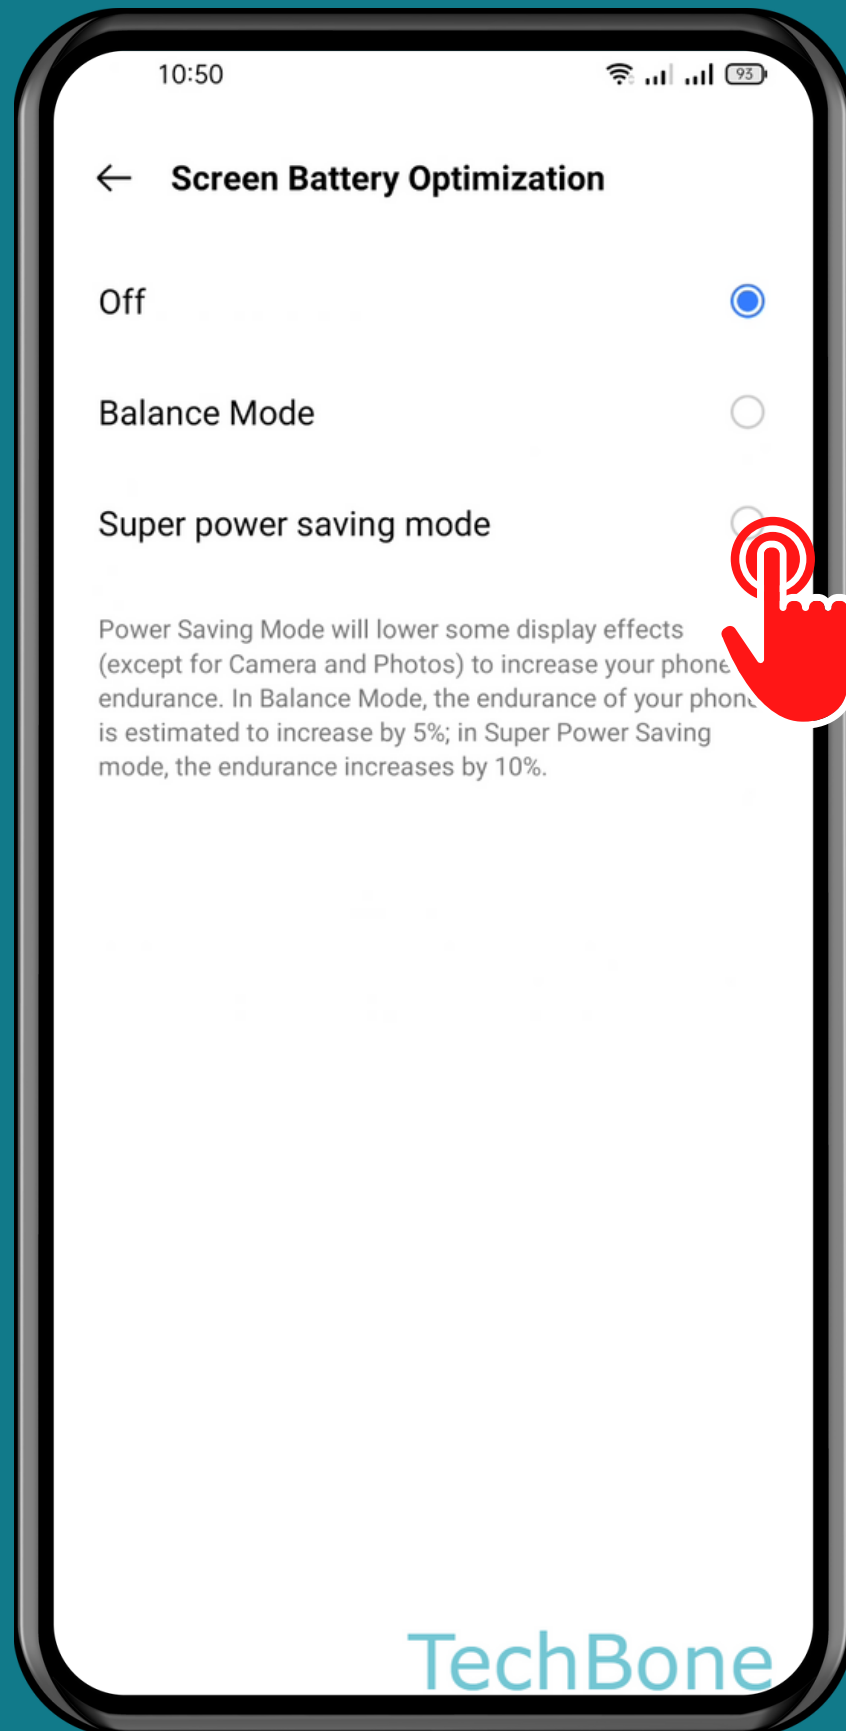

Choose an Option

Done!