


REALME

Android 11 - realme UI 2


HOW TO TURN ON/OFF TOUCH VIBRATION




Tap on
Settings

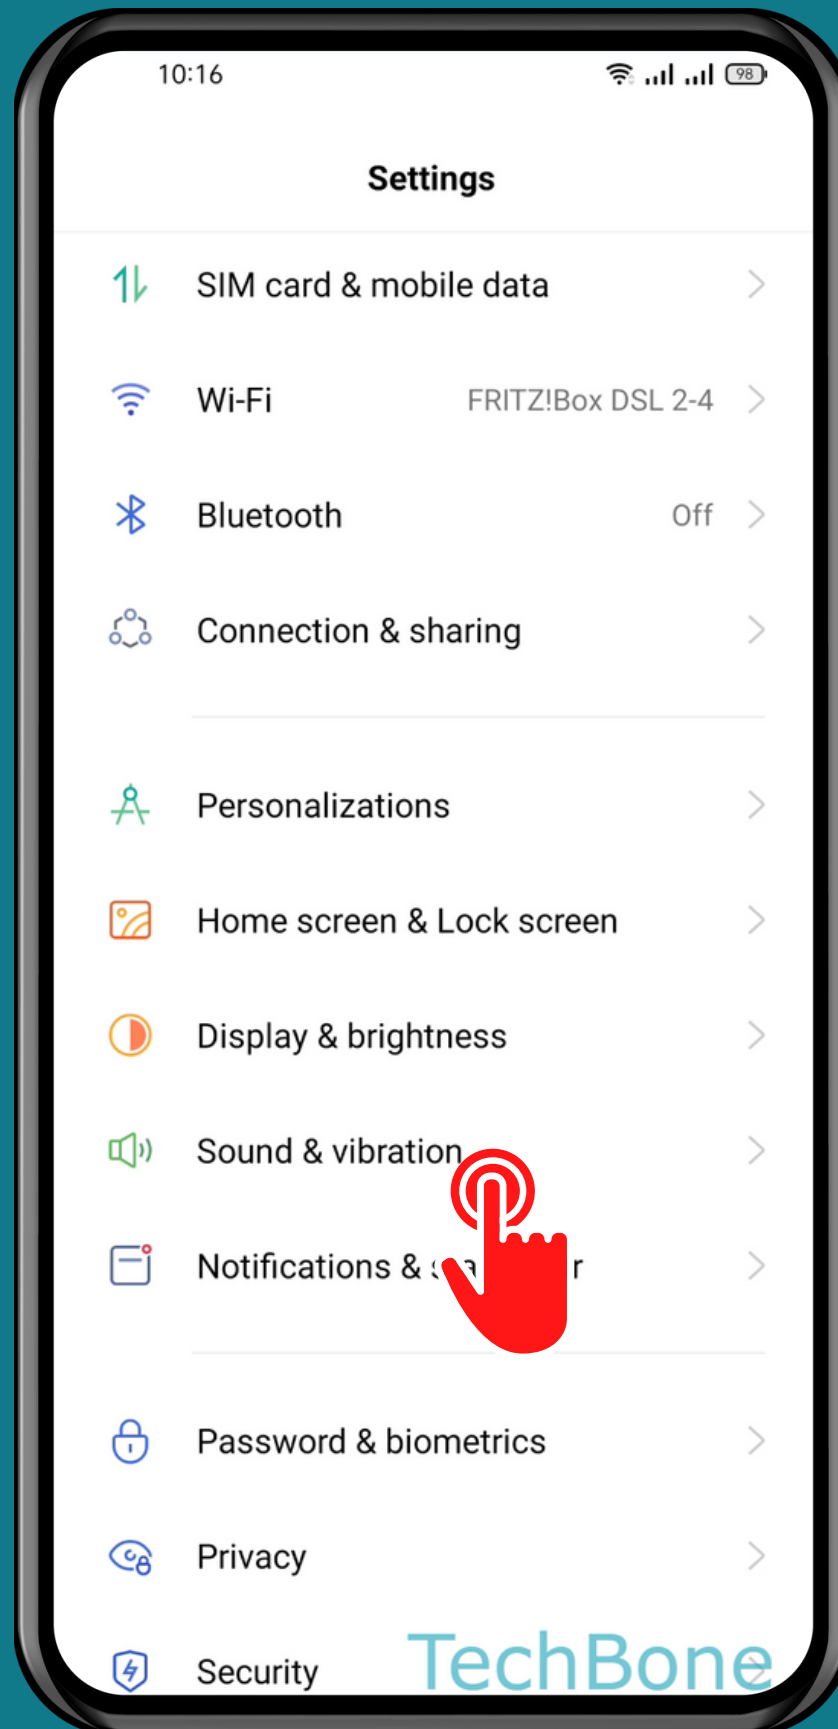

Tap on Sound & vibration

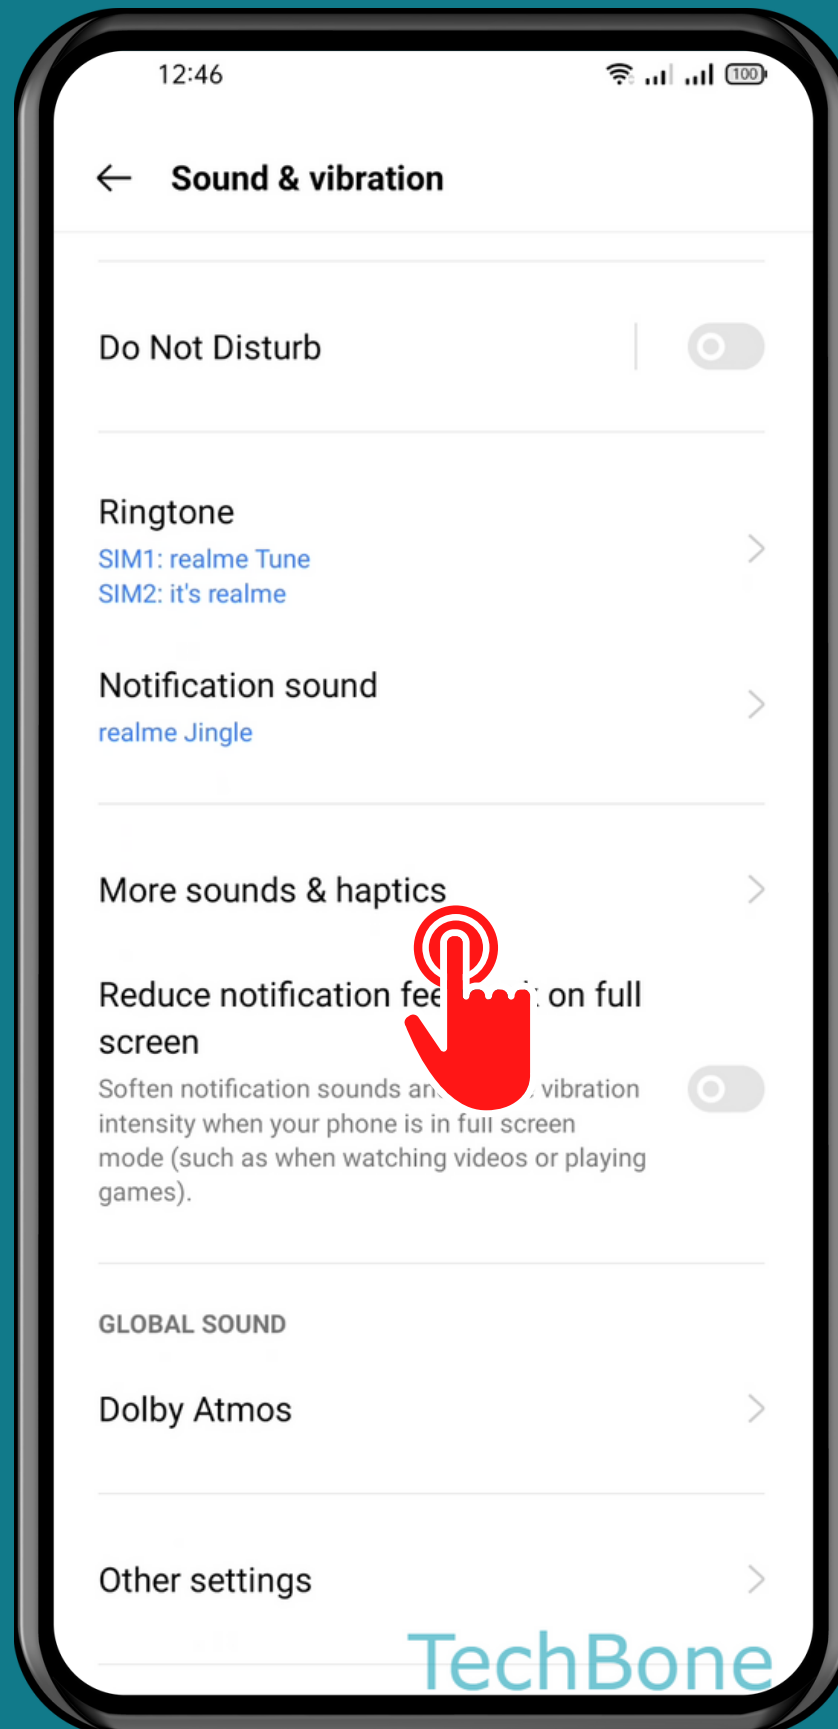

Tap on More sounds & haptics

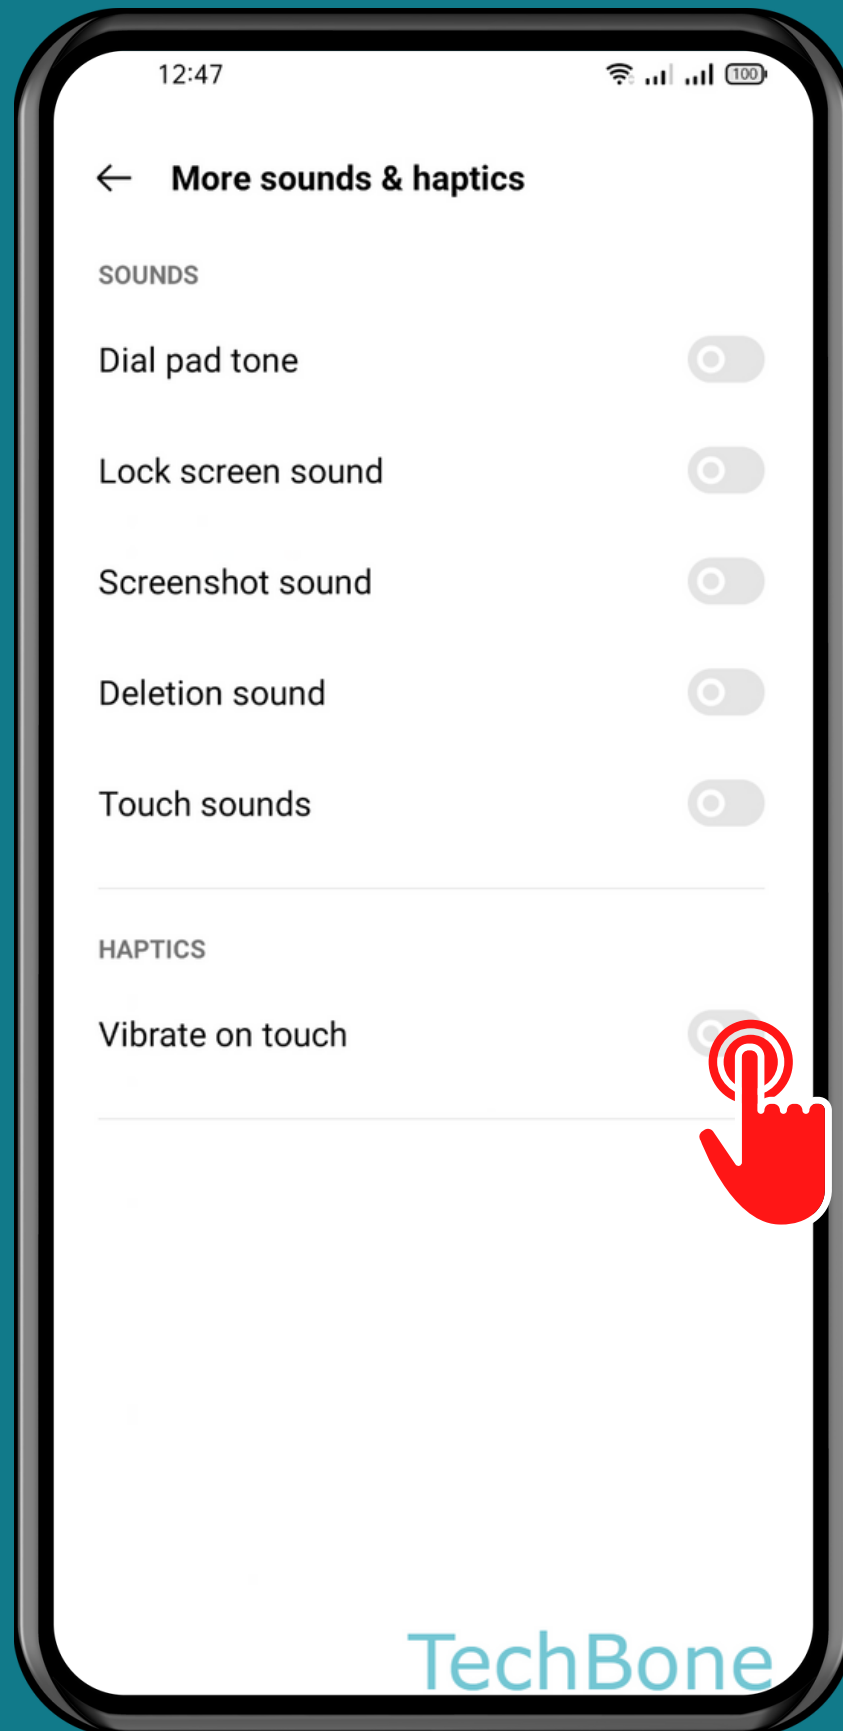

Turn On/Off Vibrate on touch

Done!