


REALME

Android 11 - realme UI 2


# HOW TO UNPAIR A BLUETOOTH DEVICE




Tap on  
Settings

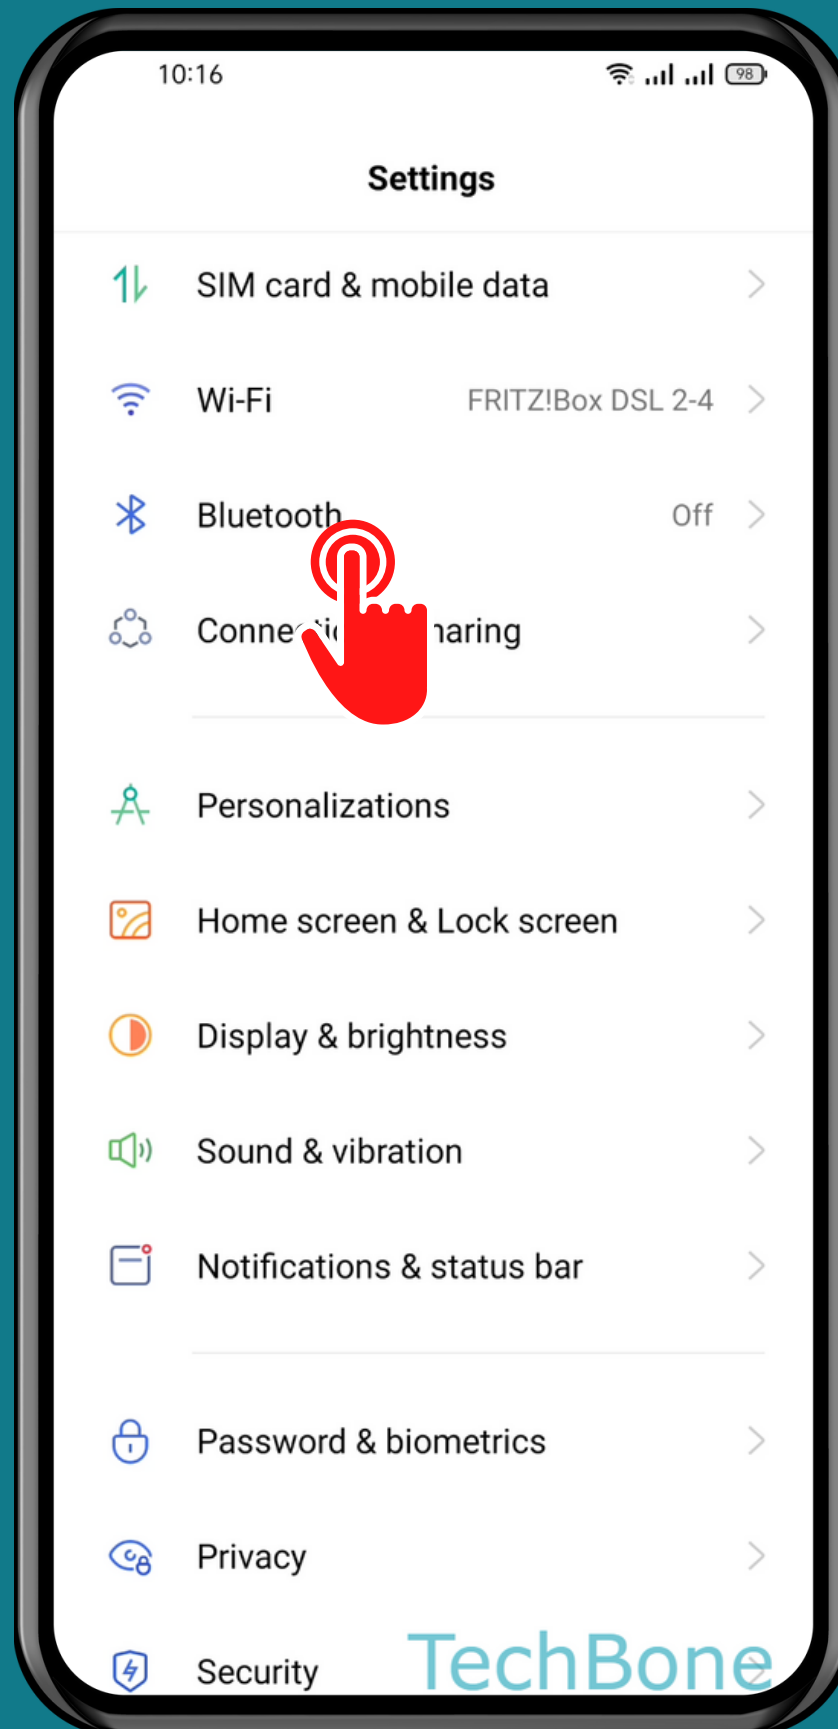

# Tap on Bluetooth

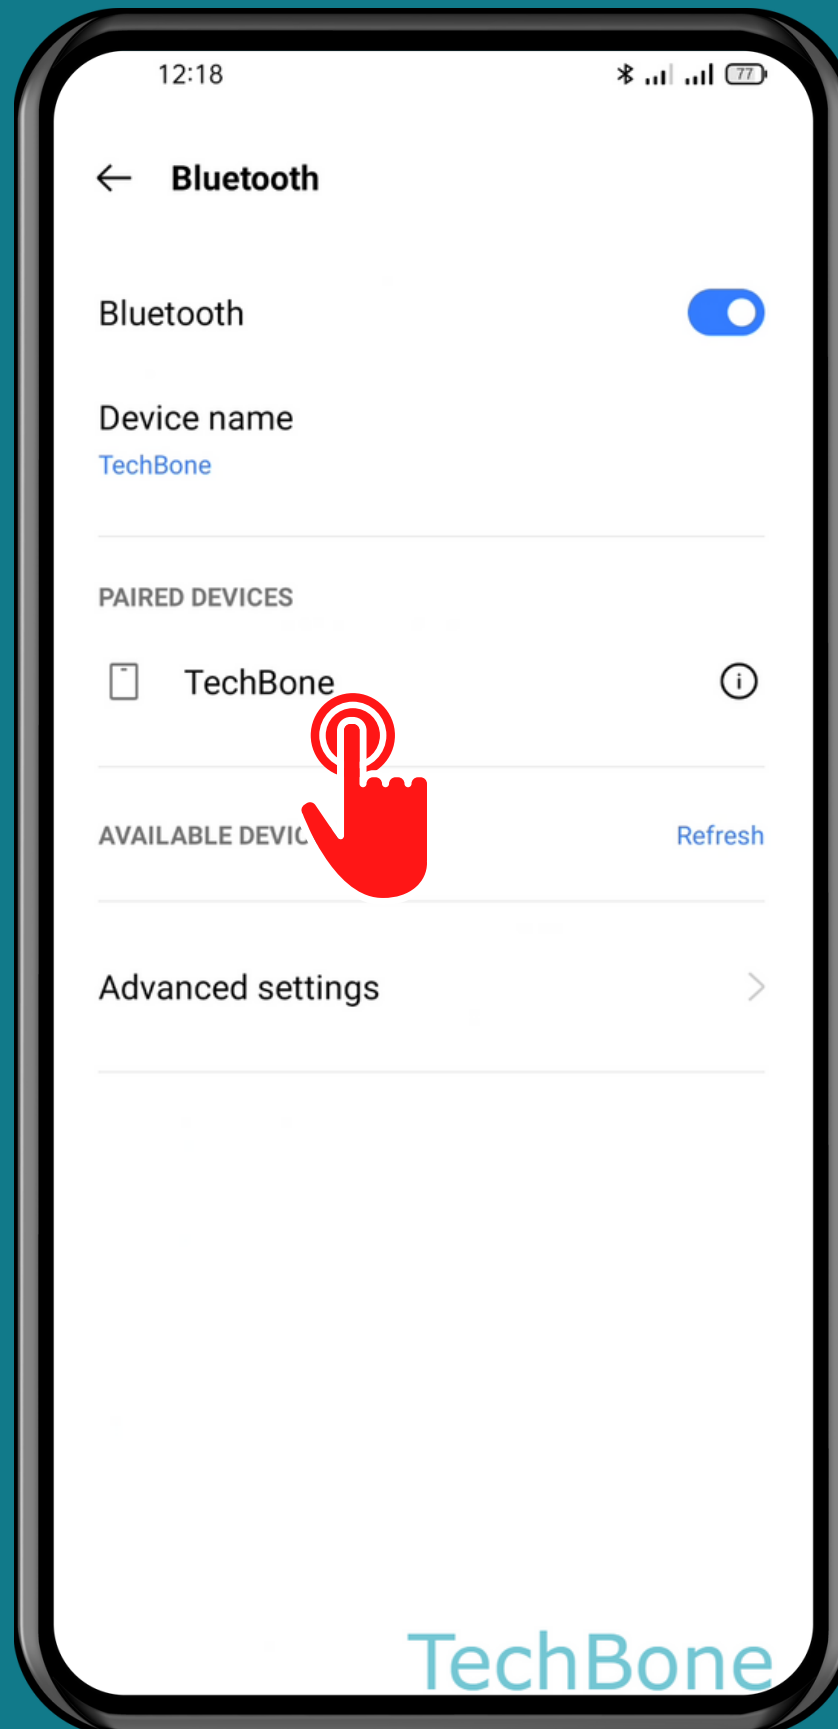

Select a  
Paired device

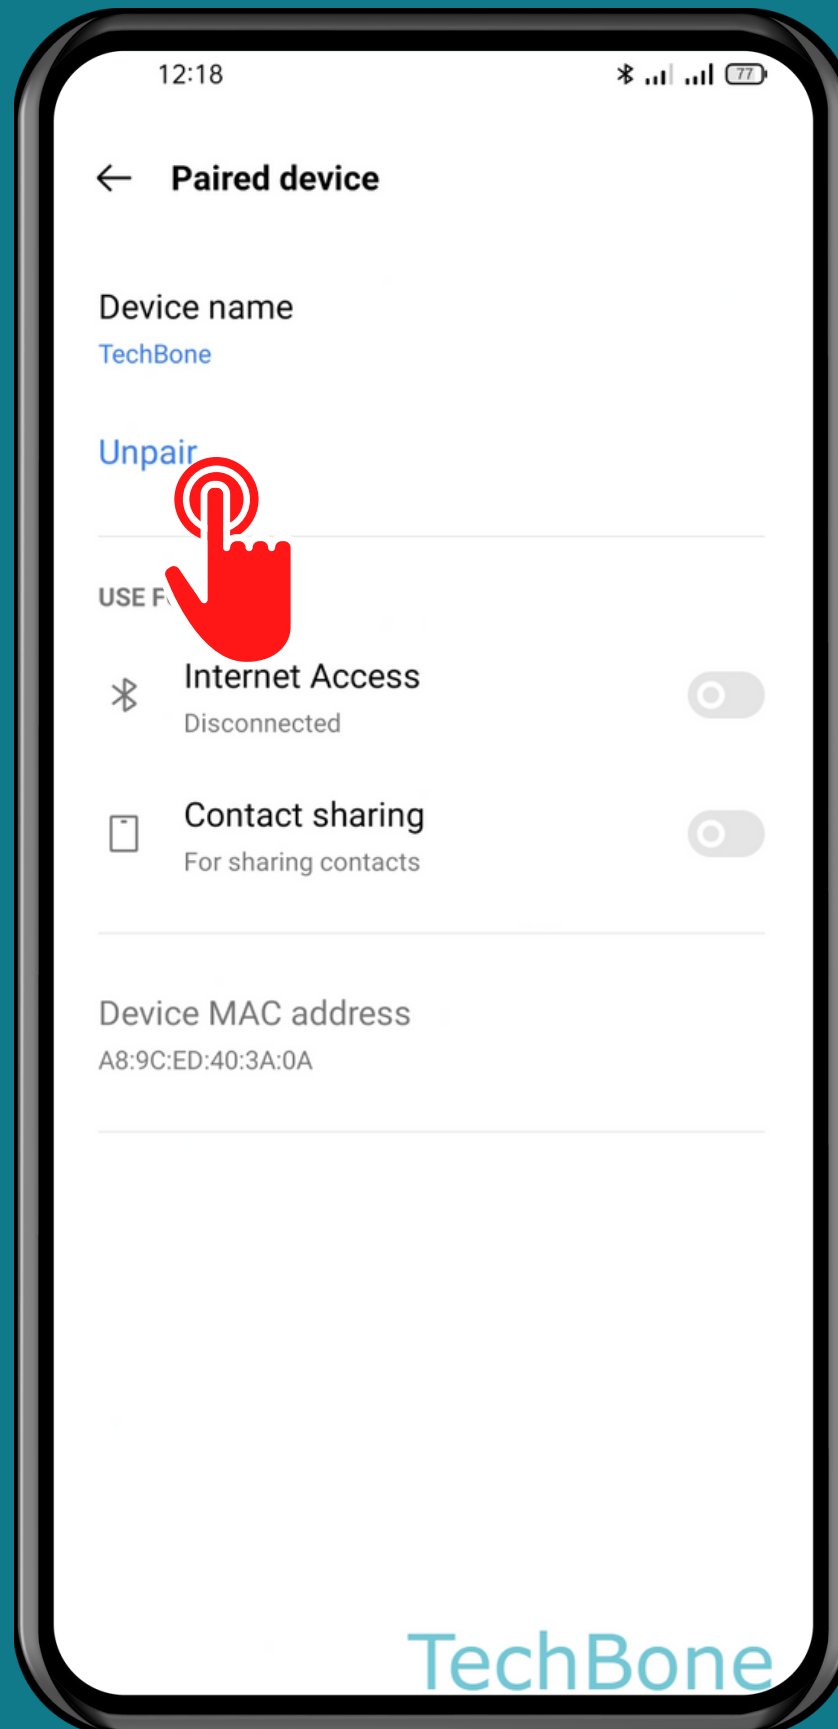

Tap on  
Unpair

Done!