

#### REALME

Android 11 - realme UI 2


## HOW TO TURN ON/OFF USB TETHERING






# Tap on Settings



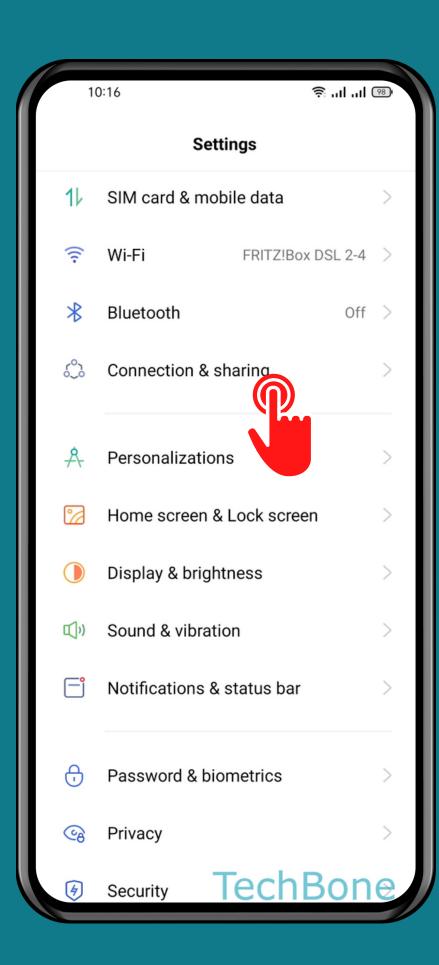

## Tap on Connection & sharing



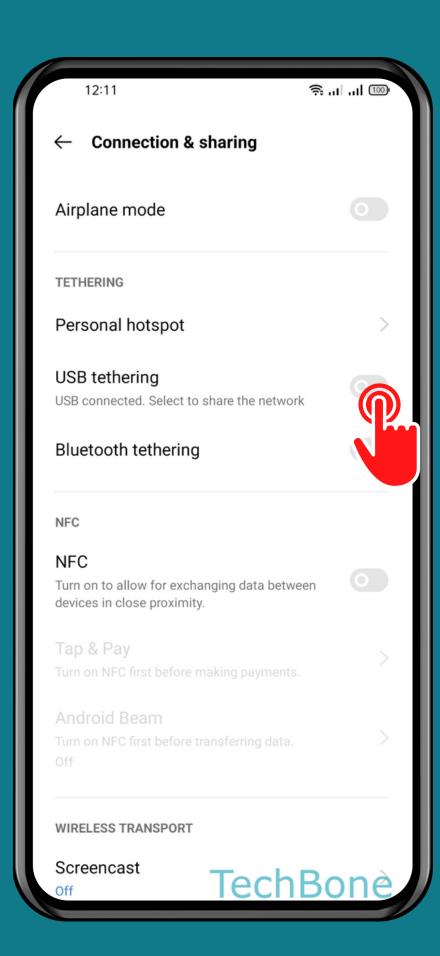

# Turn On/Off USB tethering



### Done.

