


SAMSUNG

Android 11 - One UI 3


ALWAYS ON DISPLAY IN LANDSCAPE OR PORTRAIT MODE




Tap on
Settings

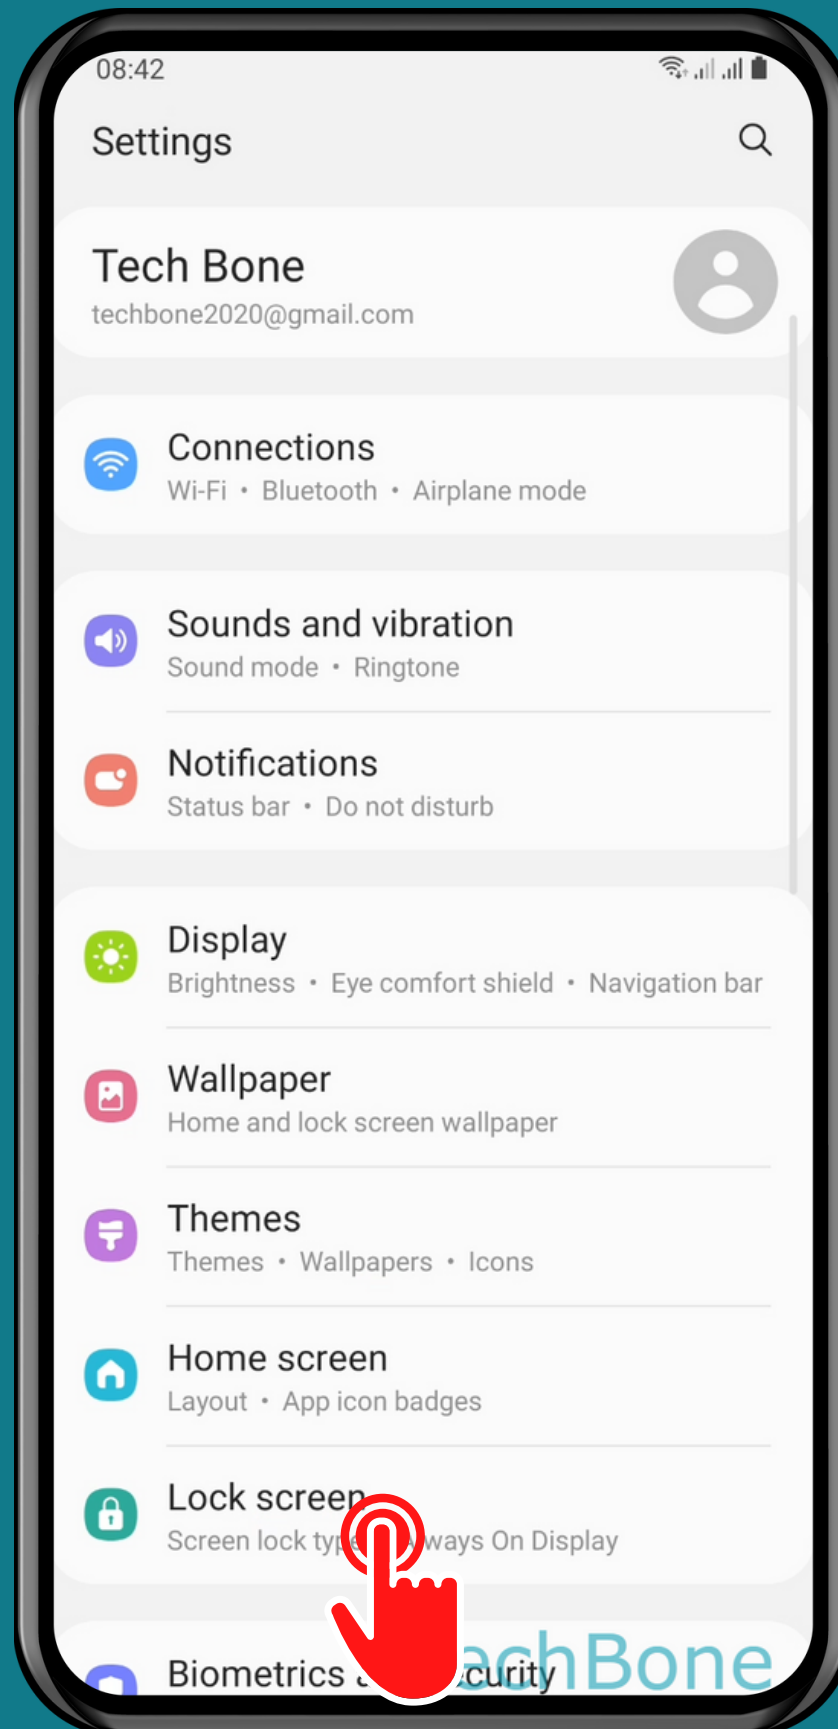


Tap on
Lock screen

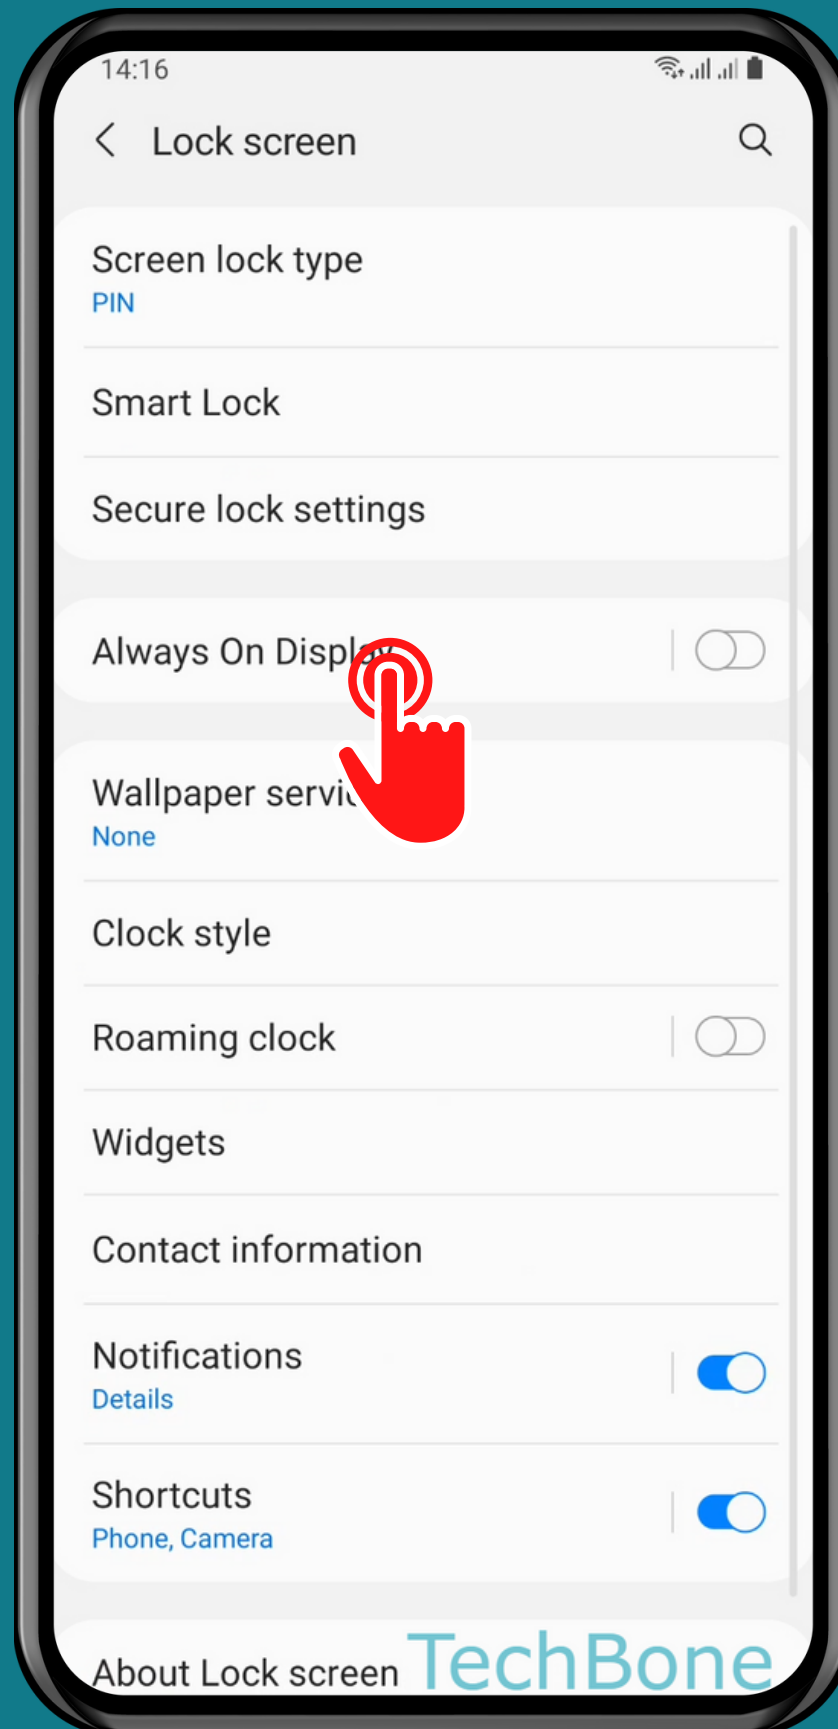

Tap on
Always On Display

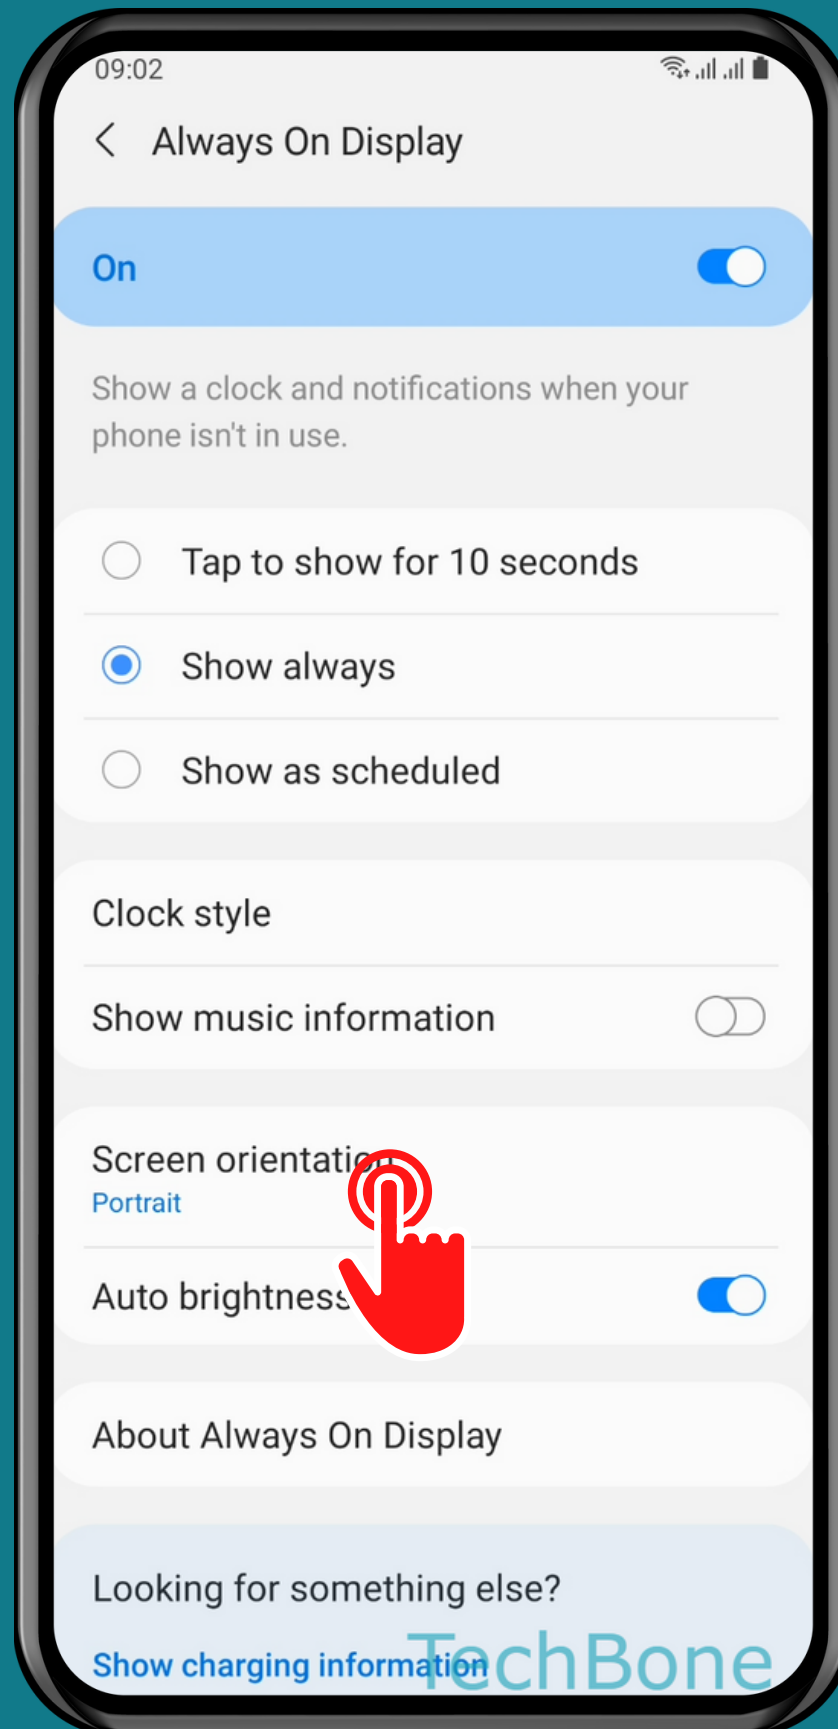

Tap on Screen orientation

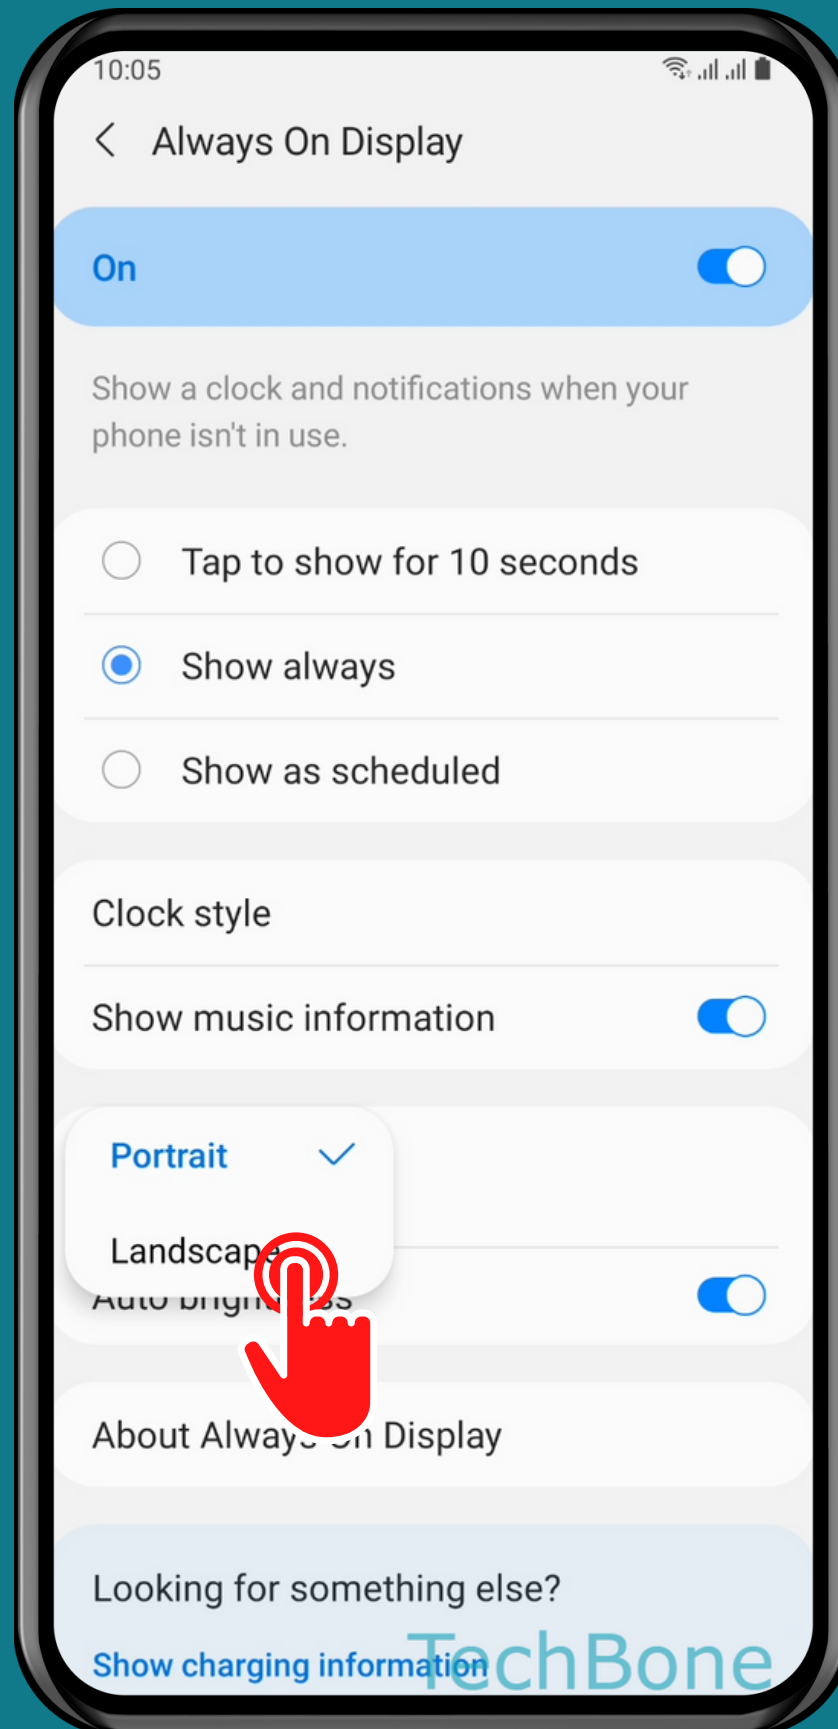

Choose Portrait or Landscape

Done!