



SAMSUNG

Android 11 - One UI 3


HOW TO RESET APP PREFERENCES

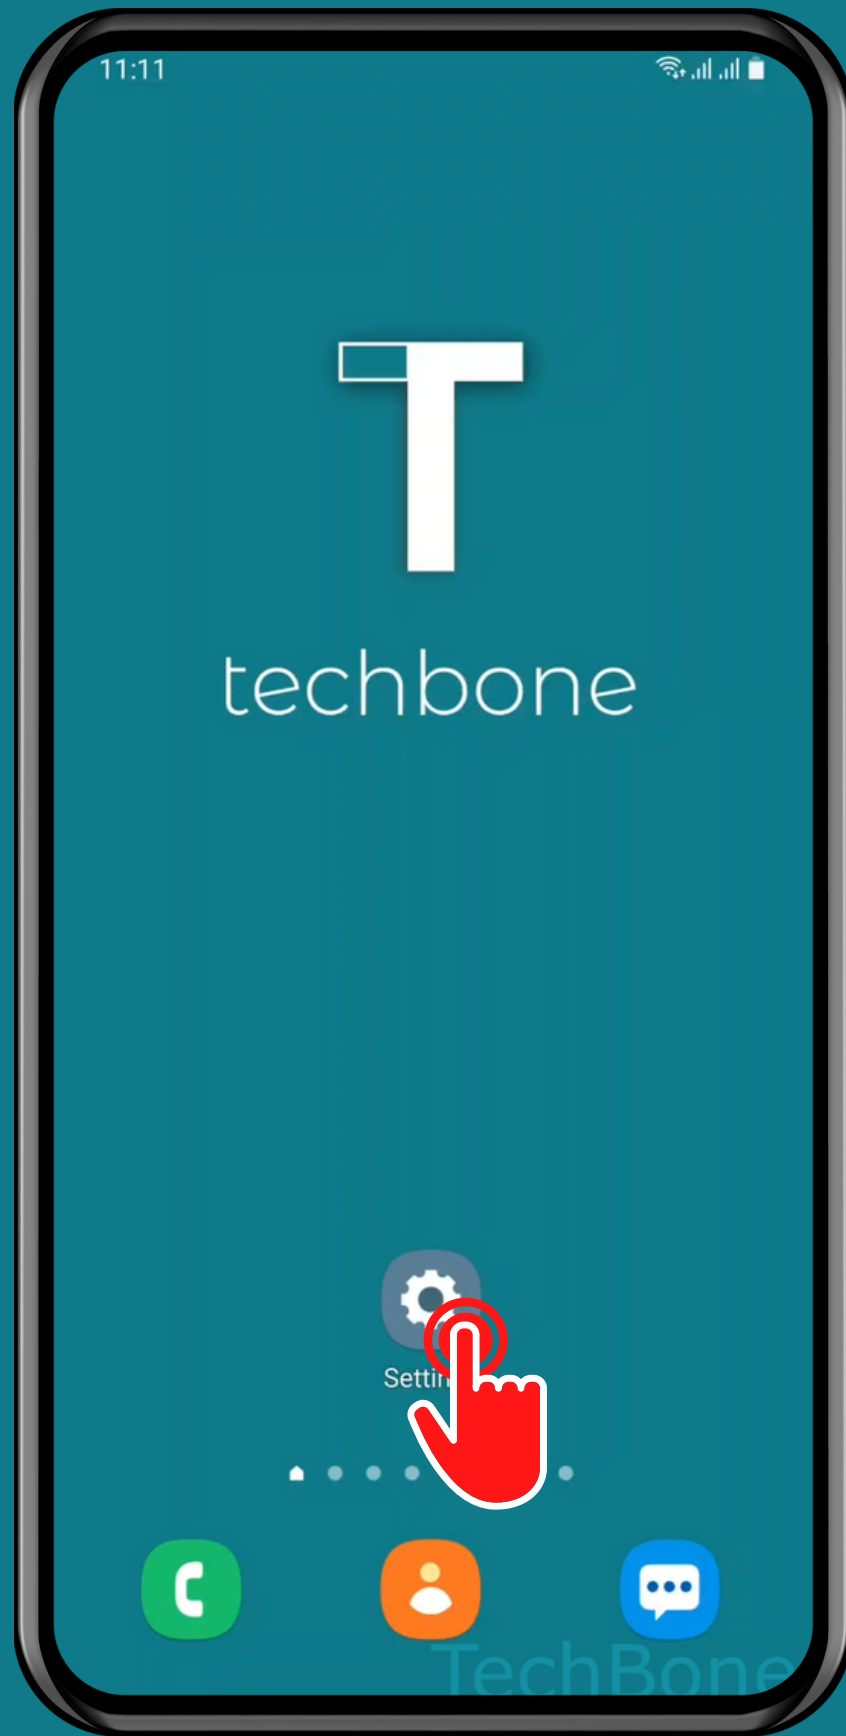


Tap on Settings

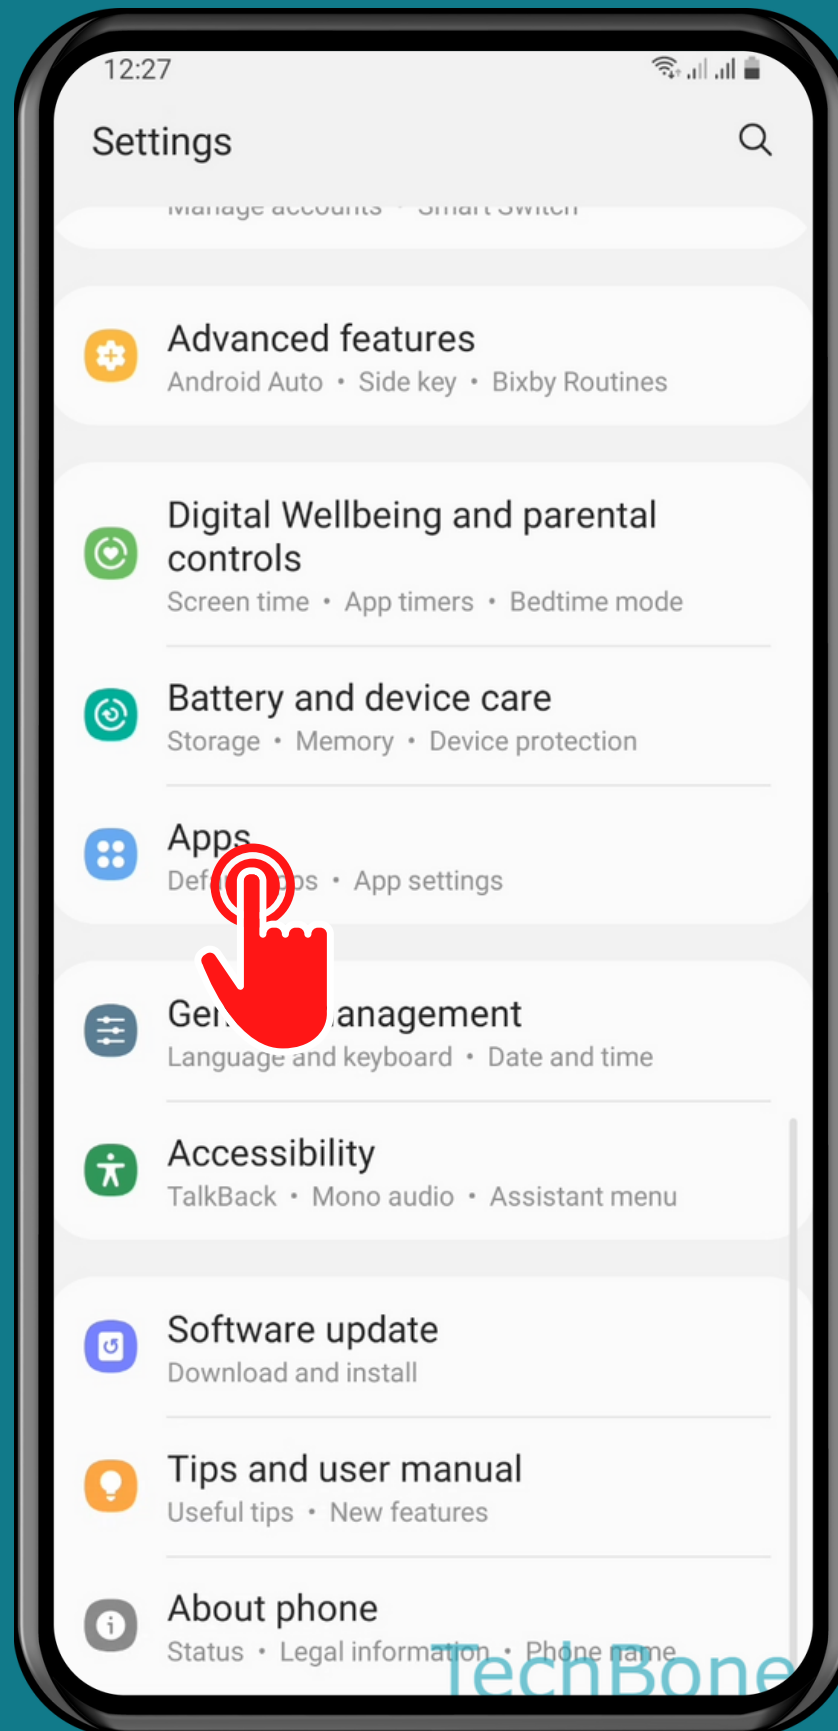


Tap on Apps

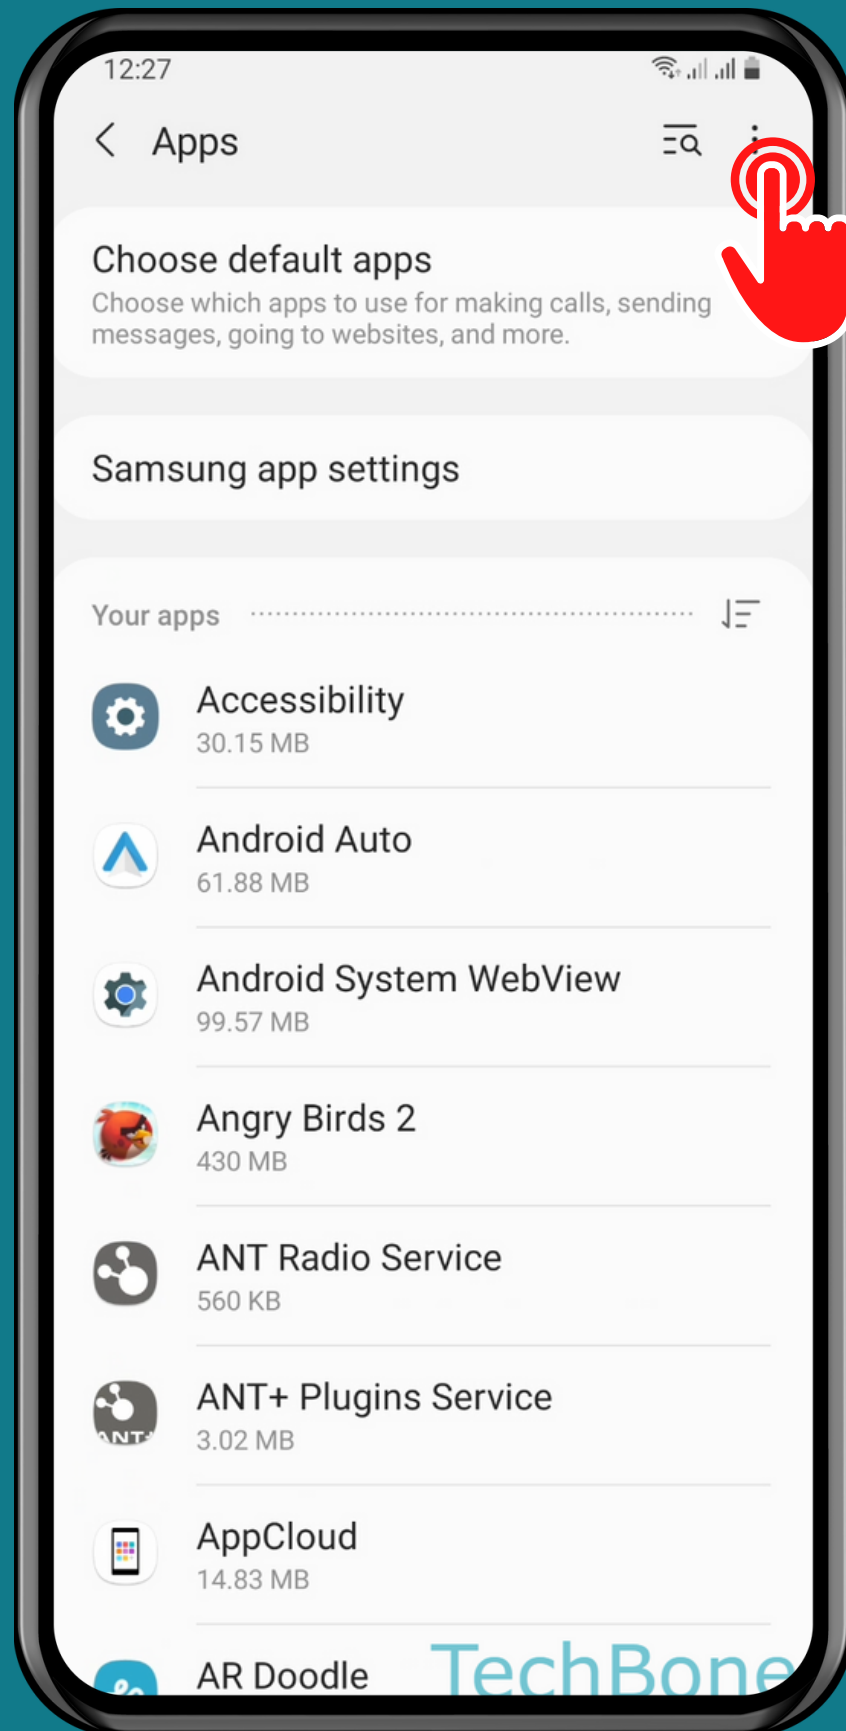

Open the Menu

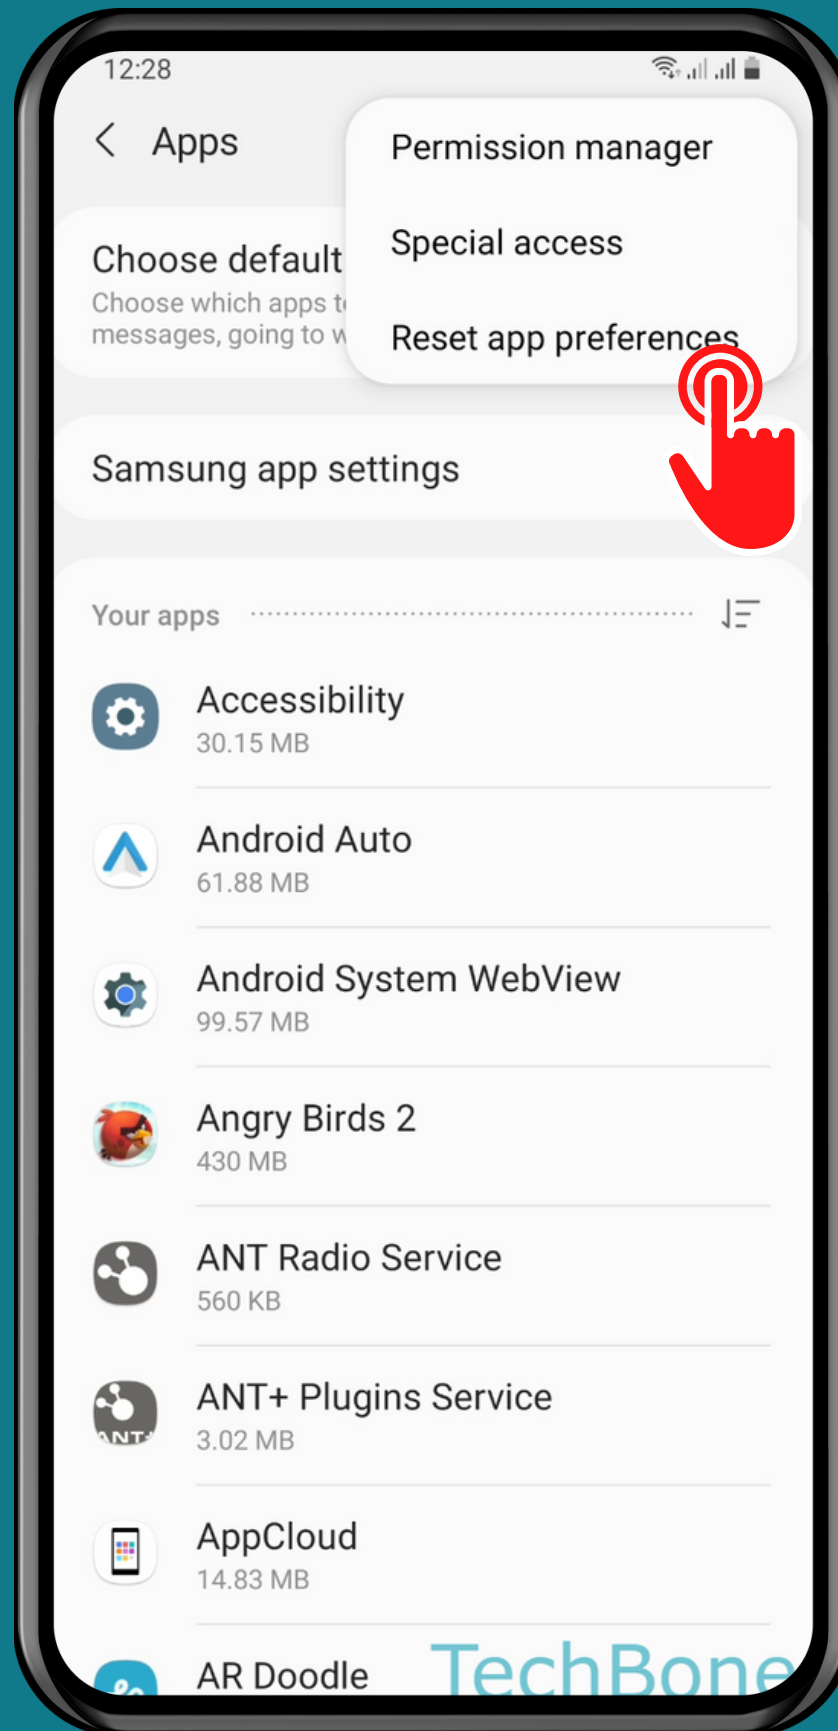

Tap on Reset app preferences

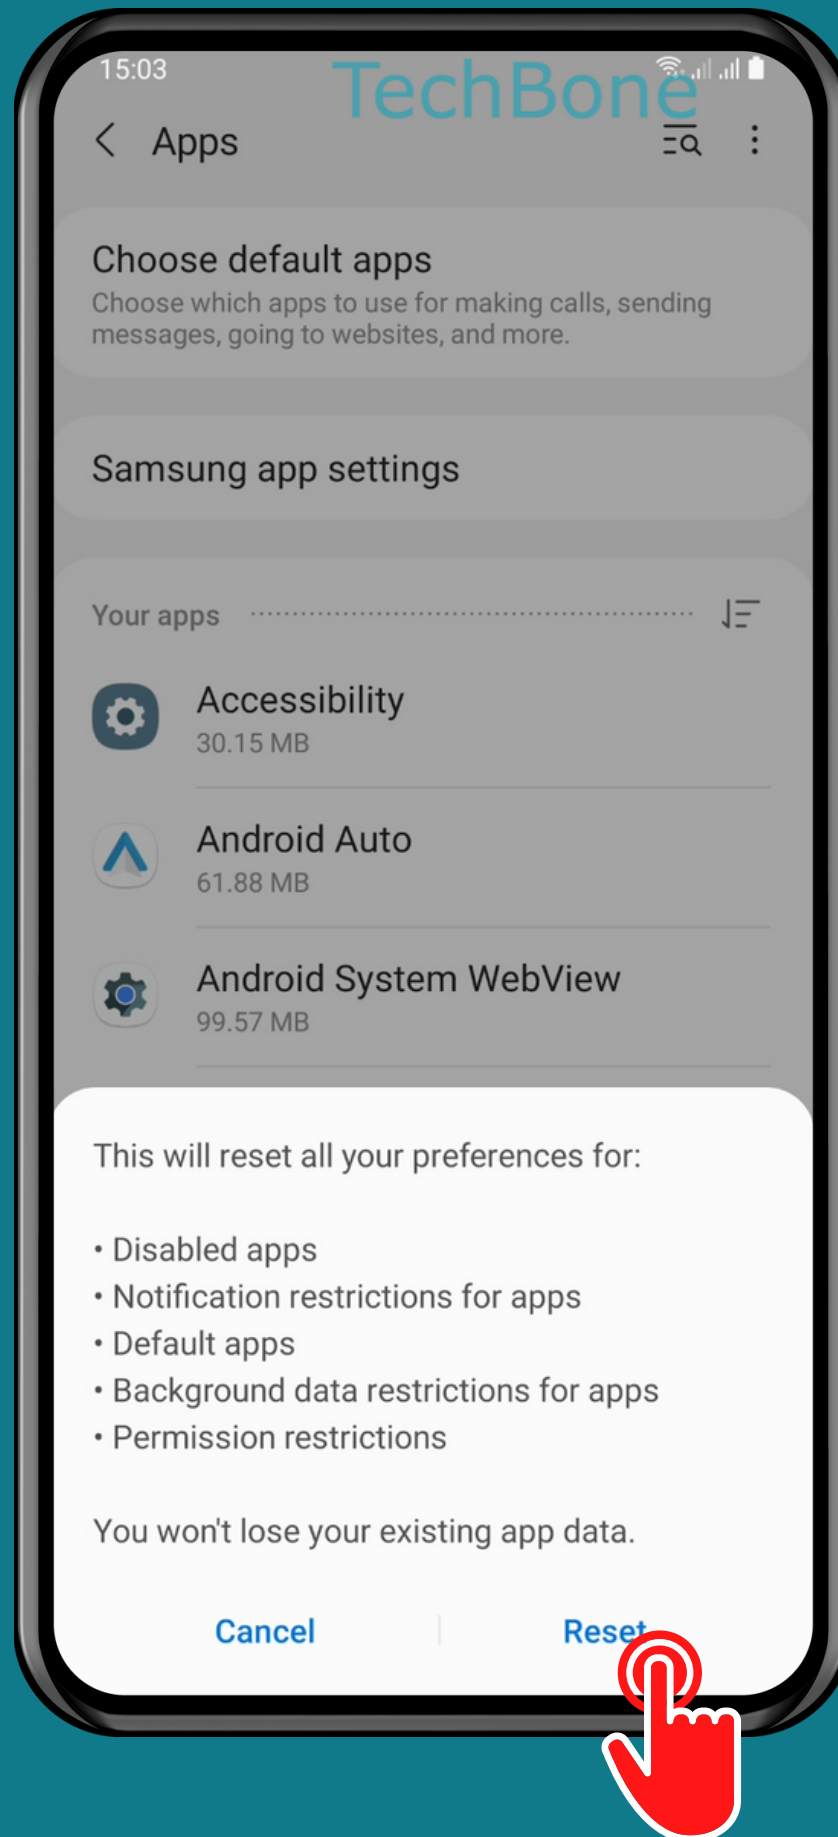

Tap on Reset

Done!